

*401*

 
 
*PPL-401-001*

*Cartridge /  
Plunger Positioner 70  
(62-402-2)*



Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001



401

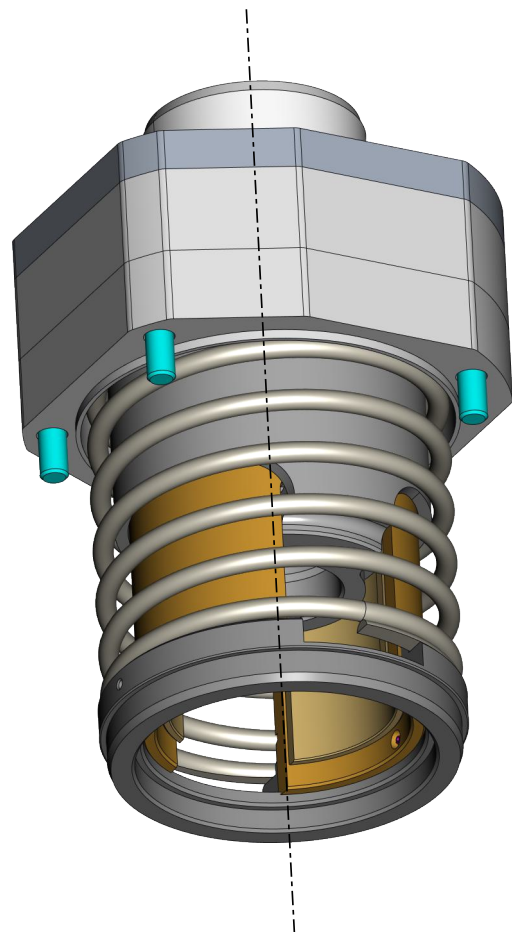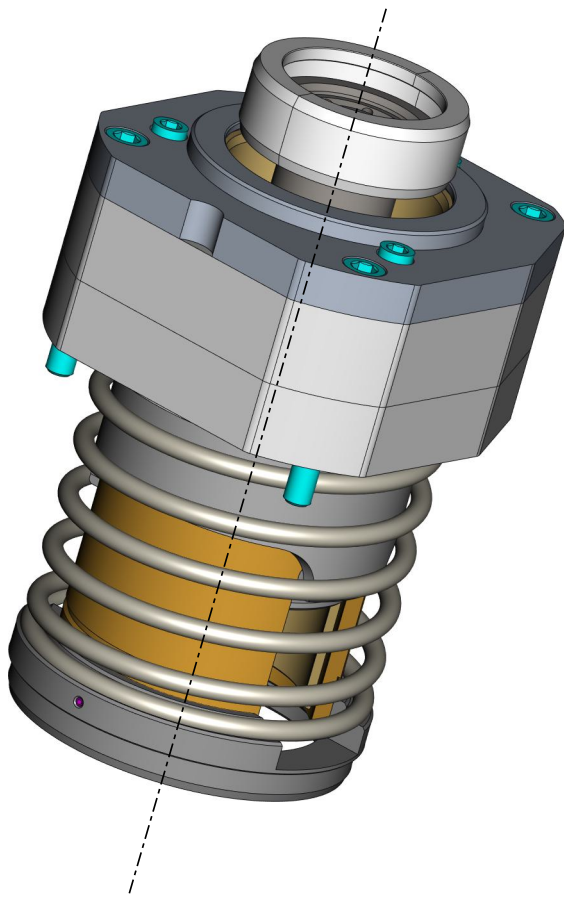

PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001

  401

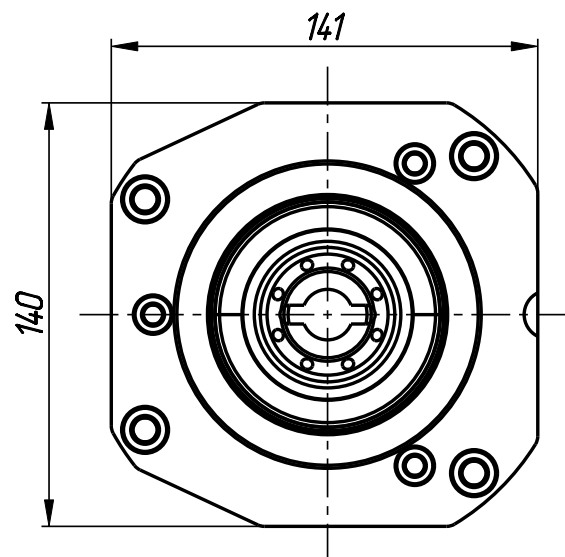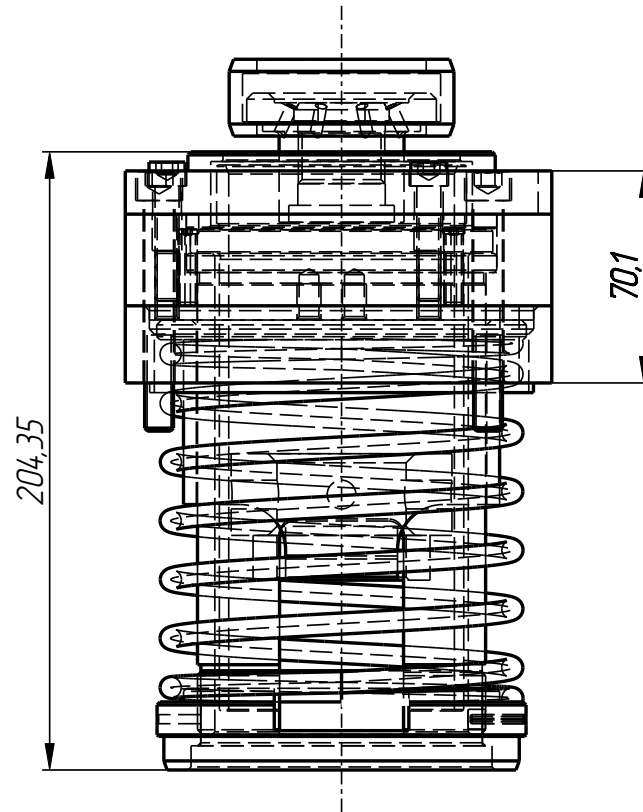

PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001

401

## PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)

Specification

N° pos.	Code	Name	Qty
---------	------	------	-----

Parts:

1	PPL-401-001-001	Space plate	1
2	PPL-401-001-002	Bushing	1
3	PPL-401-001-003	Bushing	1
4	PPL-401-001-004	Cap	1
5	PPL-401-001-005	Sleeve	1
6	PPL-401-001-006	Spring retainer	1
7	PPL-401-001-007	Spring	1
8	PPL-401-001-008	Space plate	1
9	PPL-401-001-009	Remote ring	1
10	PPL-401-001-010	Split ring	2
11	PPL-401-001-011	Adapter	1

 
 
 
Standard parts:

12	Screw 1/4"-20X1" DIN 913	2
13	Screw UNC3/8"-16x3" DIN 912	4
14	Screw UNC5/16"-18x1 1/2" DIN 912	3
15	Spring pin $\phi$ 3x18 DIN 1481	1




PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001




401

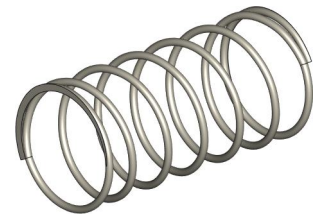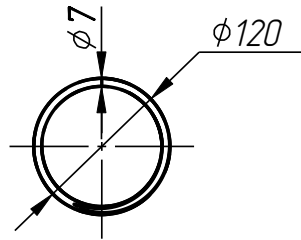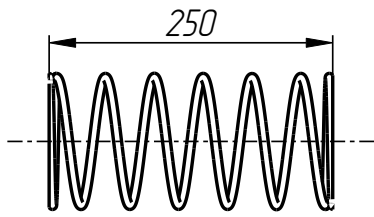

Spring  
PPL-401-001-001

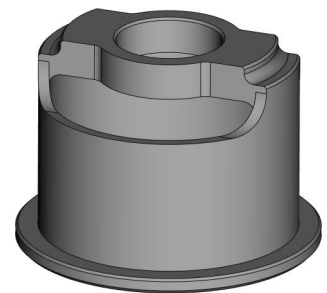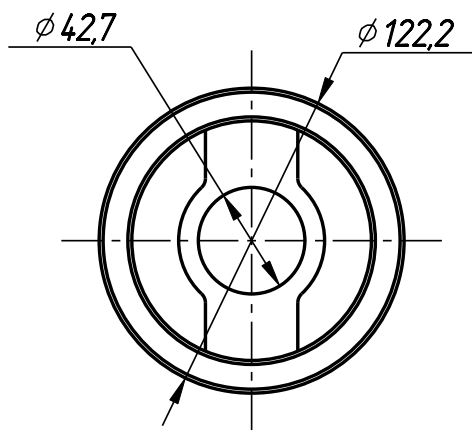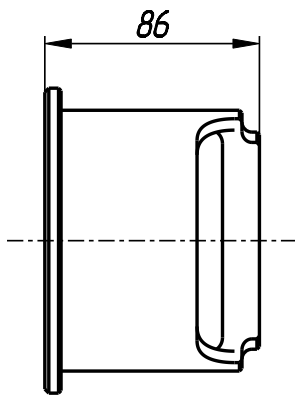   

Sleeve  
PPL-401-001-005

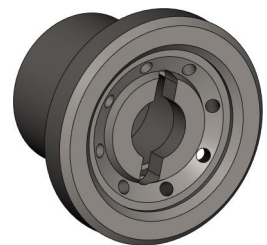 
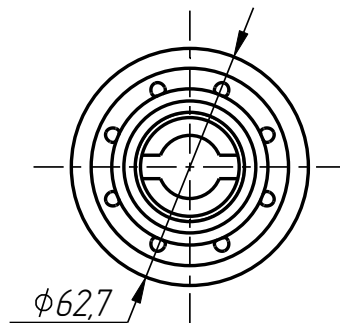 
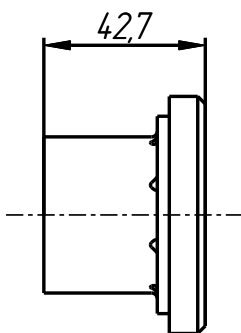 


Adapter  
PPL-401-001-011




PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001

  
 
401

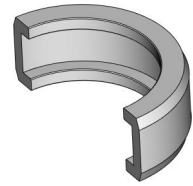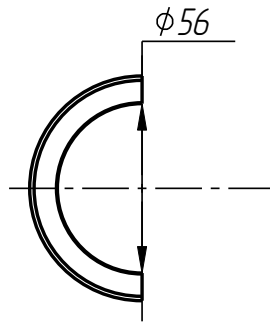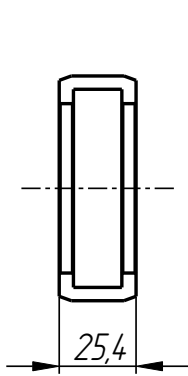

Split ring  
PPL-401-001-010

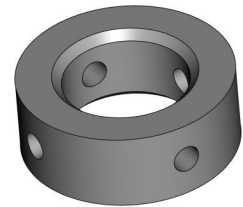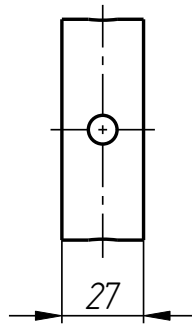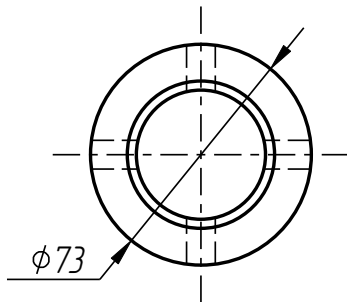   

Remote ring  
PPL-401-001-009


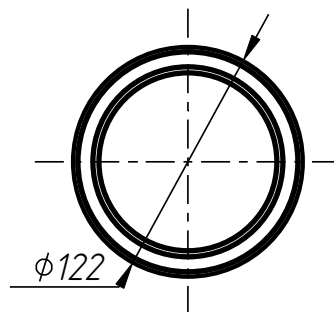 
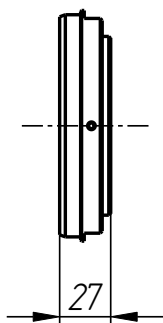 


Spring retainer  
PPL-401-001-006




PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001

 
 
 
401

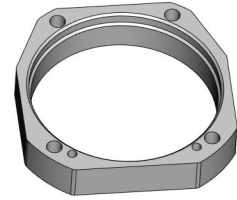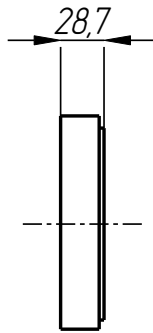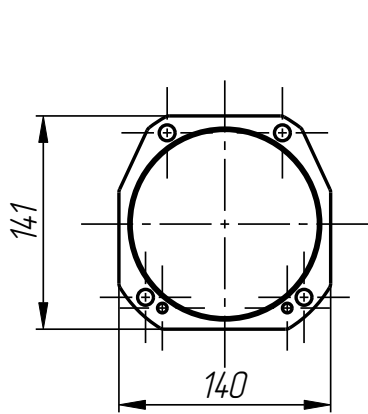

Space plate  
PPL-401-001-008

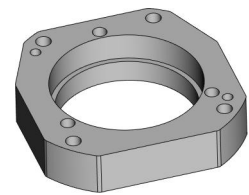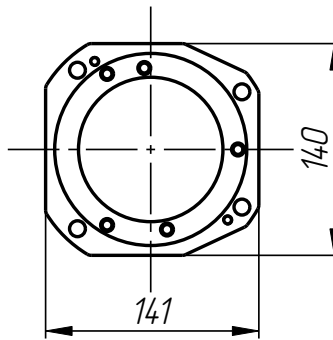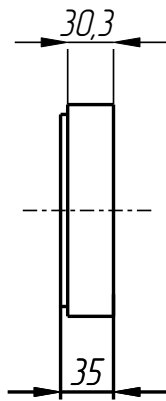   

Space plate  
PPL-401-001-001

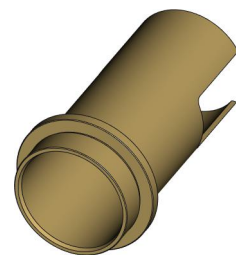 
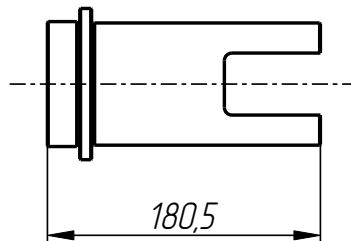 
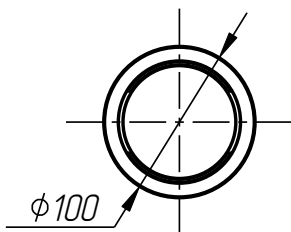 


Bushing  
PPL-401-001-003




PPL-401-001

Cartridge /  
Plunger Positioner 70  
(62-402-2)  
PPL-401-001

   401

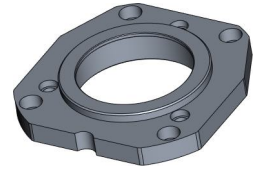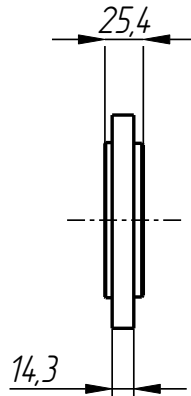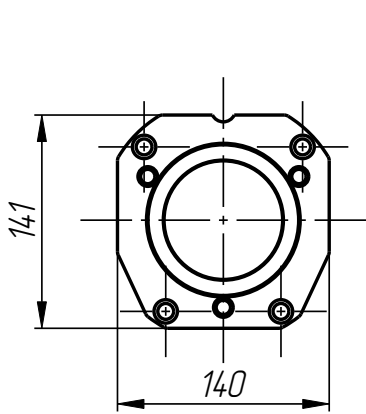

Cap  
PPL-401-001-004

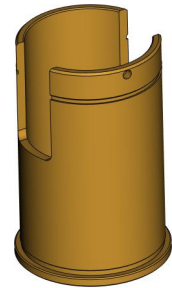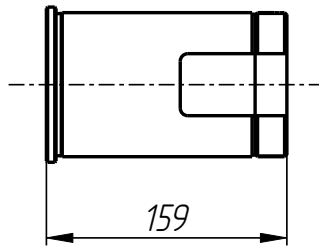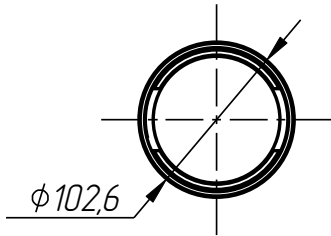   

Bushing  
PPL-401-001-002

PPL-401-001