 
 
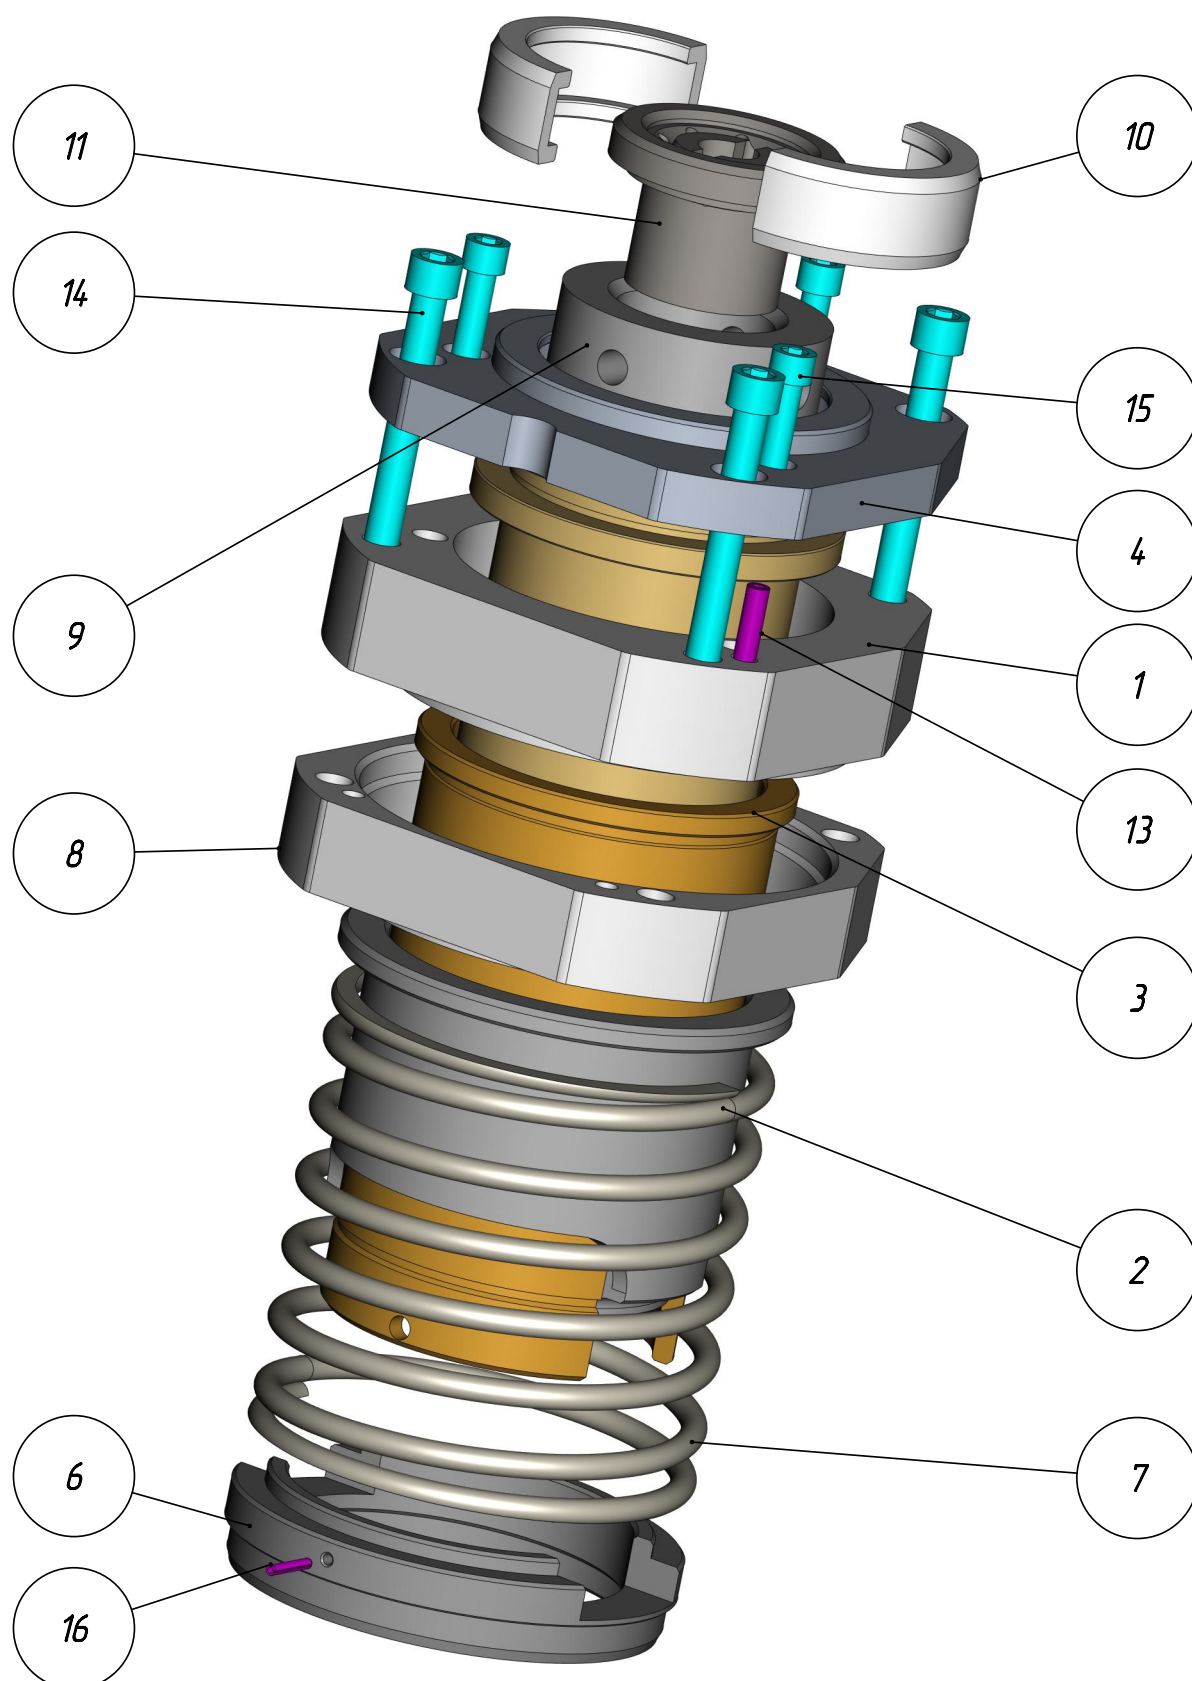 


401

PPL-401-001

 
*Cartridge /
Plunger Positioner 83
(62-402-2)*

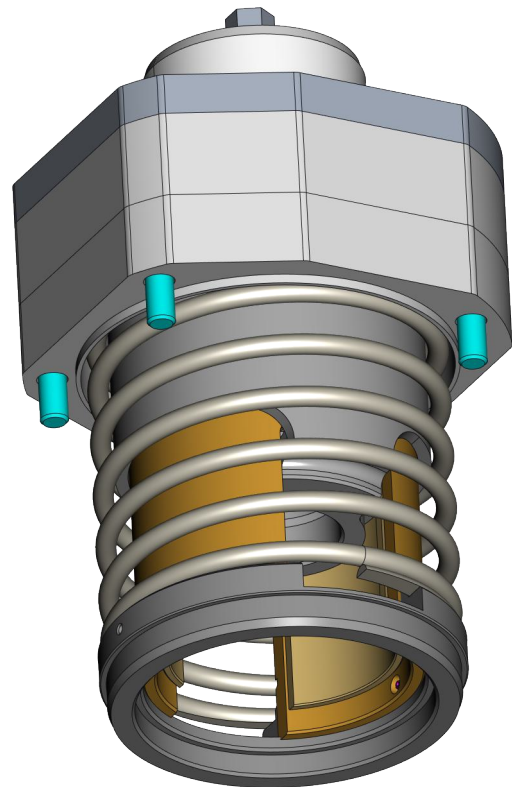

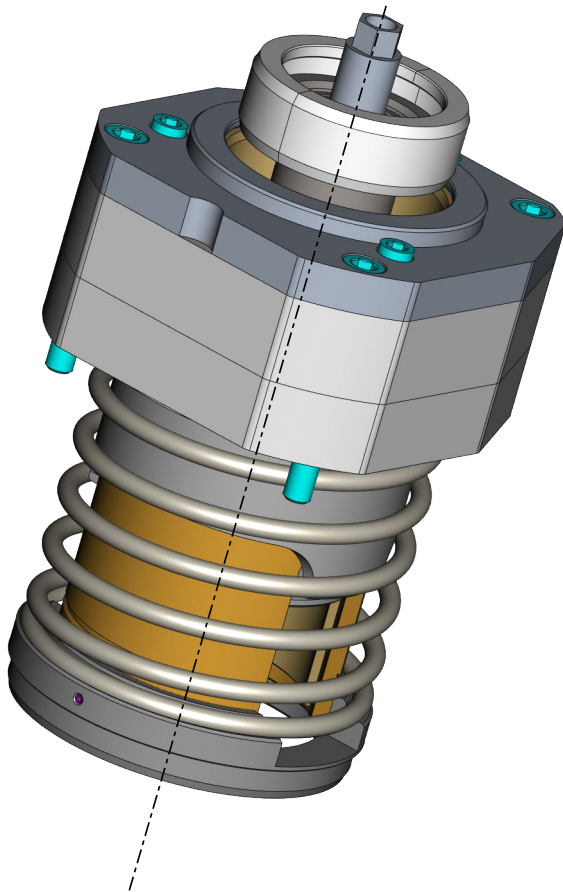

Cartridge /
Plunger Positioner 83
(62-402-2)
PPL-401-001

401

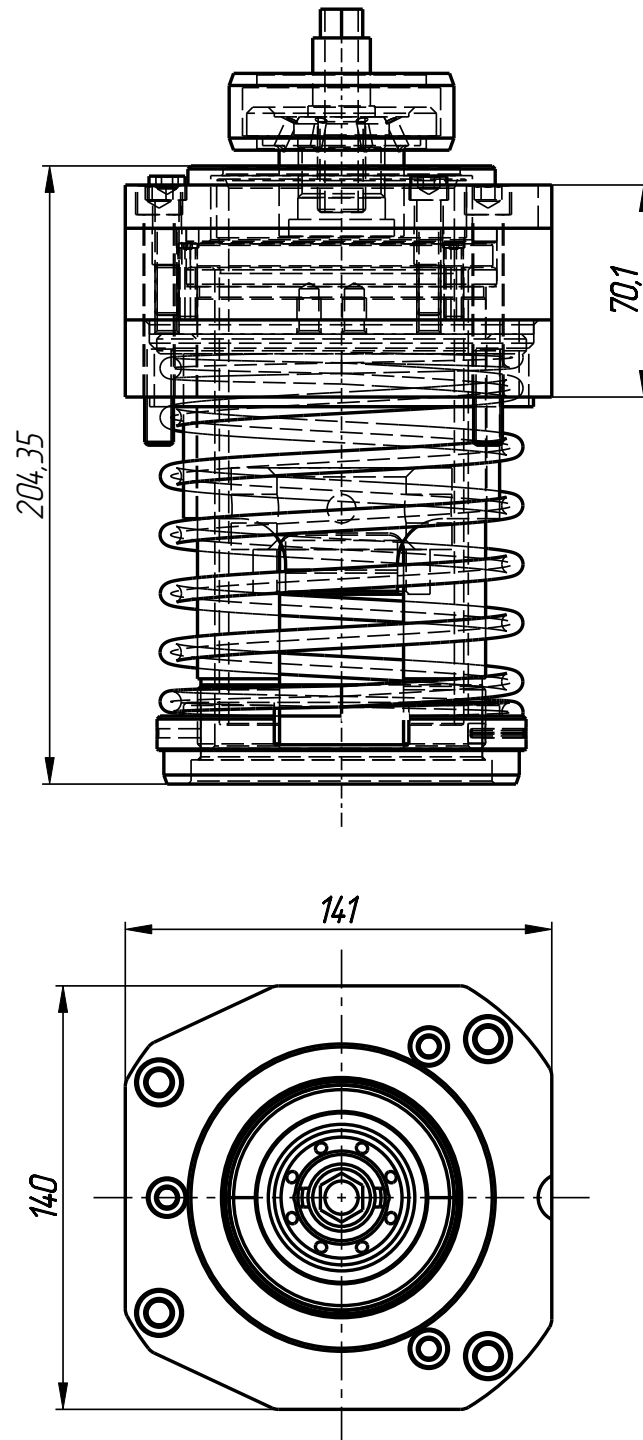

PPL-401-001

Cartridge /
Plunger Positioner 83
(62-402-2)
PPL-401-001

401

PPL-401-001

Cartridge /
Plunger Positioner 83
(62-402-2)

Specification

Nº pos.	Code	Name	Qty
---------	------	------	-----




Parts:

1	PPL-401-001-001	Space plate	1
2	PPL-401-001-002	Bushing	1
3	PPL-401-001-003	Bushing	1
4	PPL-401-001-004	Cap	1
5	PPL-401-001-005	Sleeve	1
6	PPL-401-001-006	Spring retainer	1
7	PPL-401-001-007	Spring	1
8	PPL-401-001-008	Space plate	1
9	PPL-401-001-009	Remote ring	1
10	PPL-401-001-010	Split ring	2
11	PPL-401-001-011	Adapter	1
12	PPL-401-017-006	Locking stud	1




Standard parts:

13	Screw 1/4"-20X1" DIN 913	2
14	Screw UNC3/8"-16x3" DIN 912	4
15	Screw UNC5/16"-18x1 1/2" DIN 912	3
16	Spring pin ϕ 3x18 DIN 1481	1

 
 
 
PPL-401-001

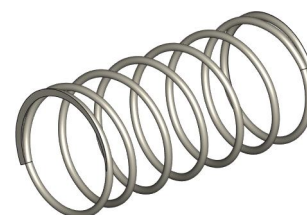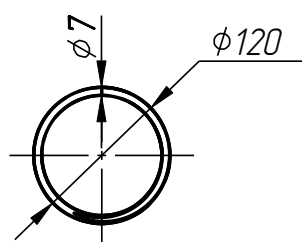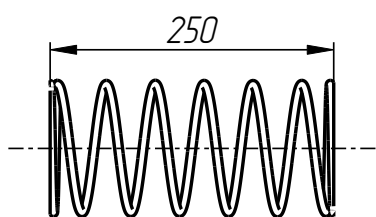




Spring
PPL-401-001-001

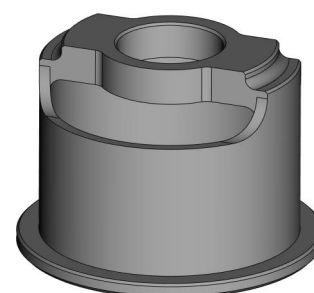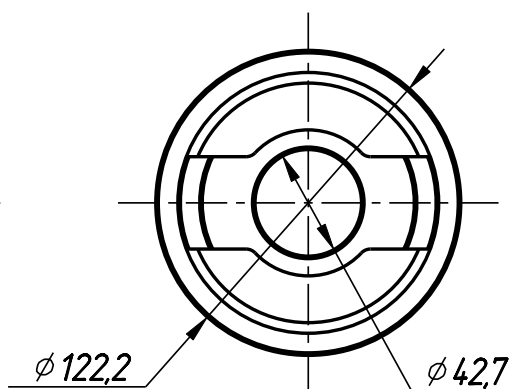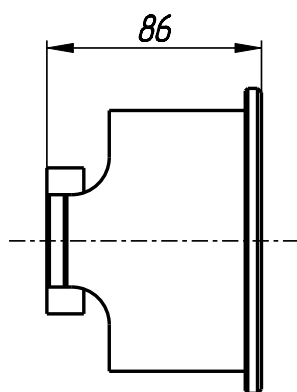   




Стакан
PPL-401-001-005

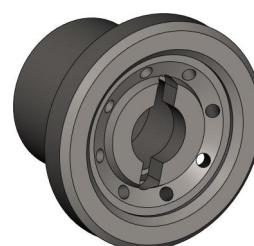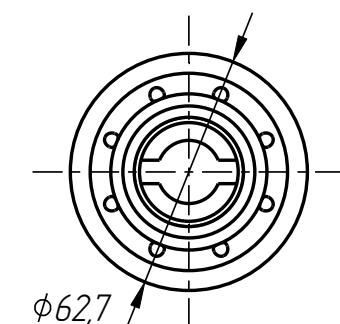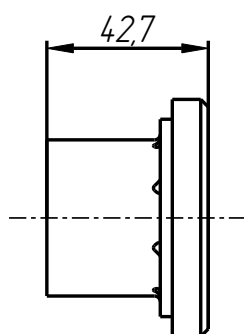   



Adapter
PPL-401-001-011

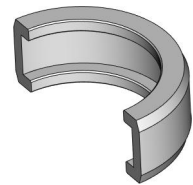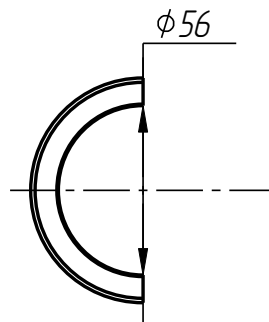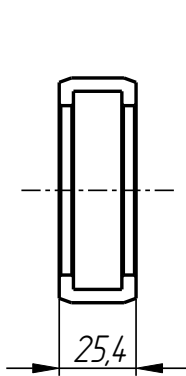   

Split ring
PPL-401-001-010

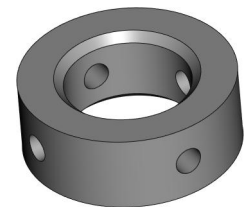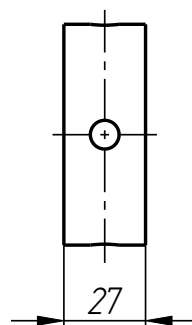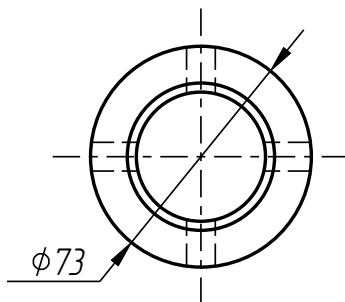   




Remote ring
PPL-401-001-009

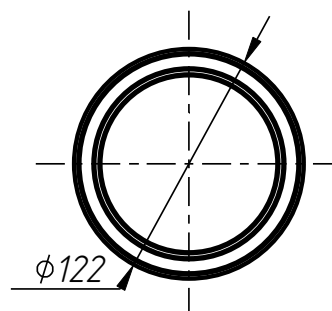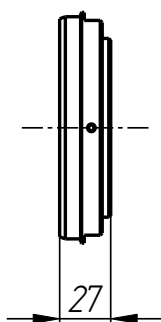  




Spring retainer
PPL-401-001-006

Cartridge /
Plunger Positioner 83
(62-402-2)
PPL-401-001

 
 
 
401

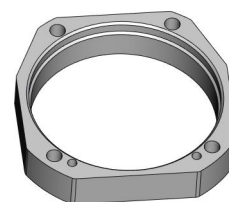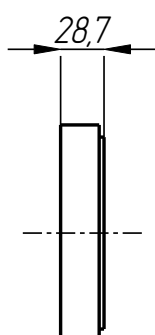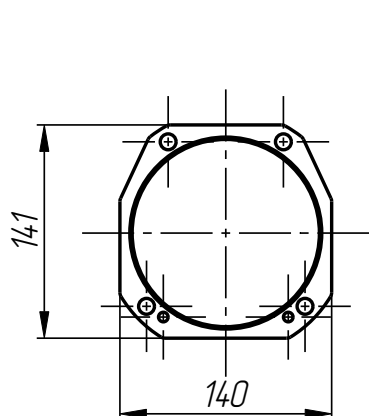

Space plate
PPL-401-001-008

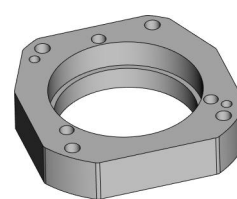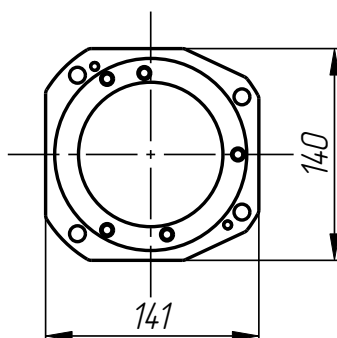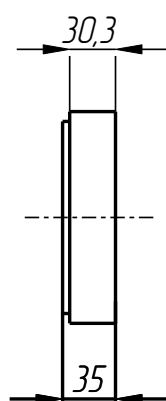   

Space plate
PPL-401-001-001

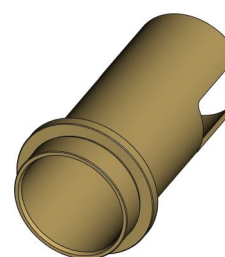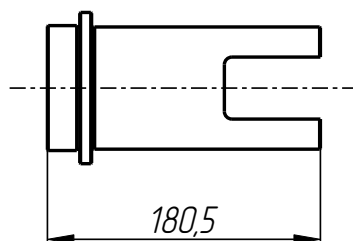  
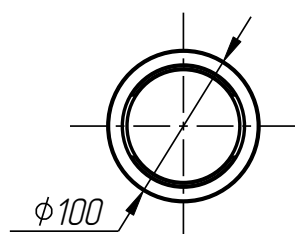 


Bushing
PPL-401-001-003



PPL-401-001

Cartridge /
Plunger Positioner 83
(62-402-2)
PPL-401-001

  401

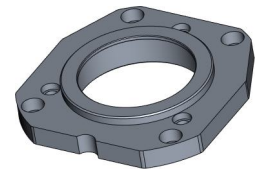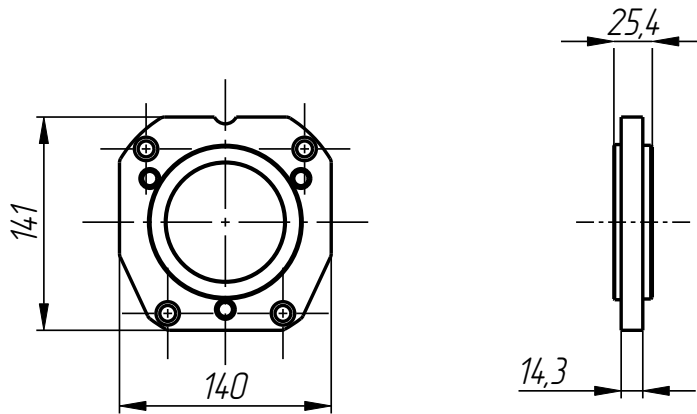

Cap
PPL-401-001-004

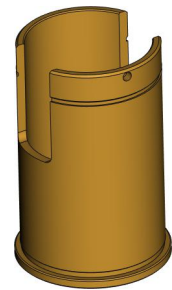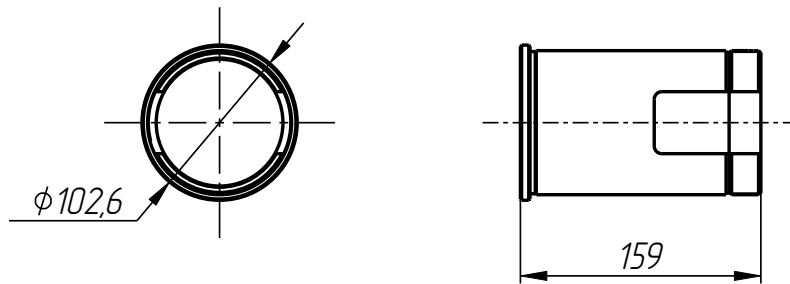  

Bushing
PPL-401-001-002

PPL-401-001