



401

*Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)*

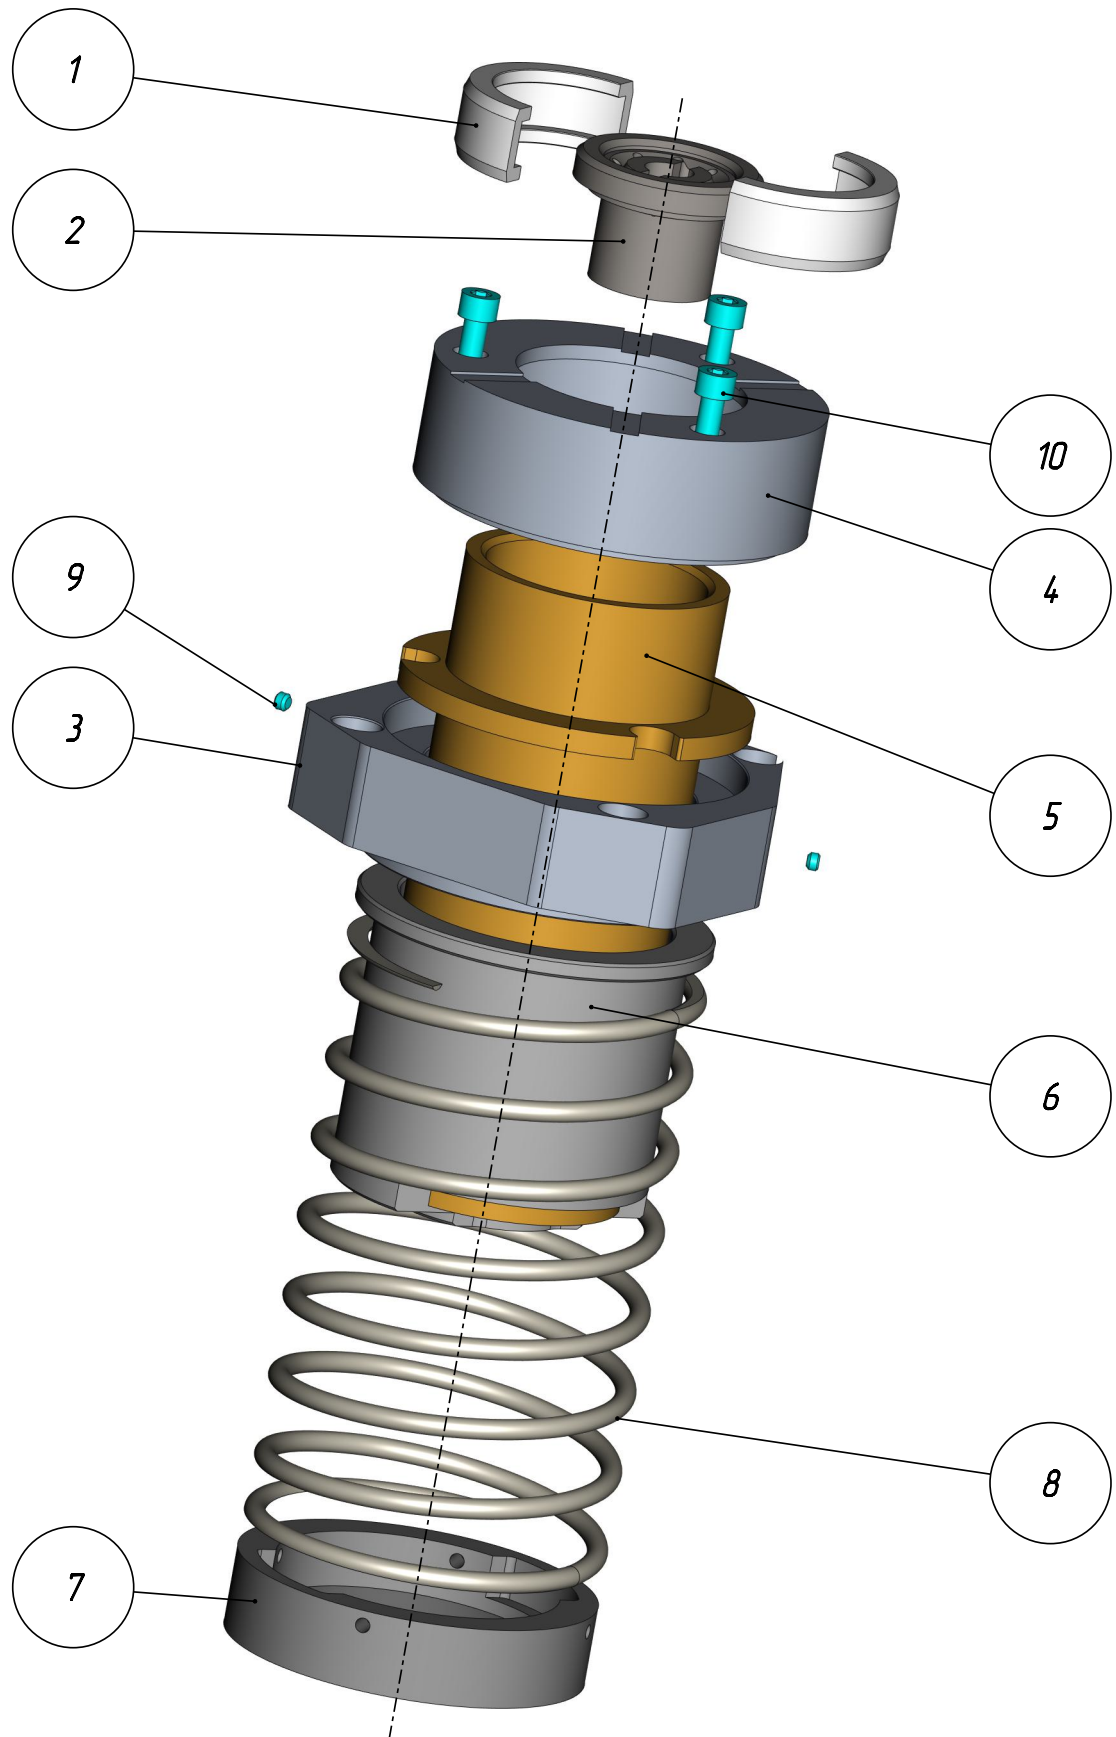

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPI-401-002


401

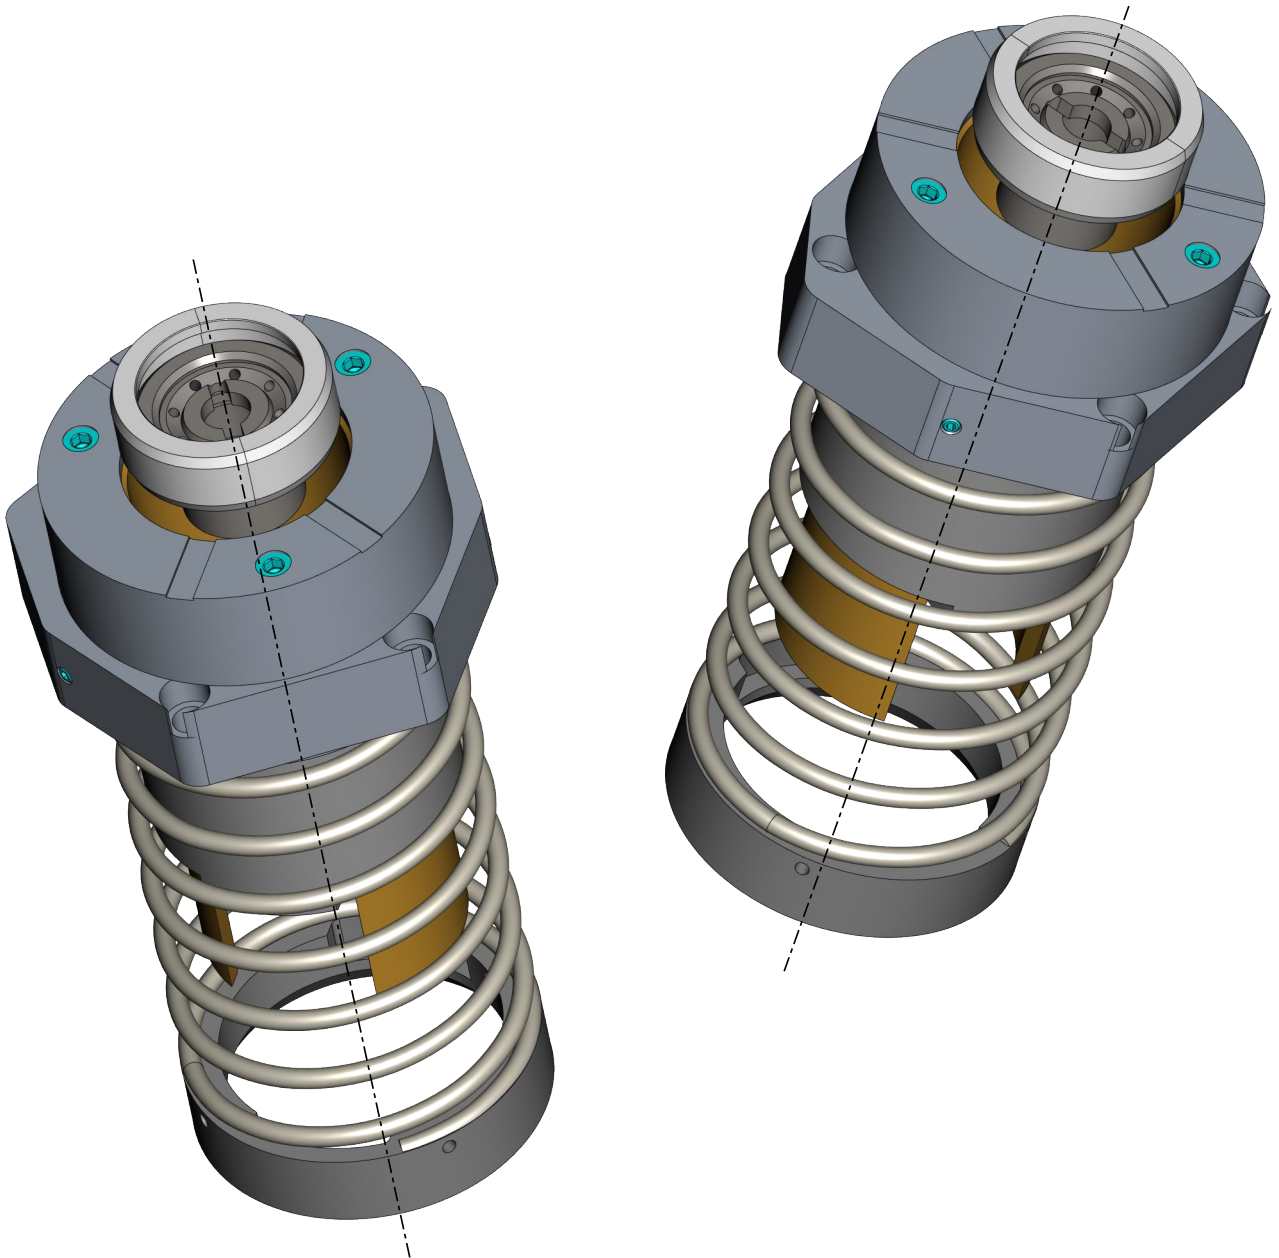

PPI-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPl-401-002

401

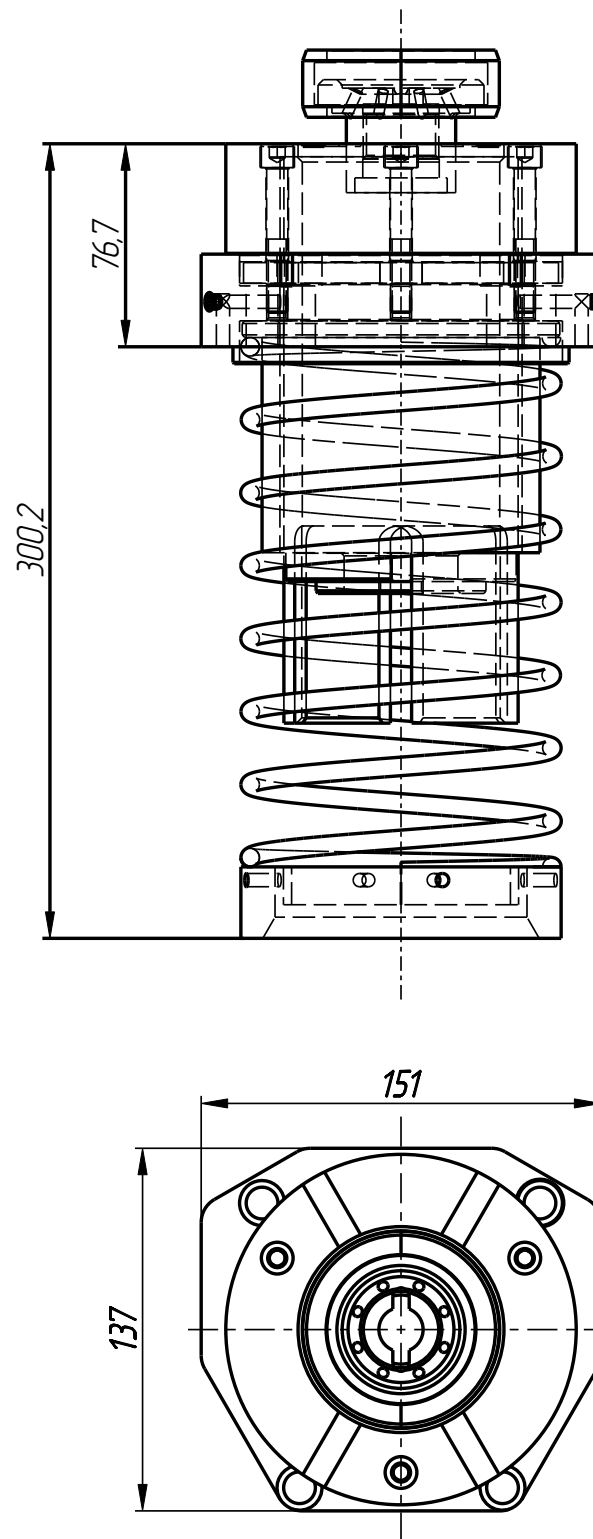

PPl-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPl-401-002

401

PPl-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)

Specification

Nº pos.	Code	Name	Qty
---------	------	------	-----

Parts:

1	PPl-401-001-010	Split ring	2
2	PPl-401-001-011	Adapter	1
3	PPl-401-002-002	Cap	1
4	PPl-401-002-003	Upper ring	1
5	PPl-401-002-004	Guide bushing	1
6	PPl-401-002-005	Sleeve	1
7	PPl-401-017-009	Spring retainer	1
8	PPl-401-017-011	Spring	1




Standard parts:

9	Screw M6x4 GOST 11074-93	2
10	Screw M8x55 DIN 912	3




PPl-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPl-401-002




401

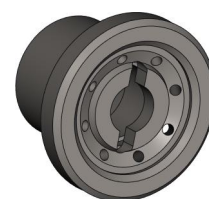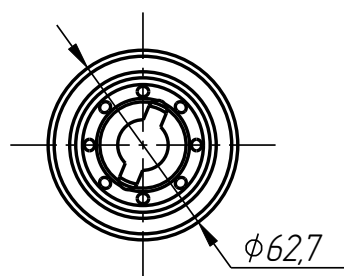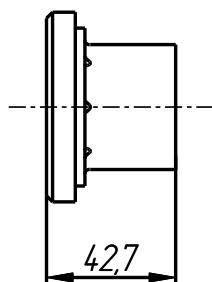

Adapter
PPl-401-001-011

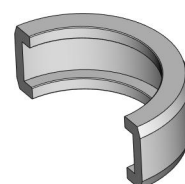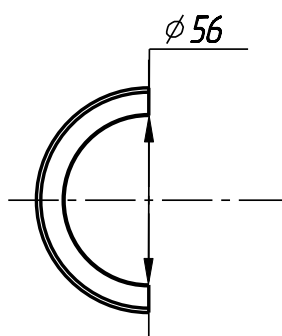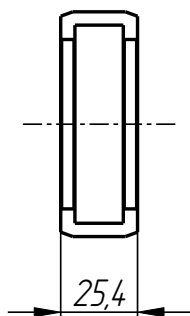

Split ring
PPl-401-001-010

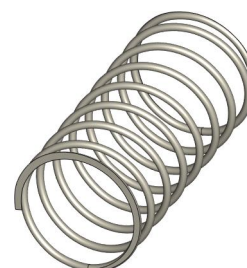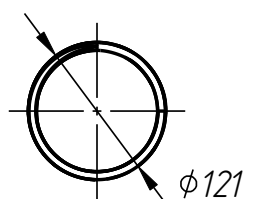
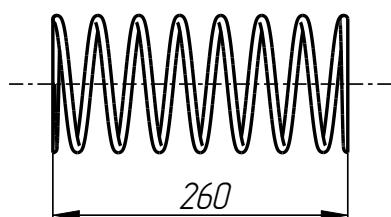


Spring
PPl-401-017-011




PPl-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPL-401-002




401

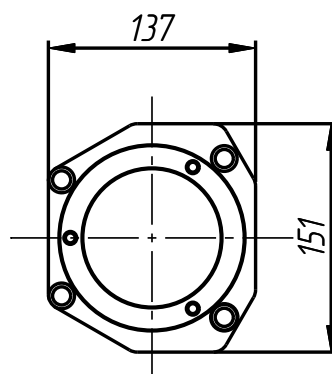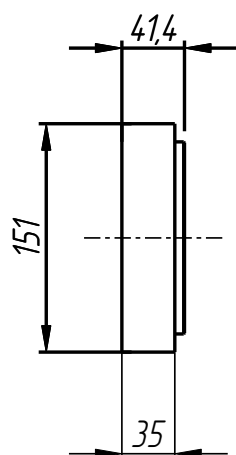

Cap
PPL-401-002-002

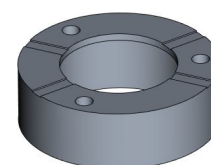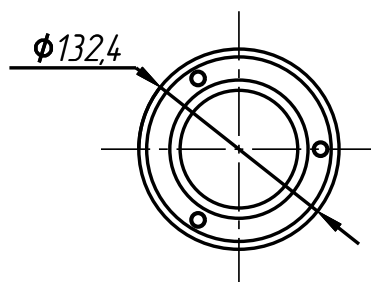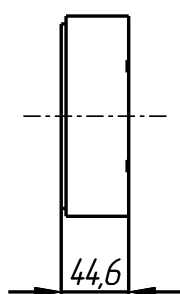

Upper ring
PPL-401-002-003

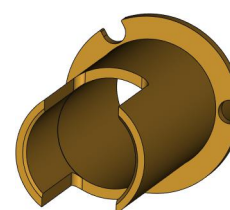
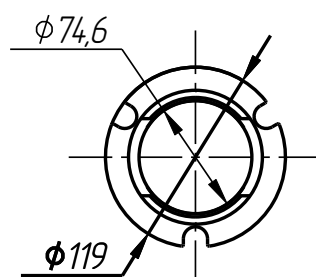
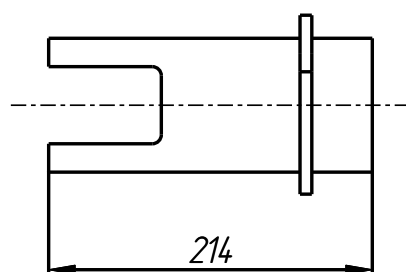


Guide bushing
PPL-401-002-004



PPL-401-002

Cartridge /
Plunger Positioner 83
(P-B962-402-GR6L)
PPI-401-002

401

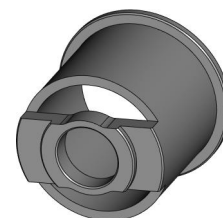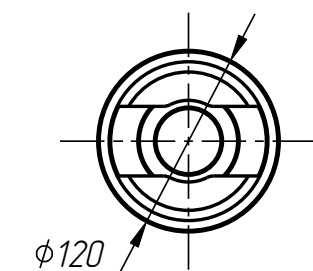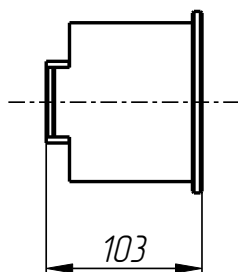

Sleeve
PPI-401-002-005

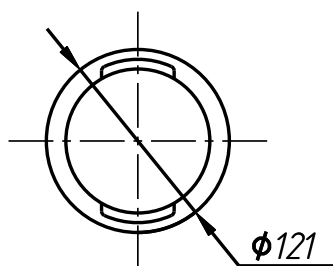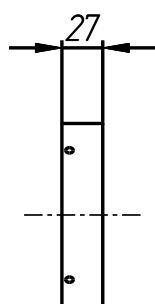

Spring retainer
PPI-401-017-009

PPI-401-002