


401

PPL-401-007

*Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)*

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007



401

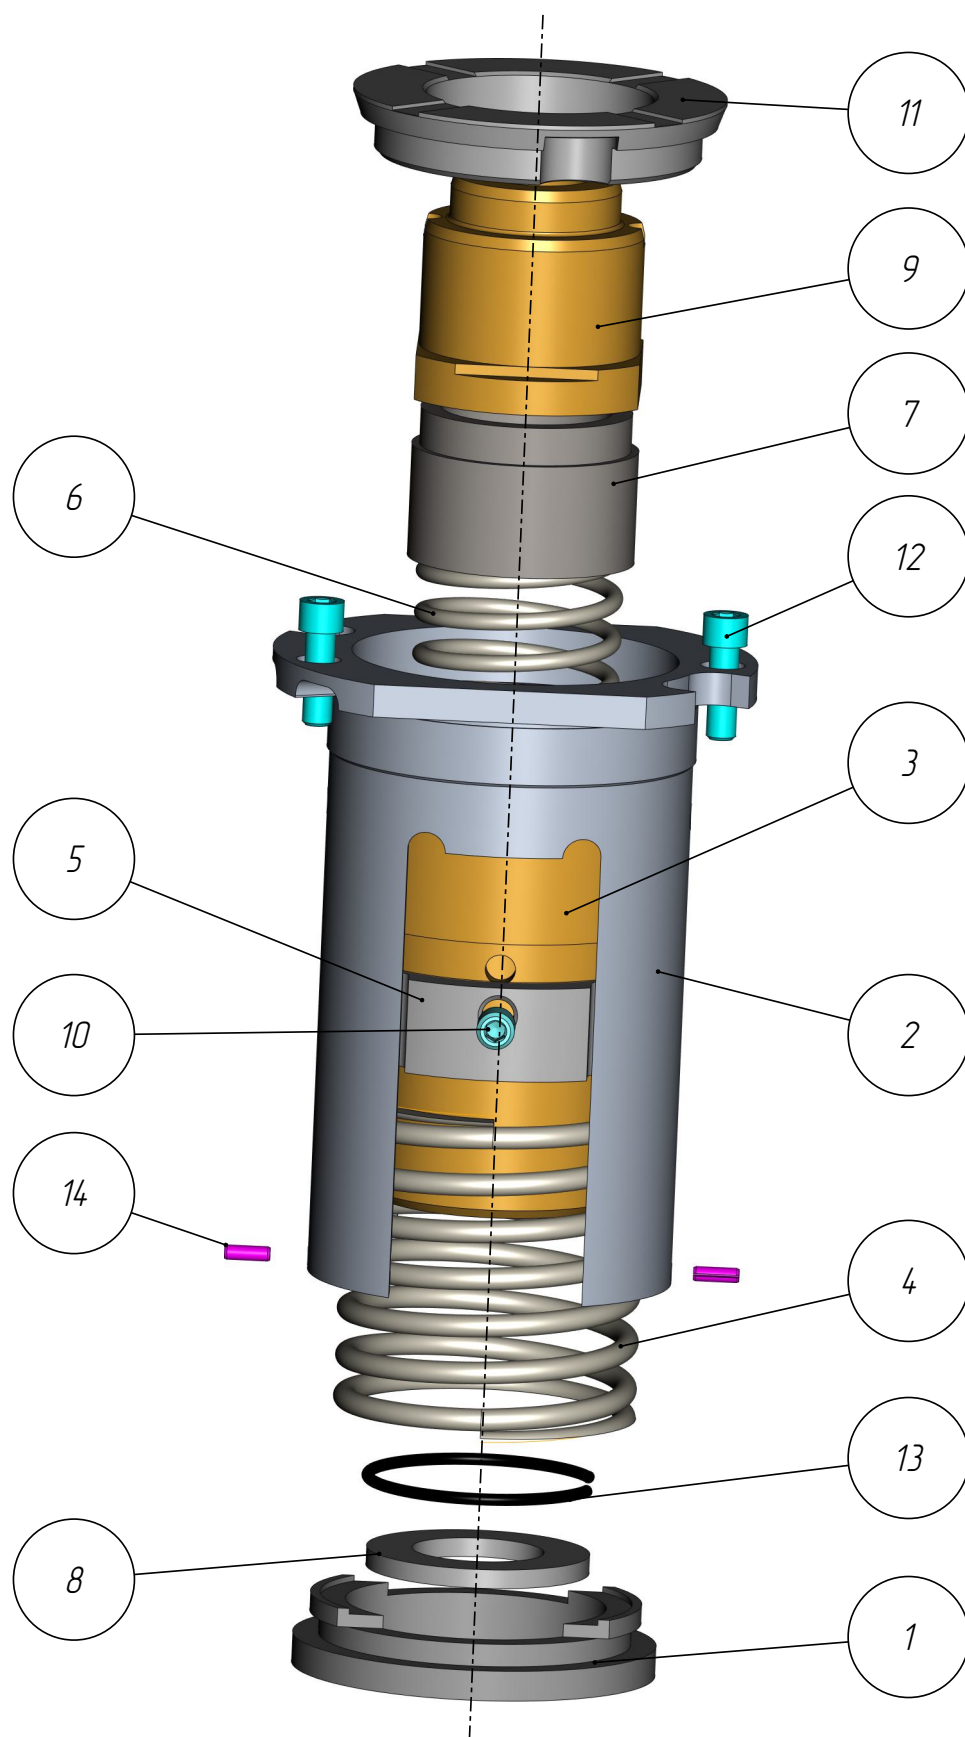

PPL-401-007

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007

401

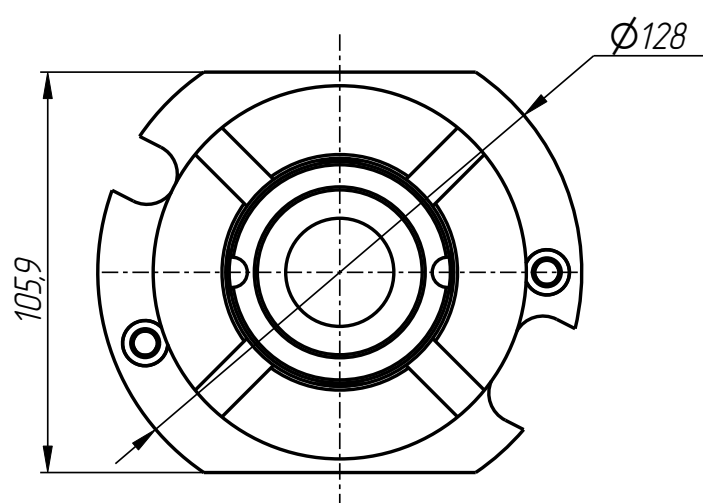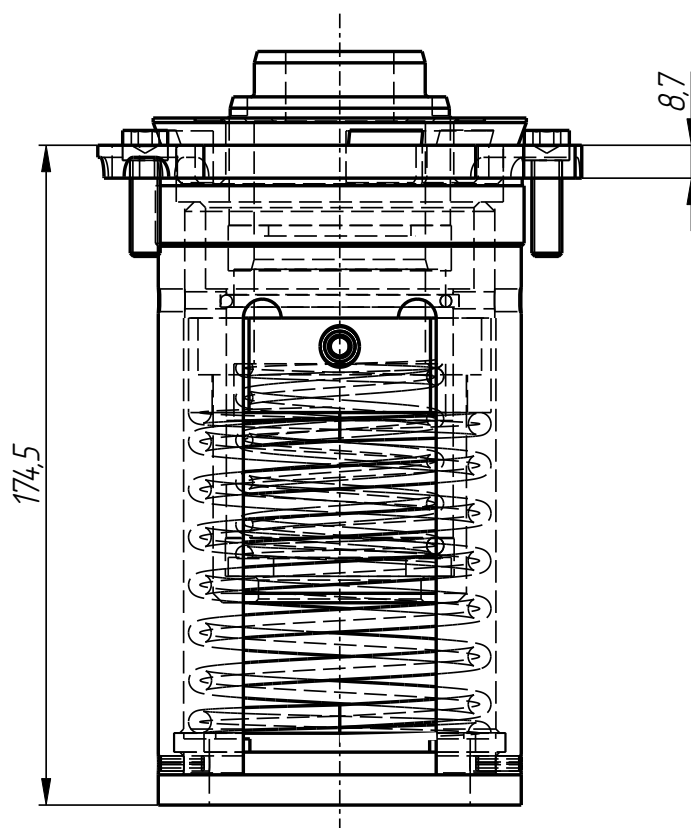

PPL-401-007

PPL-401-007
Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
Specification

<i>Nº pos.</i>	<i>Code</i>	<i>Name</i>	<i>Qty</i>
----------------	-------------	-------------	------------

Parts:


1	PPL-401-006-004	Spring retainer	1
2	PPL-401-007-001	Main body	1
3	PPL-401-007-002	Bushing	1
4	PPL-401-007-003	Spring	1
5	PPL-401-007-005	Seat	1
6	PPL-401-007-006	Spring	1
7	PPL-401-007-007	Sleeve	1
8	PPL-401-007-008	Ring	1
9	PPL-401-007-009	Bushing	1
10	PPL-401-007-010	Screw	2
11	PPL-401-007-011	Ring	1

Standard parts:


12	Screw UNC5/16"-18x1" DIN 912	2
13	Sprenging B 60 DIN 7993	1
14	Spring pin ϕ 4x12 DIN 1481	2

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007



401

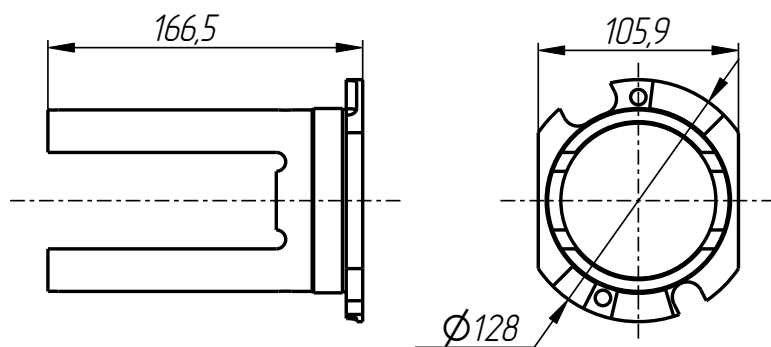

Main body
PPL-401-007-001

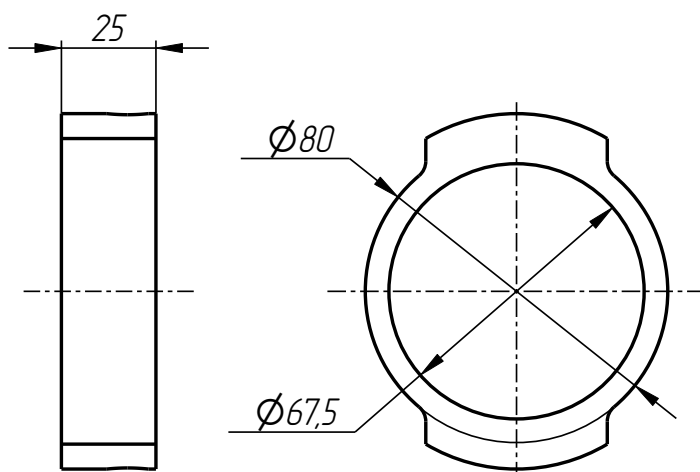

Seat
PPL-401-007-005


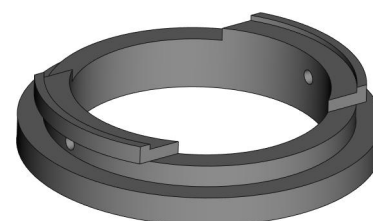
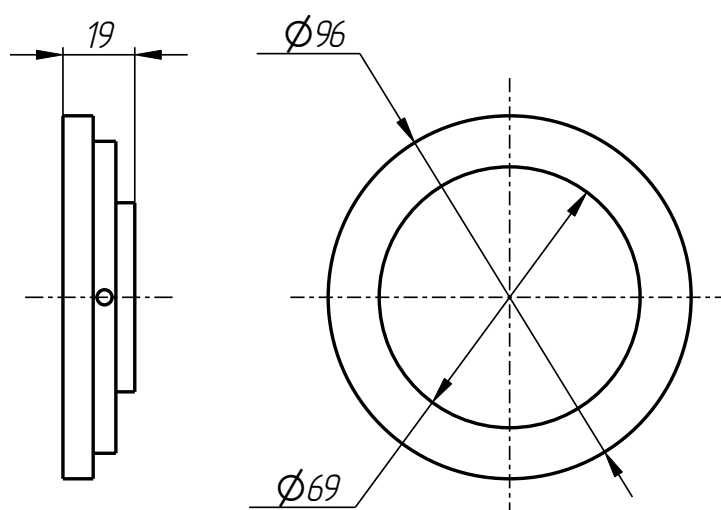


Spring retainer
PPL-401-006-004




PPL-401-007

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007




401

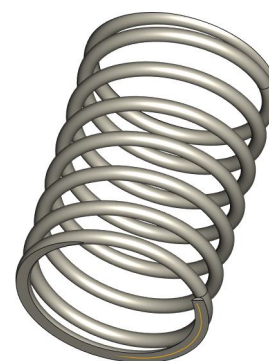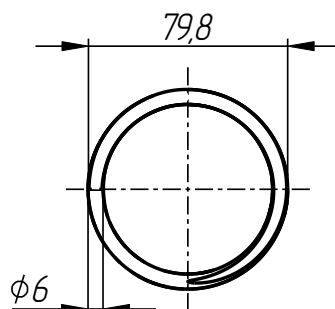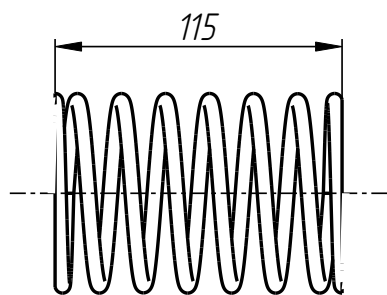

Spring
PPL-401-007-003

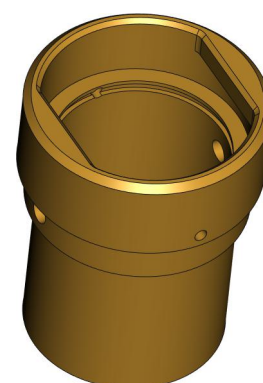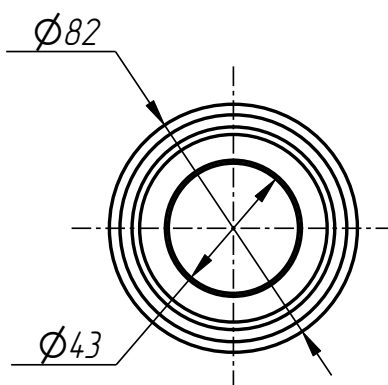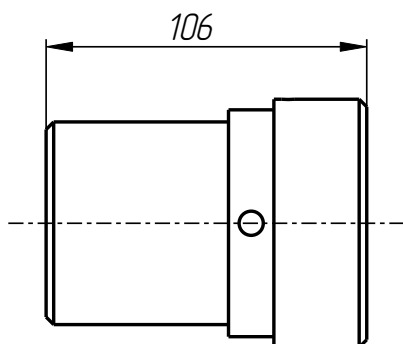

Bushing
PPL-401-007-002

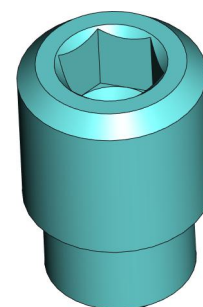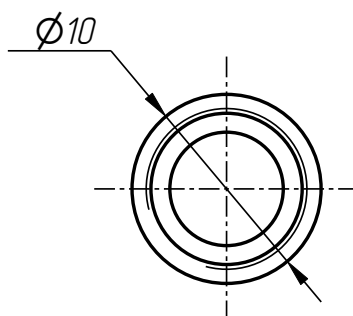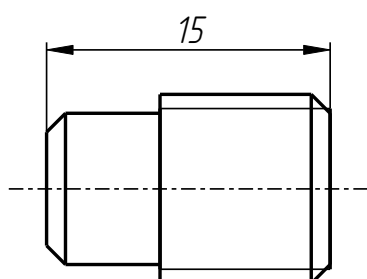


Screw
PPL-401-007-010



PPL-401-007

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007



401

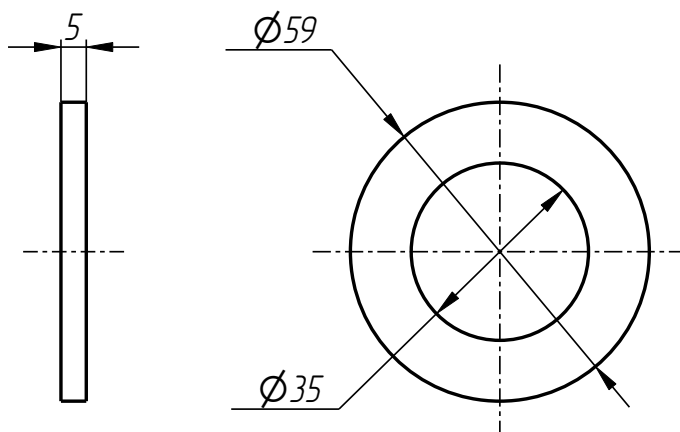

Ring
PPL-401-007-008

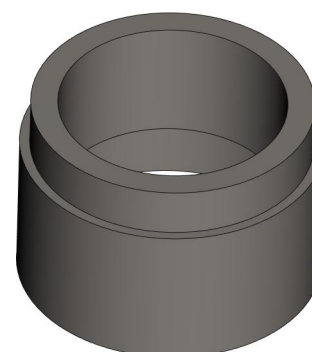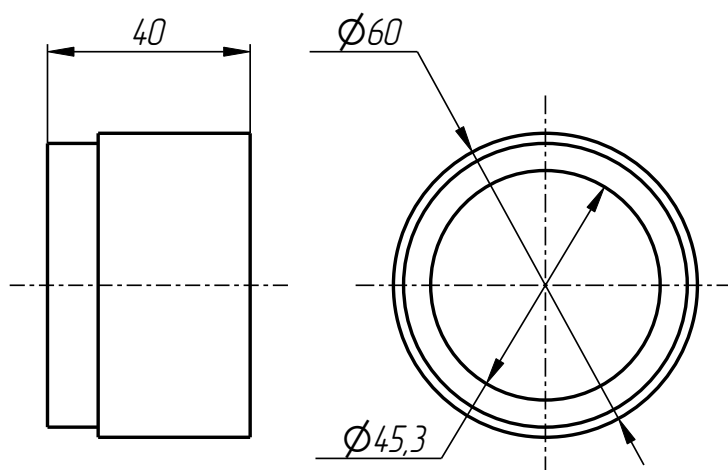

Sleeve
PPL-401-007-007

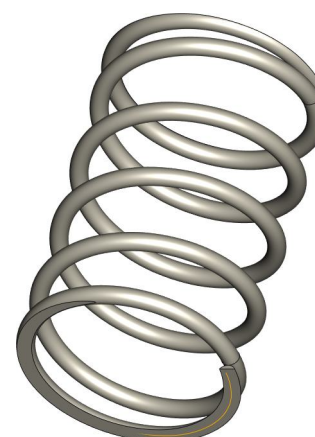
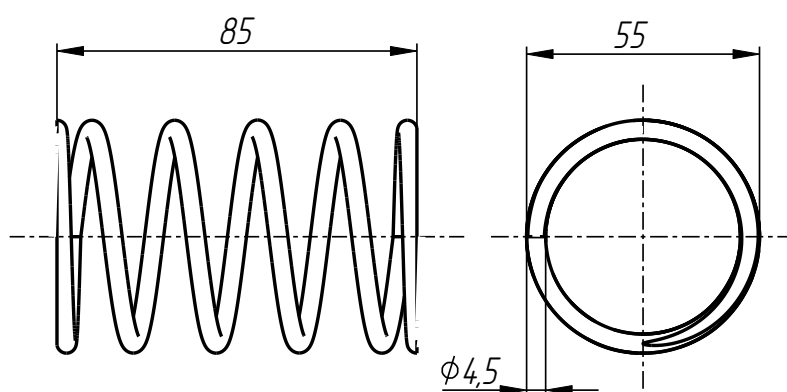


Spring
PPL-401-007-006



PPL-401-007

Cartridge /
Plunger Positioner
(GPSM-MRN-401-70_000_00BB-VS)
PPL-401-007

401

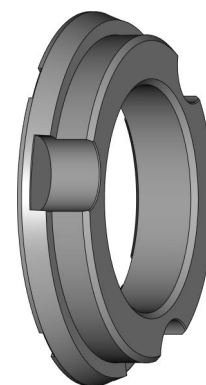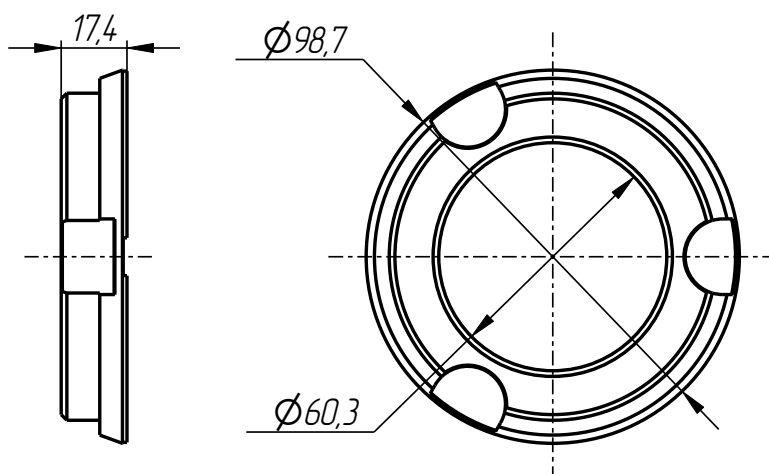

Ring
PPL-401-007-011

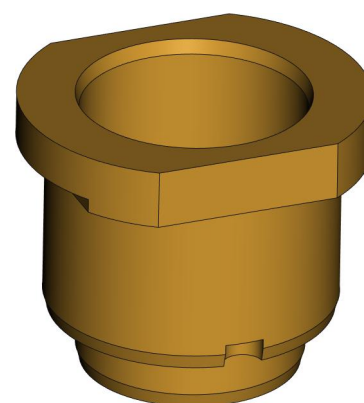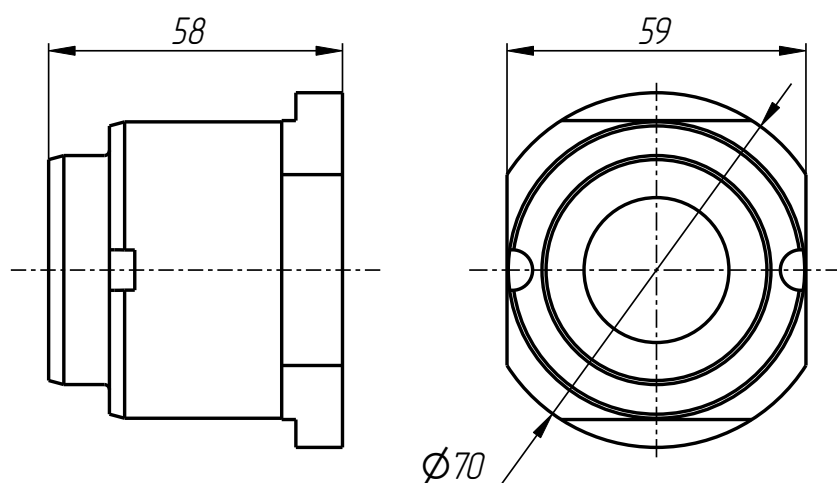

Bushing
PPL-401-007-009

PPL-401-007