


401

*Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)*



Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
PPL-401-014

401

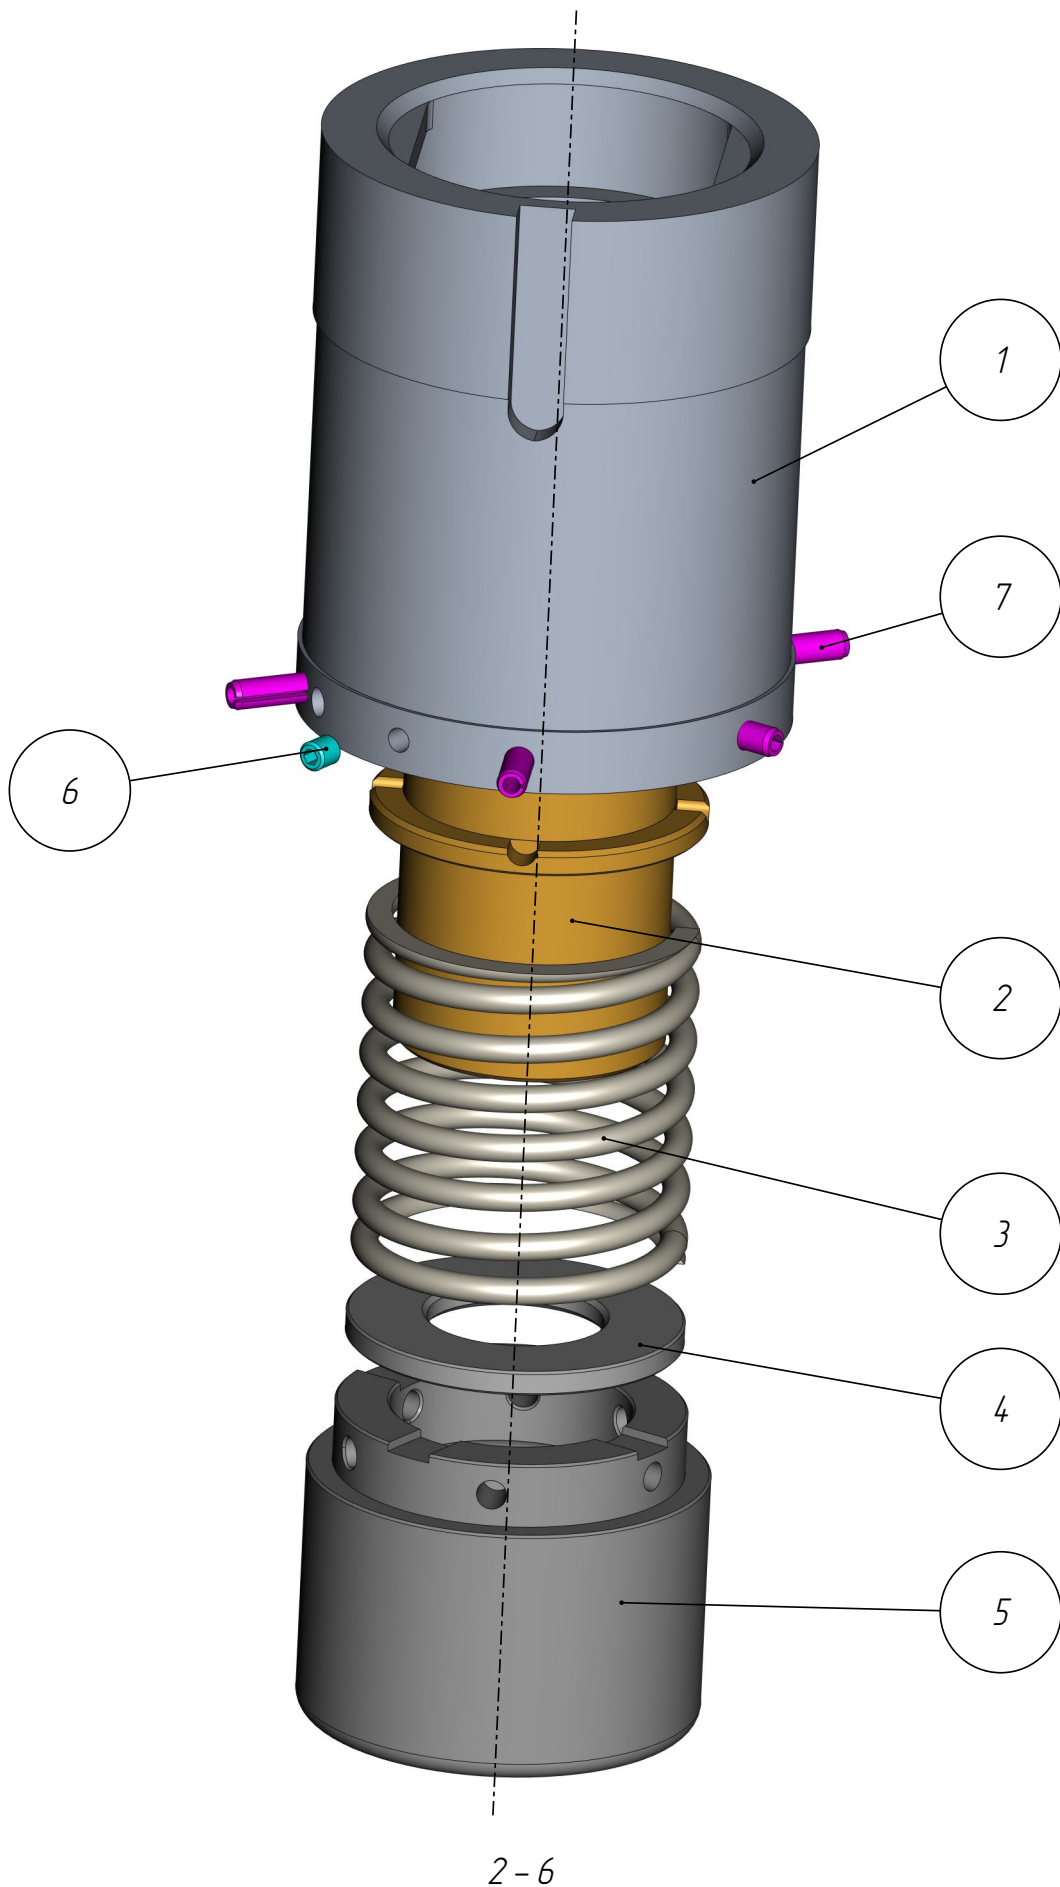

Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
PPL-401-014

401

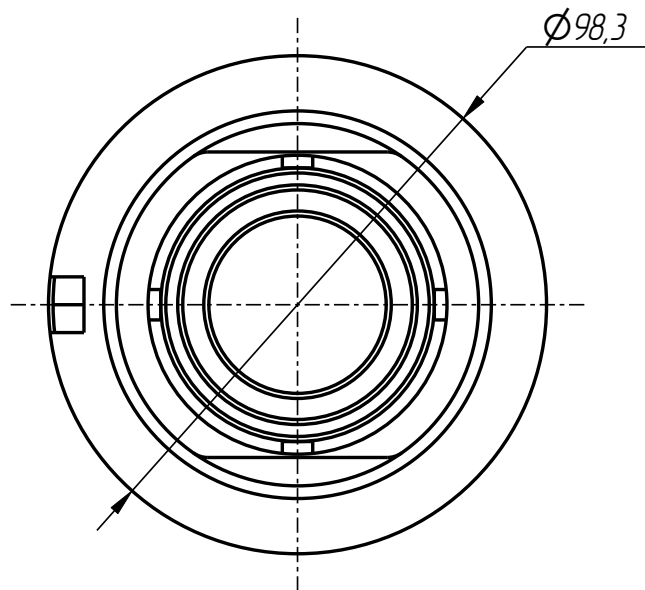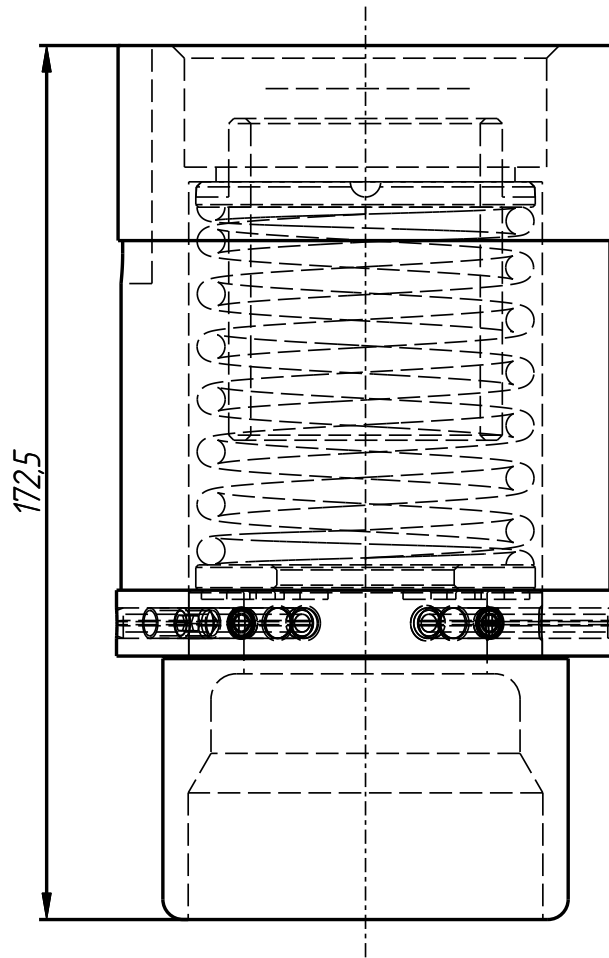

PPL-401-014

*Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
PPL-401-014*

401

PPL-401-014
*Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
Specification*

<i>N° pos.</i>	<i>Code</i>	<i>Name</i>	<i>Qty</i>
----------------	-------------	-------------	------------

Parts:

<i>1</i>	<i>PPL-401-014-001</i>	<i>Main body</i>	<i>1</i>
<i>2</i>	<i>PPL-401-014-002</i>	<i>Bushing</i>	<i>1</i>
<i>3</i>	<i>PPL-401-014-003</i>	<i>Spring</i>	<i>1</i>
<i>4</i>	<i>PPL-401-014-004</i>	<i>Ring</i>	<i>1</i>
<i>5</i>	<i>PPL-401-014-005</i>	<i>Seat</i>	<i>1</i>



Standard parts:

<i>6</i>	<i>Screw M6x8 ГОСТ 8878-93</i>		<i>1</i>
<i>7</i>	<i>Spring pin ϕ 6x24 DIN 1481</i>		<i>6</i>



PPL-401-014

Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
PPL-401-014




401

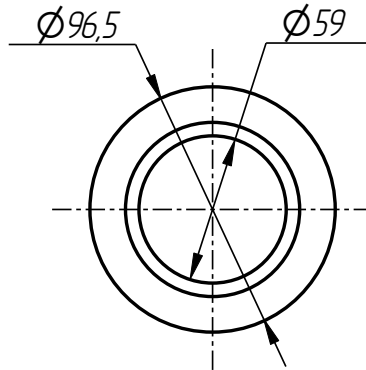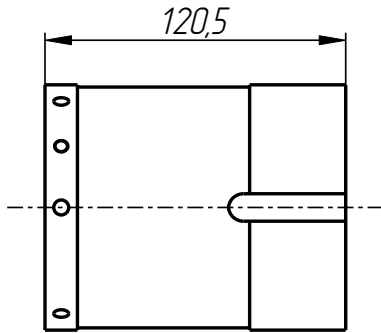

Main body
PPL-401-014-001

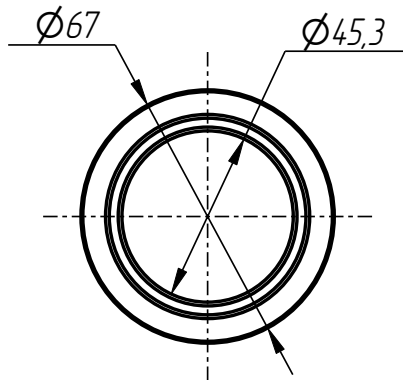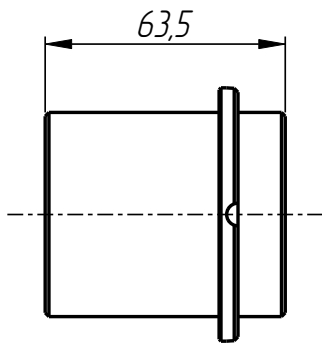

Bushing
PPL-401-014-002

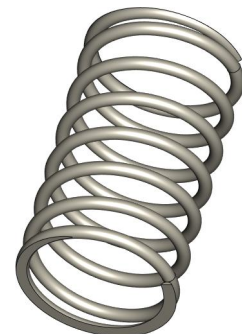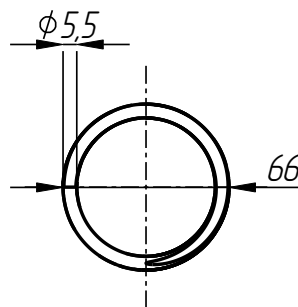
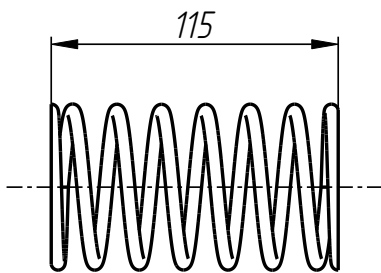


Spring
PPL-401-014-003




PPL-401-014

Cartridge /
Plunger Positioner
(BB-GPS-401-070-00)
PPL-401-014

 401

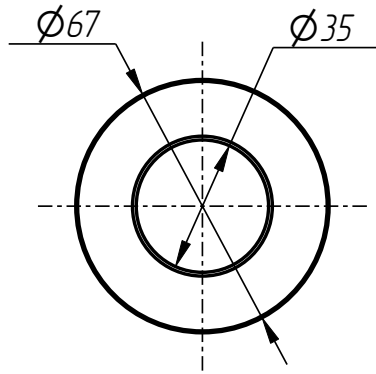

Ring
PPL-401-014-004

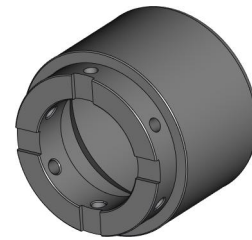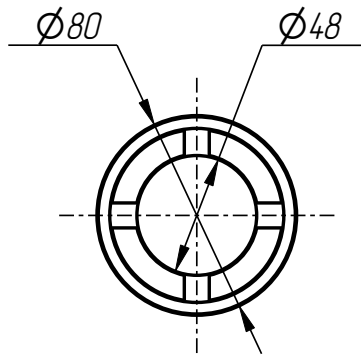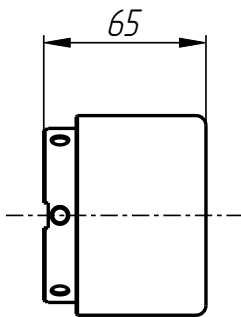

Seat
PPL-401-014-005

PPL-401-014