 




401

***MX-401-001  
TAKE OUT HEAD  
(450.0145.00.000)***



Take out head  
MX-401-001

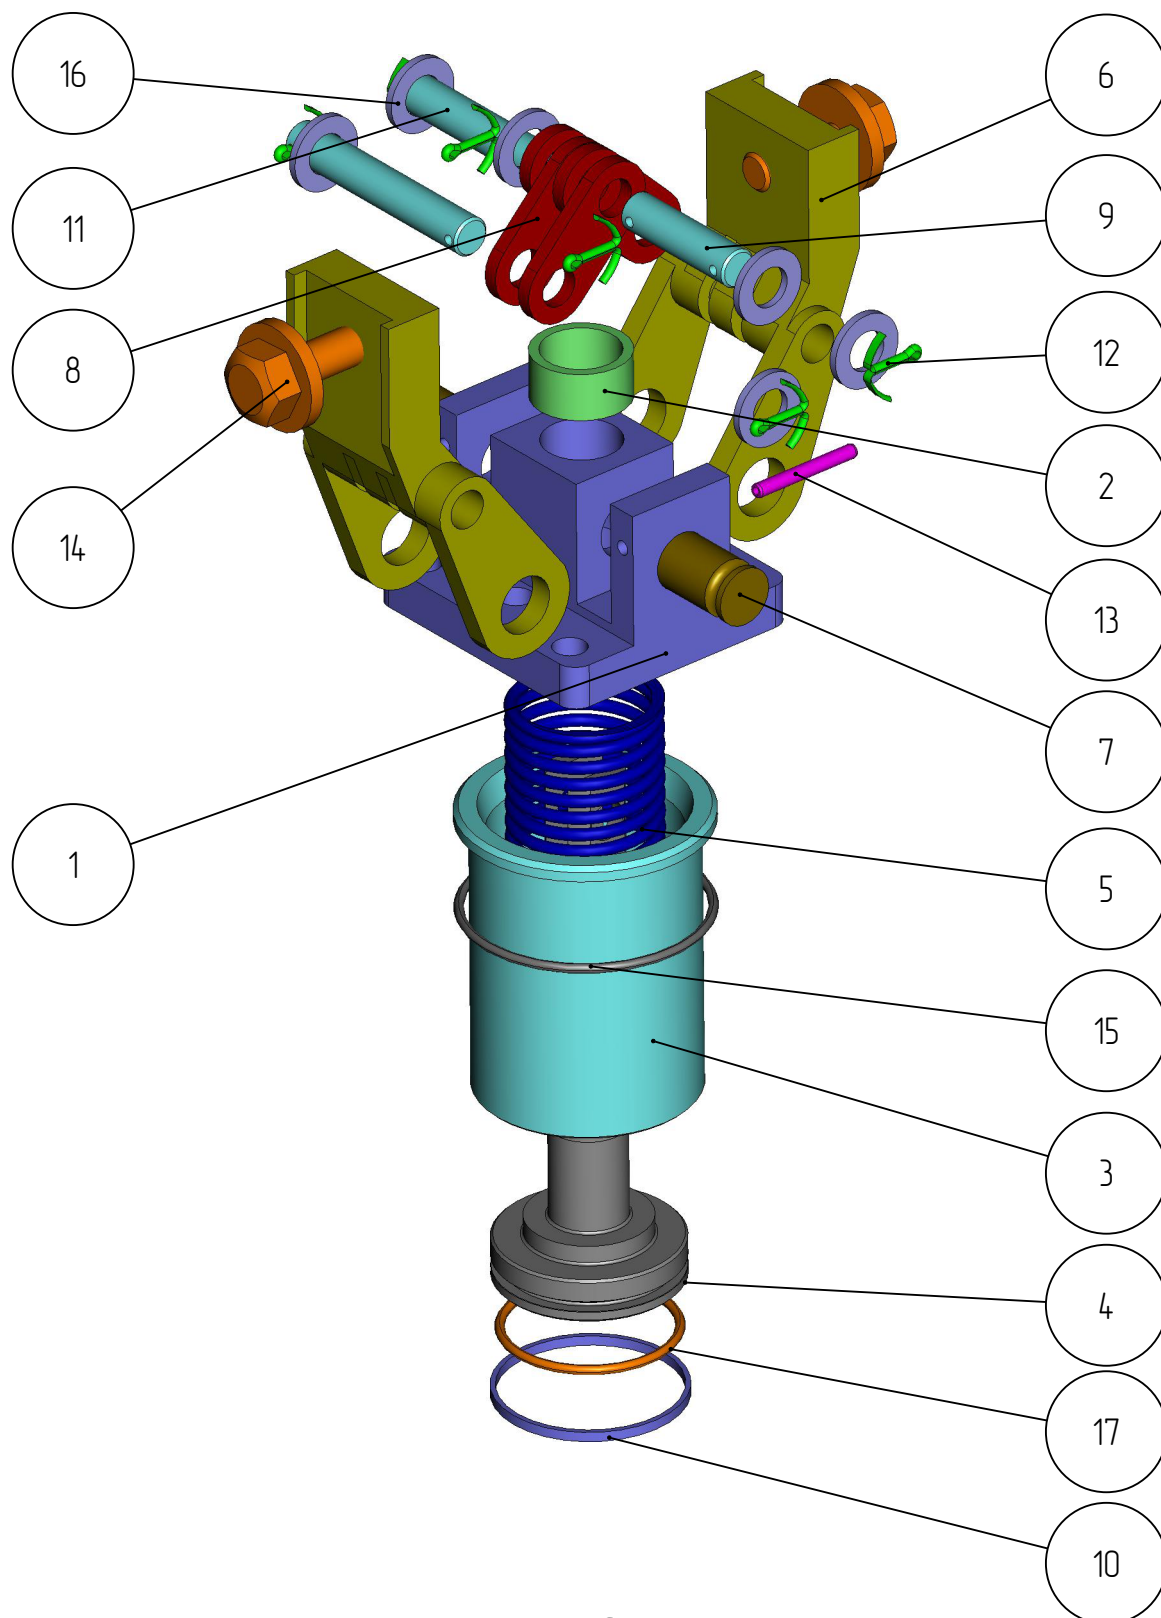

  Take out head  
MX-401-001


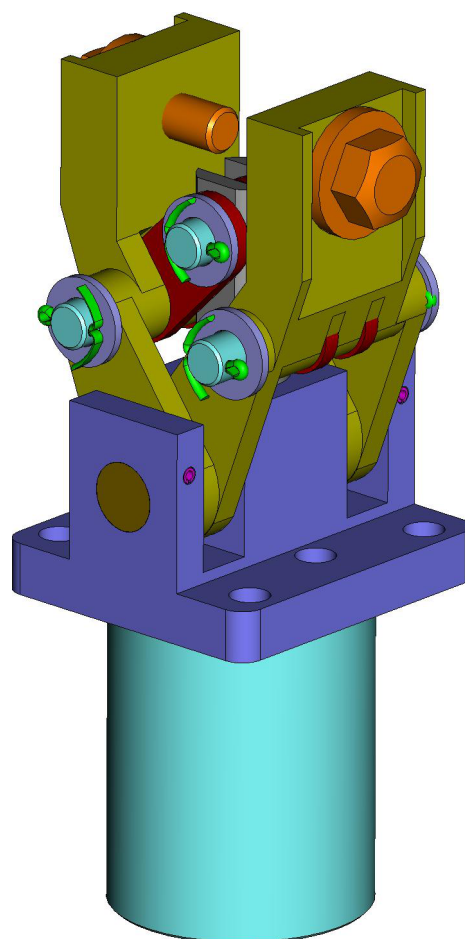
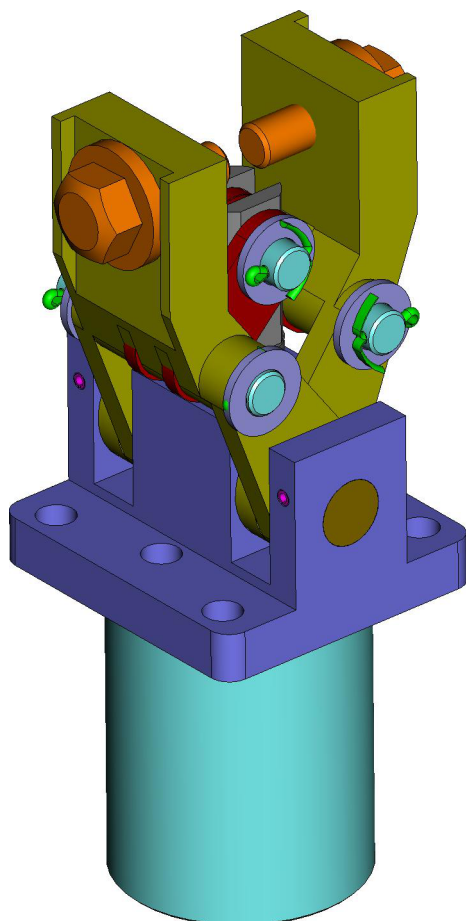


Take out head  
MX-401-001


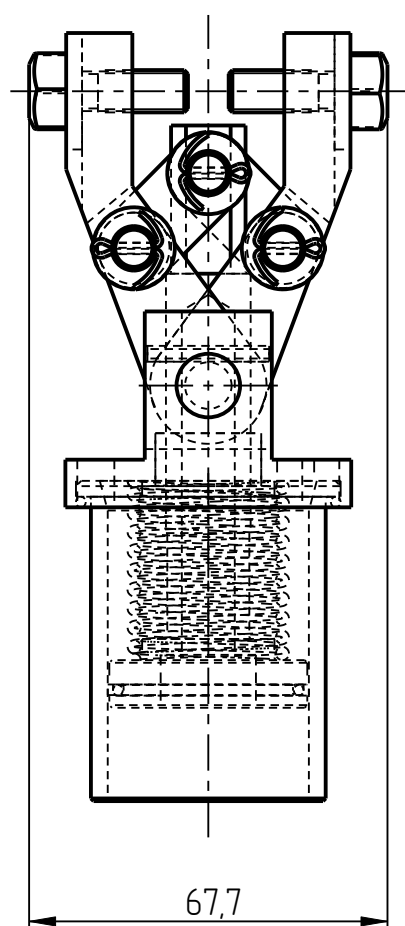 
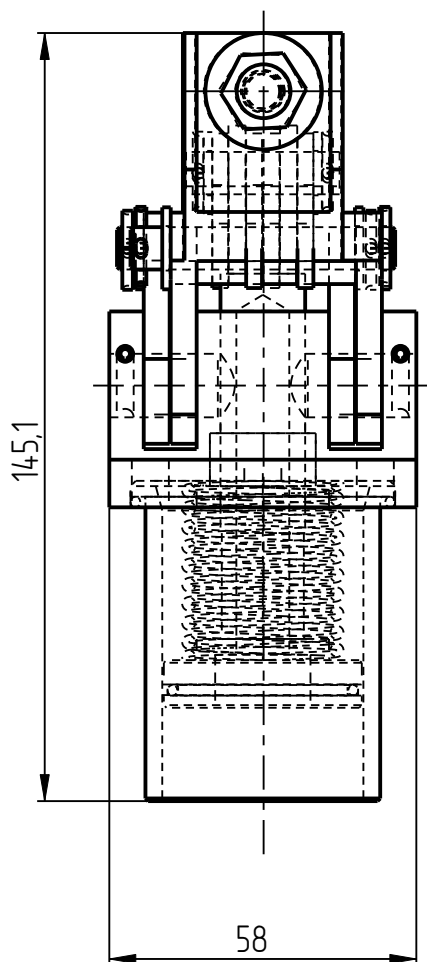 


## Take out head MX-401-001 Specification

 
 
 
№ pos.	Code	Name	Qty
Parts			
1	MX-401-001-001	Housing	1
2	MX-401-001-002	Bushing	1
3	MX-401-001-003	Cylinder	1
4	MX-401-001-004	Piston	1
5	MX-401-001-005	Spring	1
6	MX-401-001-006	Holder	2
7	MX-401-001-007	Plug	2
8	MX-401-001-008	Clevis	4
9	MX-401-001-011	Plug	1
10	MX-401-001-013	Ring	1
11	MX-401-001-014	Plug	2
Standard parts			
12	Split pin 2x14 DIN 94		6
13	Spring pin            Ø3x24 DIN 1481		2
14	Hexagon Flange Bolt M10x20 DIN 6921		2
15	O-ring 046-050-25 GOST 9833-73		1
16	Washer 8 DIN 125		6
17	O-ring 032-036-25 GOST 9833-73		1

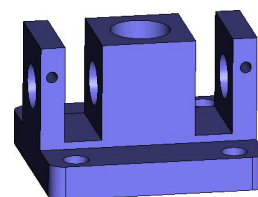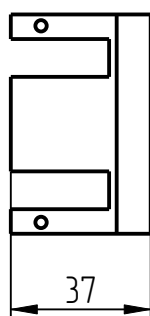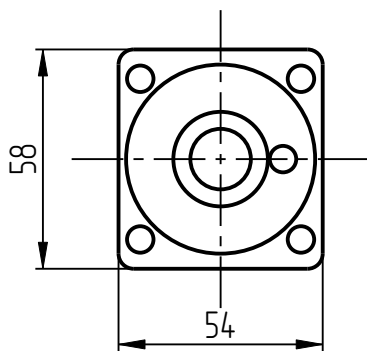

 
 
 
1. Housing  
MX-401-001-001

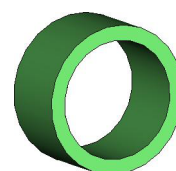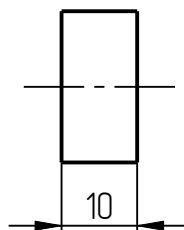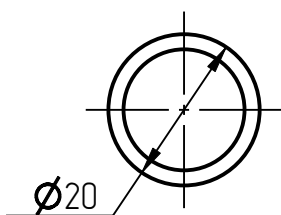

  
 
2. Bushing  
MX-401-001-002

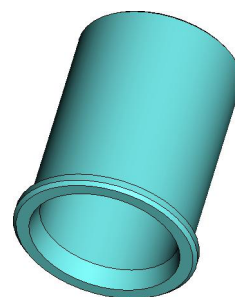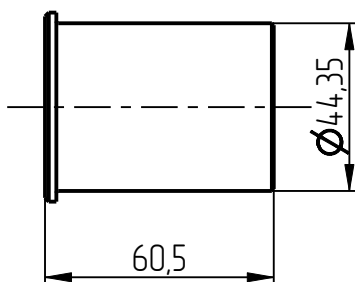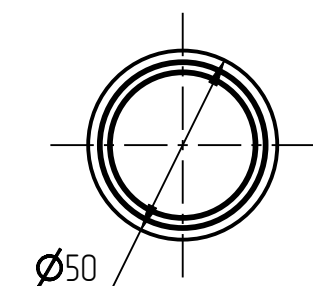

 
 
 
3. Cylinder  
MX-401-001-003

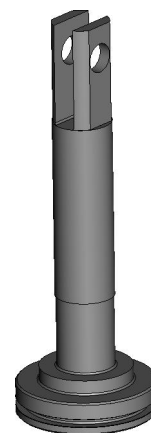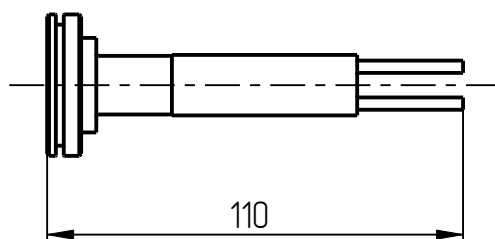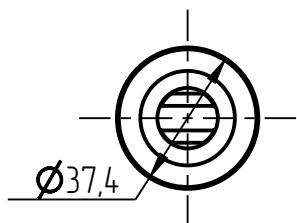


 
 
4. Piston  
MX-401-001-004

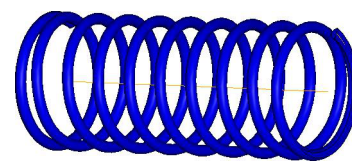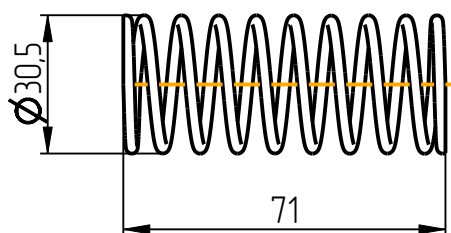

 
 
 
5. Spring  
MX-401-001-005

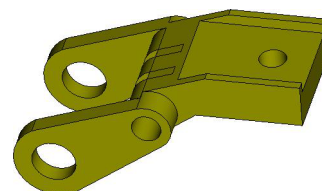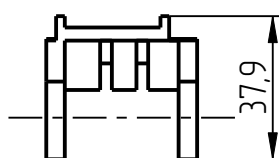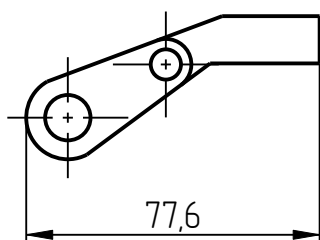

 
 
 
6. Holder  
MX-401-001-006

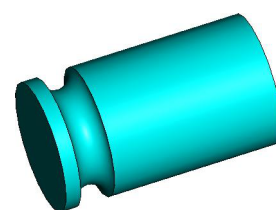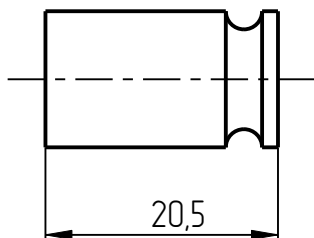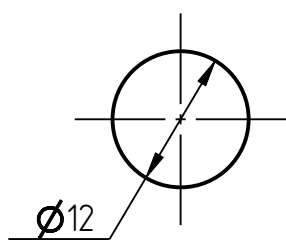

  
 
7. Plug  
MX-401-001-007

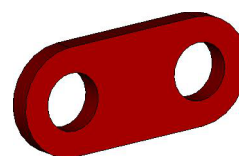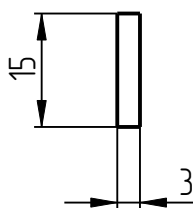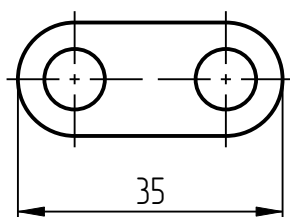

 
 
 
8. Clevis  
MX-401-001-008

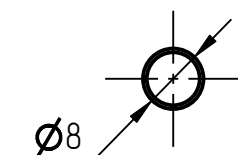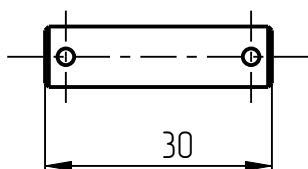

  9. Plug  
MX-401-001-011

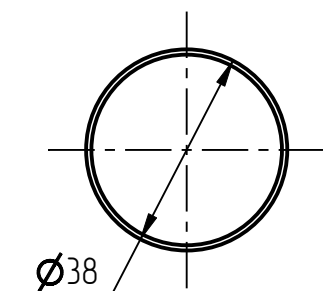

   10. Ring  
MX-401-001-013

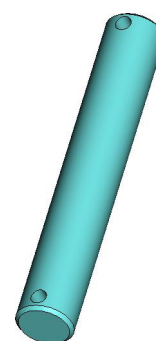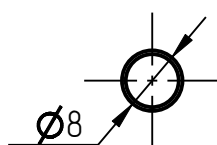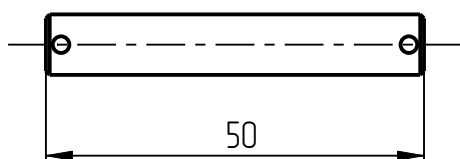

11. Plug  
MX-401-001-014