 


401

*Cartridge /
Plunger Positioner 90
(400-5090-1A)*

Cartridge /
Plunger Positioner 90
(400-5090-1A)
PPL-401-019

 
 
401

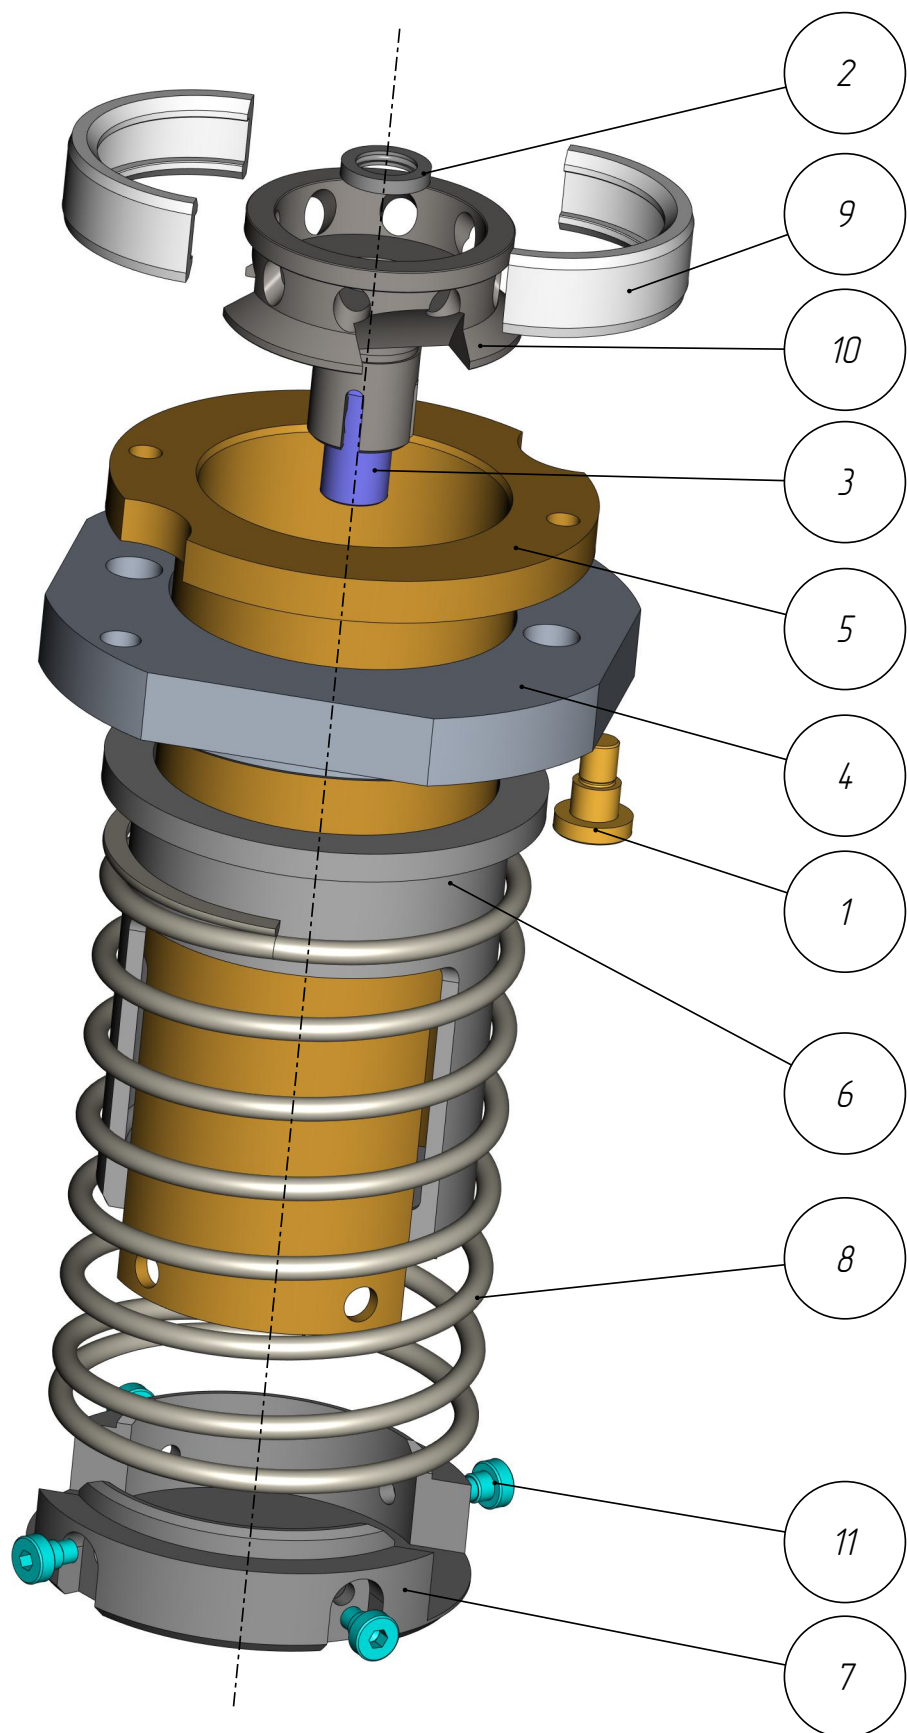

PPL-401-019

Cartridge /
Plunger Positioner 90
(400-5090-1A)
PPL-401-019

401

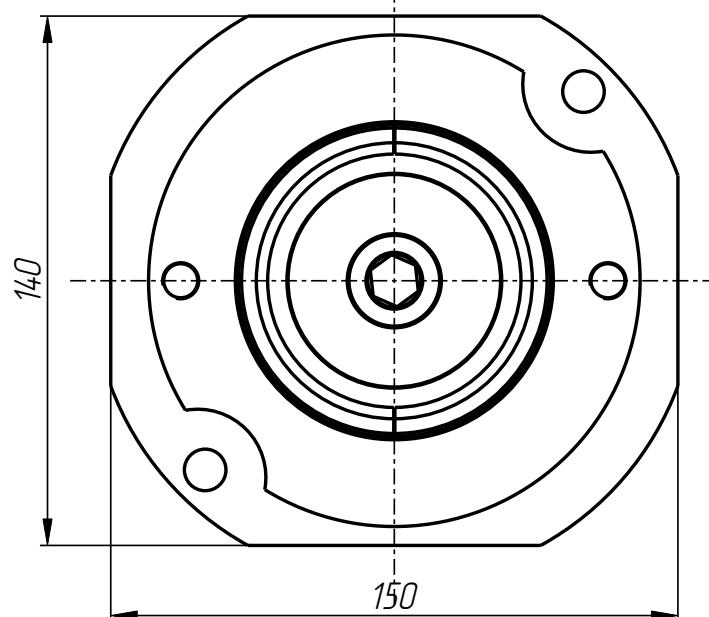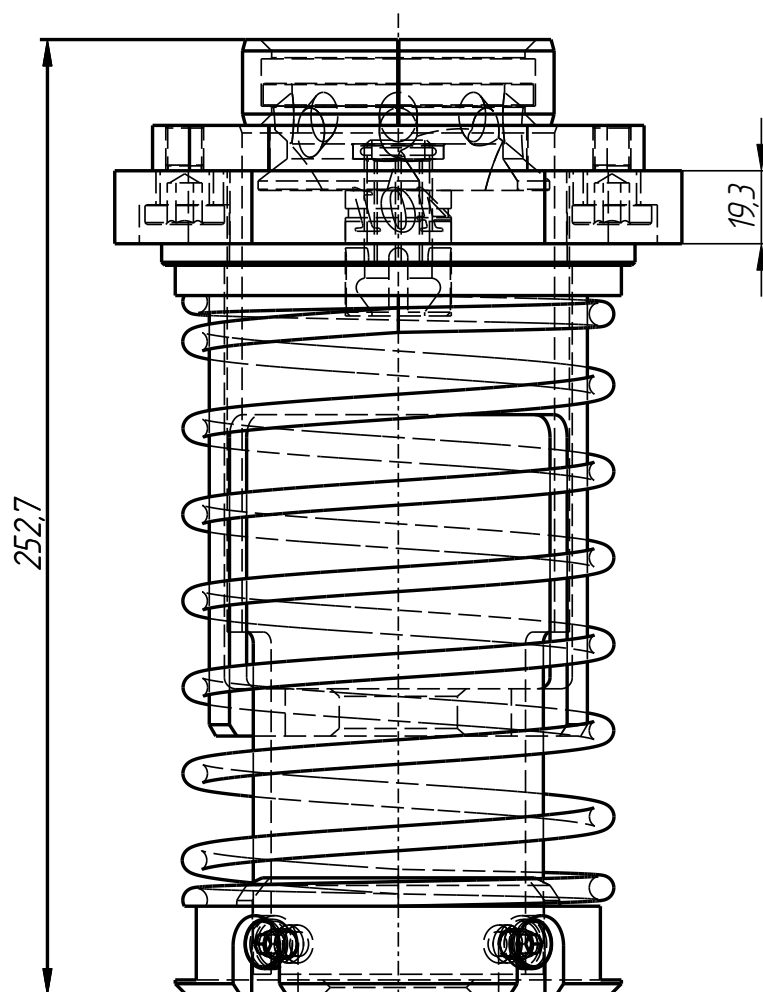

PPL-401-019

Cartridge /
Plunger Positioner 90
(400-5090-1A)
PPL-401-019

401

PPL-401-019

Cartridge /
Plunger Positioner 90
(400-5090-1A)
Specification

Nº pos.	Code	Name	Qty
---------	------	------	-----

Parts:

1	PPL-401-018-007	Screw	2
2	PPL-401-018-008-002	Ring	1
3	PPL-401-018-010	Emphasis	1
4	PPL-401-019-001	Flange	1
5	PPL-401-019-002	Bushing	1
6	PPL-401-019-003	Sleeve	1
7	PPL-401-019-004	Spring retainer	1
8	PPL-401-019-005	Spring	1
9	PPL-401-019-006	Split ring	2
10	PPL-401-019-008	Adapter	1




Standard parts:

11	Screw M8 x 10 DIN7984	4
----	-----------------------	---




PPL-401-019

Cartridge /
Plunger Positioner 90
(400-5090-1A)
PPL-401-019

  
 
401

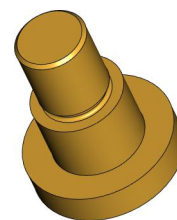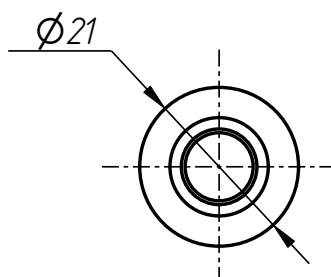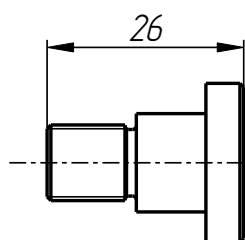

Screw
PPL-401-018-007

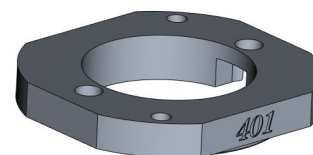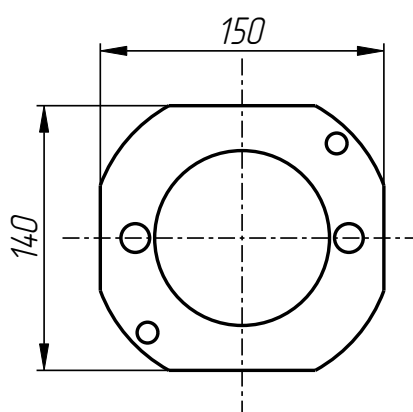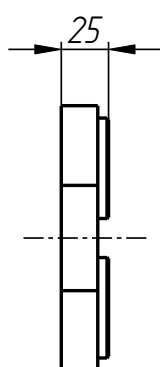   

Flange
PPL-401-019-001


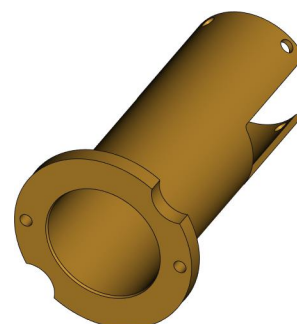 
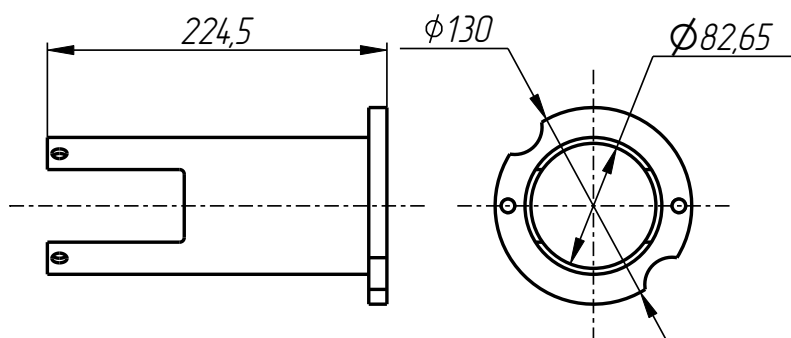 


Bushing
PPL-401-019-002




PPL-401-019

Cartridge /
Plunger Positioner 90
(400-5090-1A)
PPL-401-019

 
 
 
401

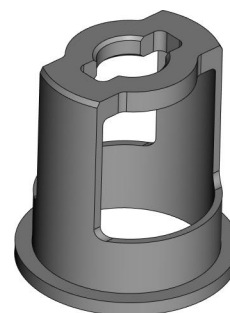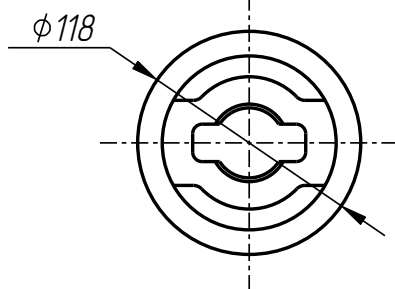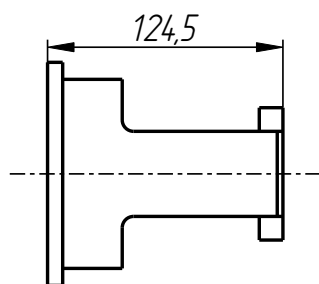



Sleeve
PPL-401-019-003

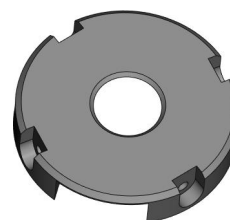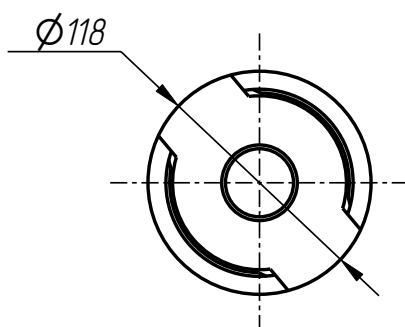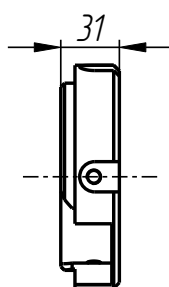   

Spring retainer
PPL-401-019-004

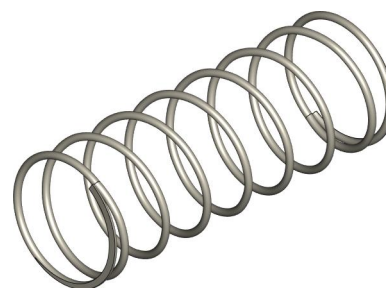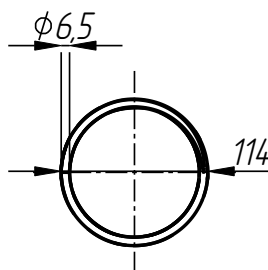  
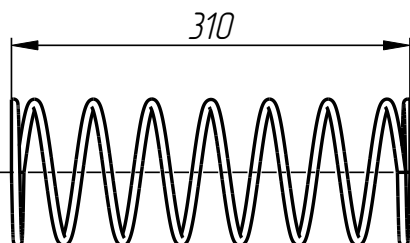 


Spring
PPL-401-019-005

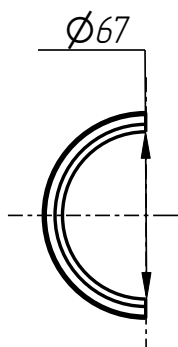 
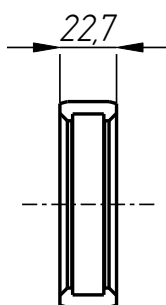 


Split ring
PPL-401-019-006

 
 
PPL-401-019

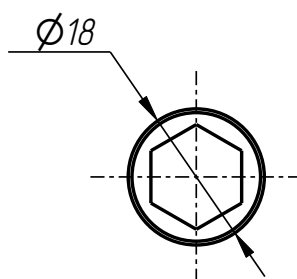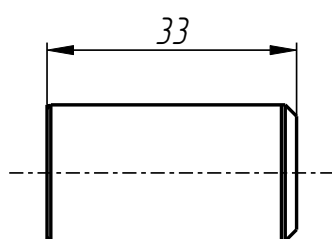

Emphasis
PPL-401-018-010

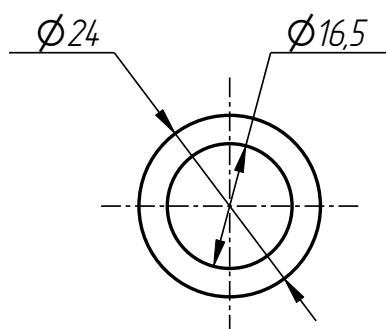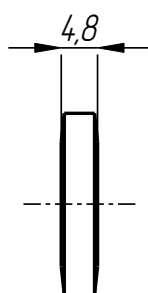  

Ring
PPL-401-018-008-002

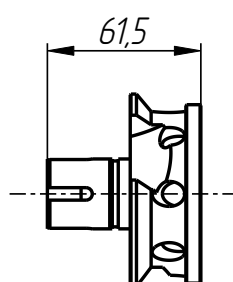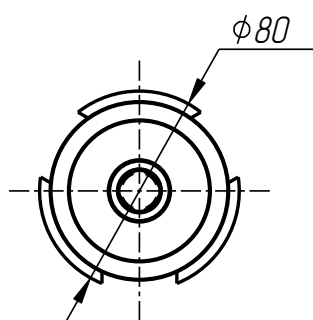  

Adapter
PPL-401-019-008