


*401*

*PPI-401-033*

*Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)*

Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)  
PPl-401-033



401

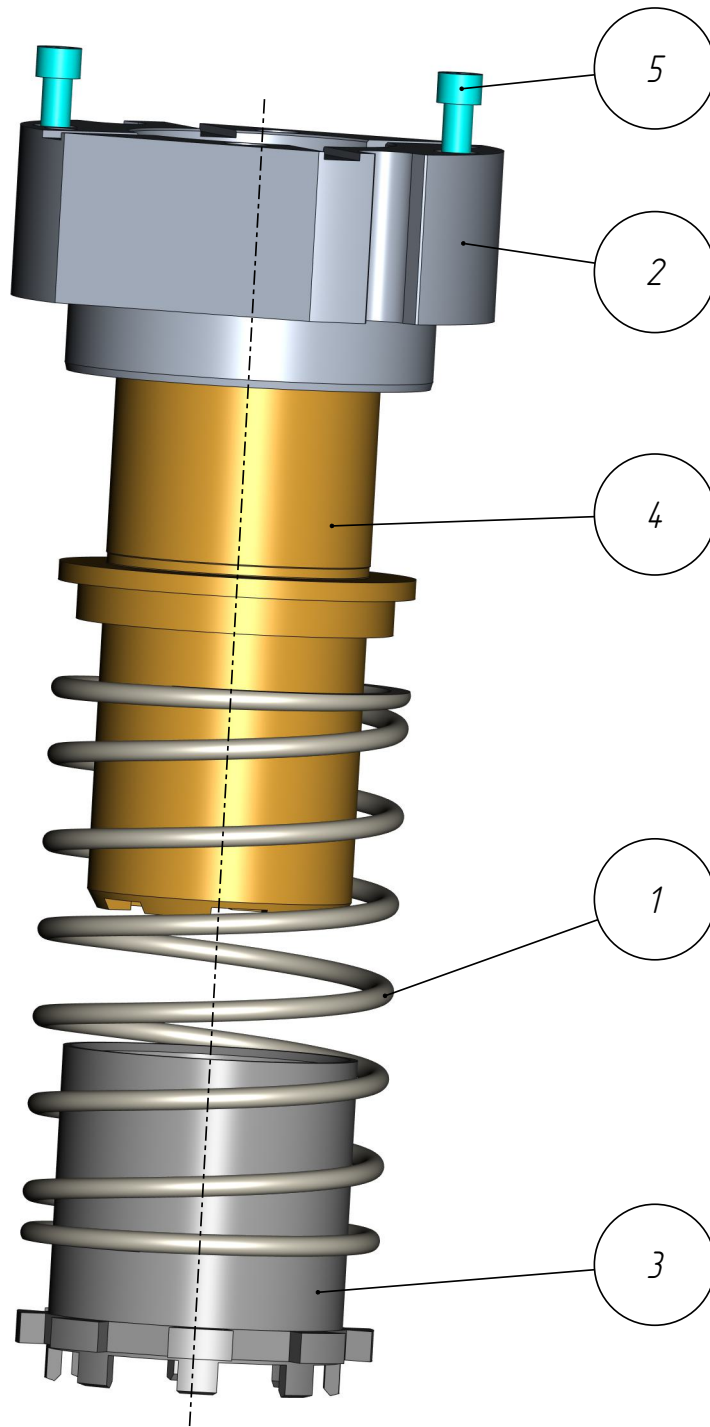

PPl-401-033

Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)  
PPL-401-033

401

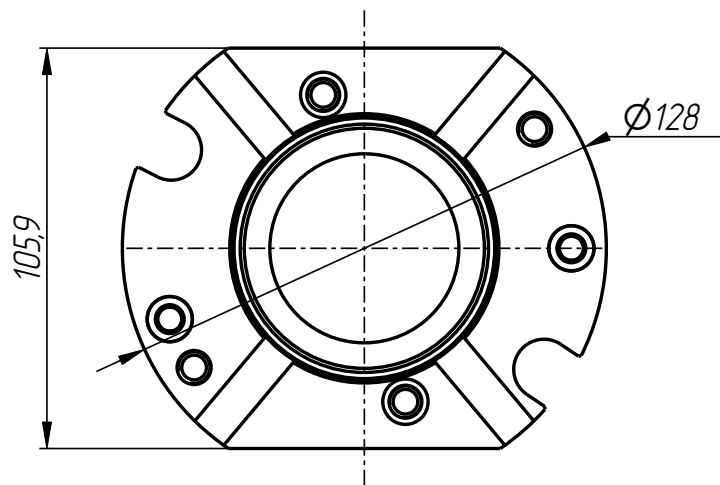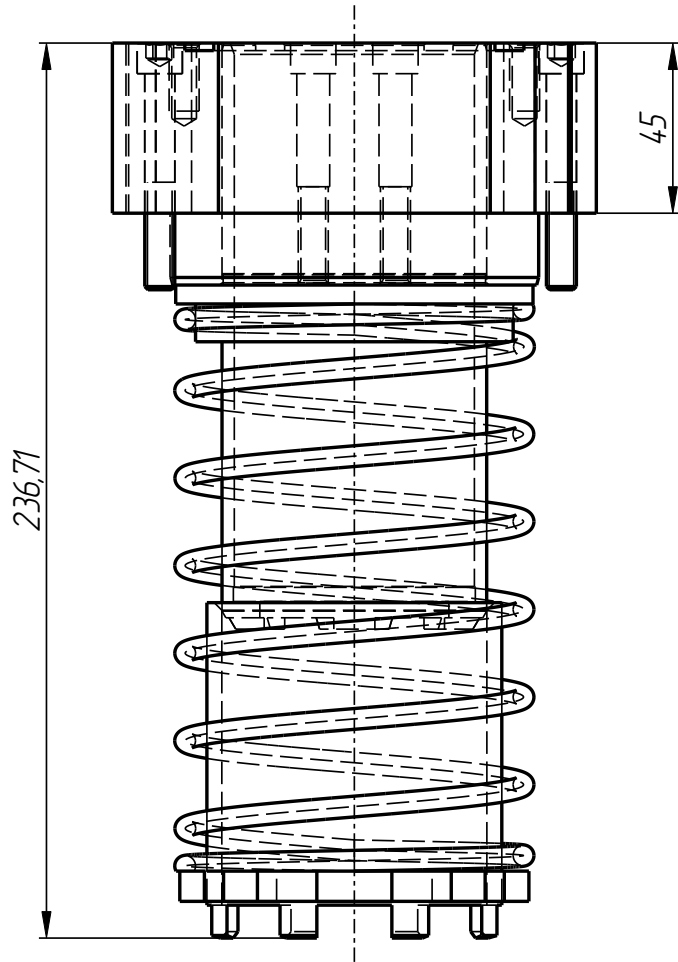

PPL-401-033

*Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)  
PPl-401-033*

**401**

## *PPl-401-033*




*Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)  
Specification*

<i>N° pos.</i>	<i>Code</i>	<i>Name</i>	<i>Qty</i>
<i>Parts:</i>			
1	PPl-401-028-001	Spring	1
2	PPl-401-032-001	Main body	1
3	PPl-401-032-004	Sleeve	1
4	PPl-401-033-001	Bushing	1
5	Screw UNC5/16"-18x2 1/4" DIN 912		2




PPl-401-033

Cartridge /  
Plunger Positioner 70  
(10\_06\_00-70-63\_5e)  
PPL-401-033




401

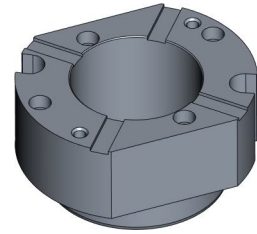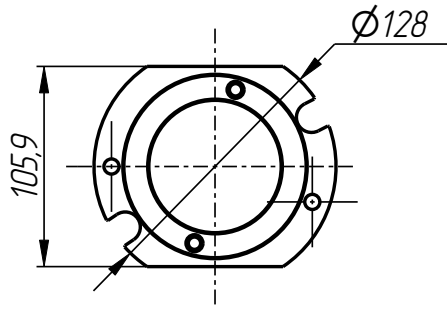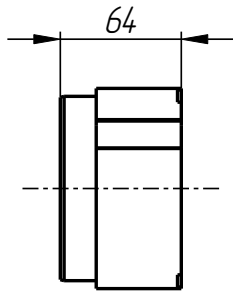




Main body  
PPL-401-032-001

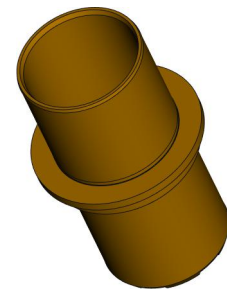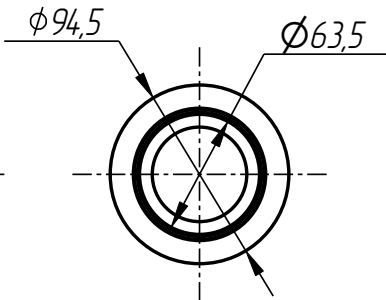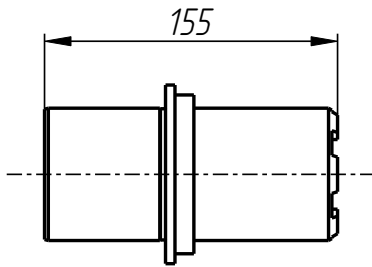

Bushing  
PPL-401-033-001

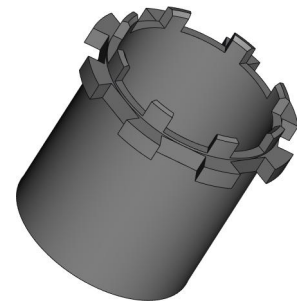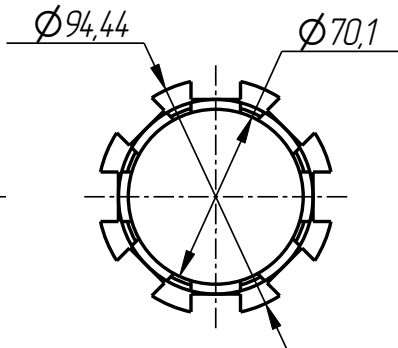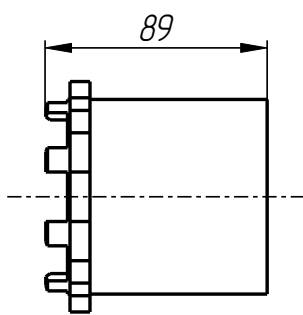

Sleeve  
PPL-401-032-004

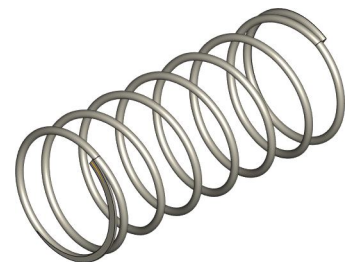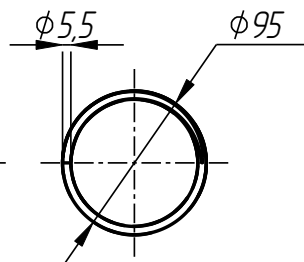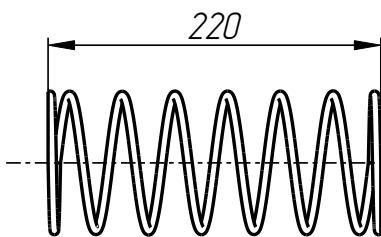

Spring  
PPL-401-028-001