


401

PPI-401-044

*Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)*

Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)
PPL-401-044



401

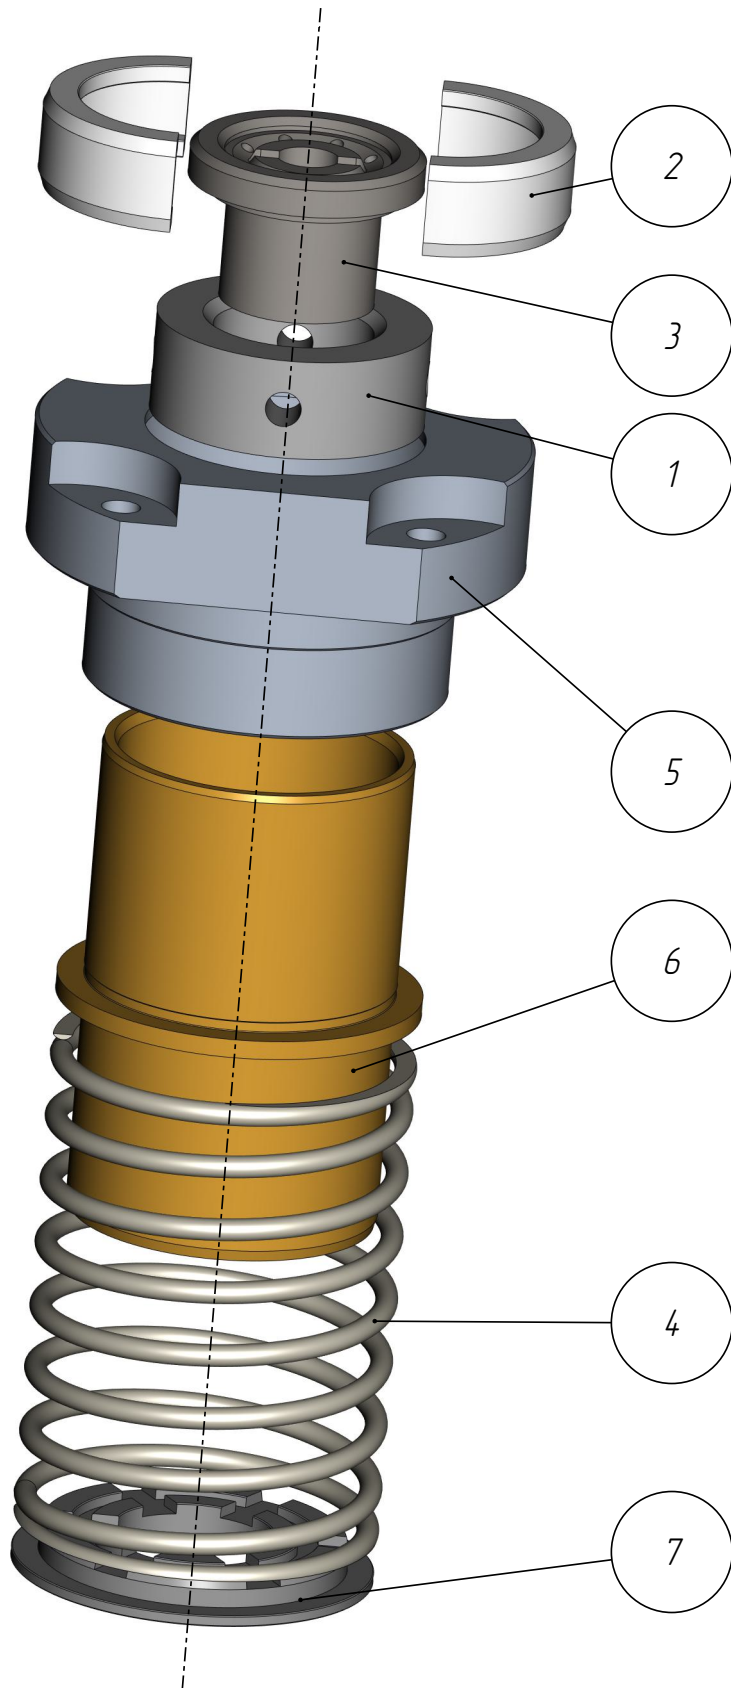

PPL-401-044

Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)
PPL-401-044

401

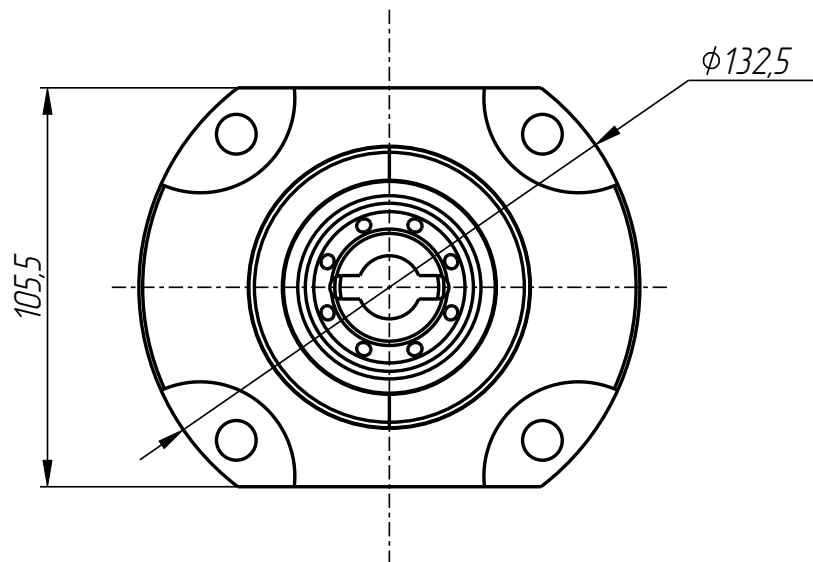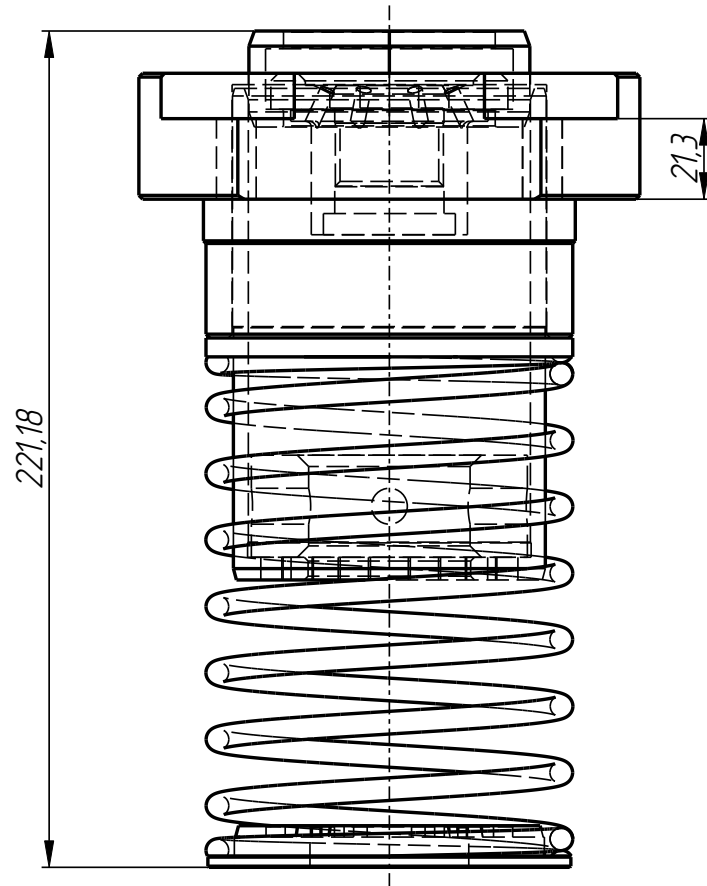

PPL-401-044

*Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)
PPl-401-044*

401

PPl-401-044

*Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)*




Specification

<i>Nº pos.</i>	<i>Code</i>	<i>Name</i>	<i>Qty</i>
<i>Parts:</i>			
1	PPl-401-001-009	Remote ring	1
2	PPl-401-001-010	Split ring	2
3	PPl-401-001-011	Adapter	1
4	PPl-401-015-005	Spring	1
5	PPl-401-044-001	Main body	1
6	PPl-401-044-002	Bushing	1
7	PPl-401-044-003	Spring retainer	1




PPl-401-044

Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)
PPL-401-044



401

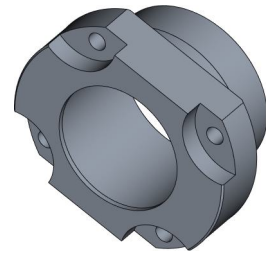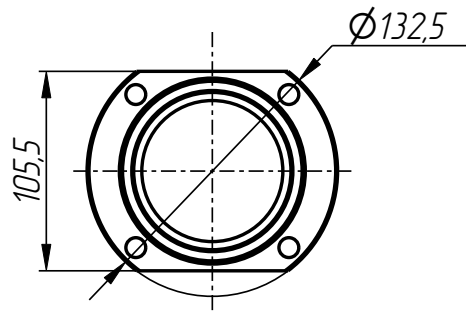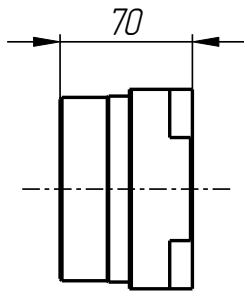

Main body
PPL-401-044-001

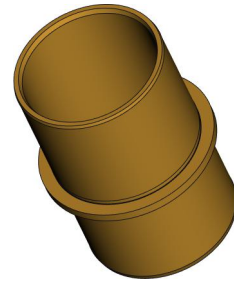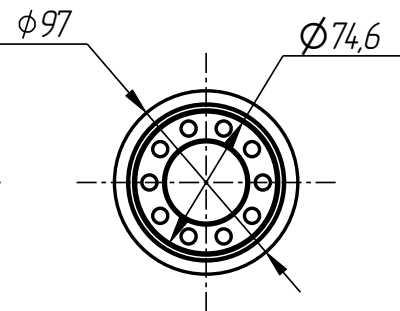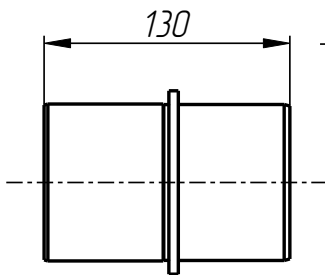

Bushing
PPL-401-044-002


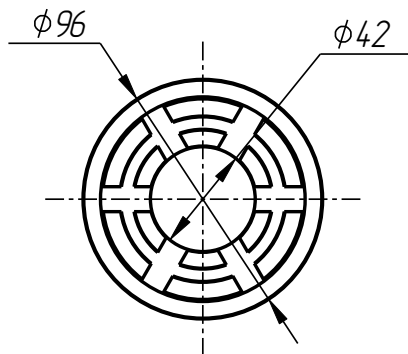
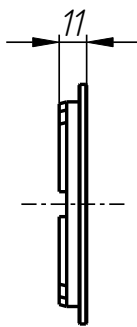


Spring retainer
PPL-401-044-003




PPL-401-044

Cartridge /
Plunger Positioner 83
(EM5-62-412-2-83)
PPL-401-044




401

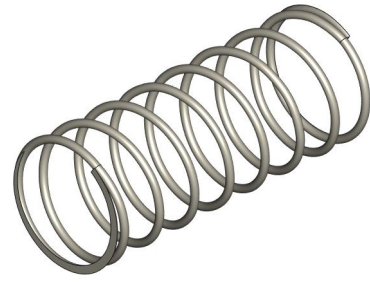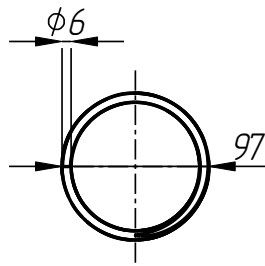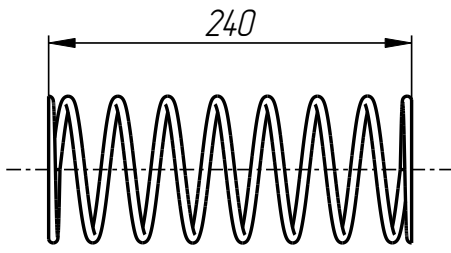




Spring
PPL-401-015-005

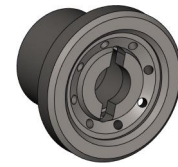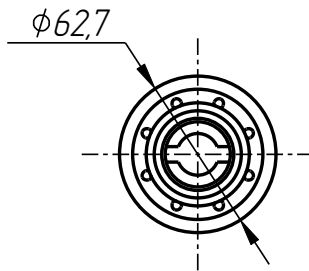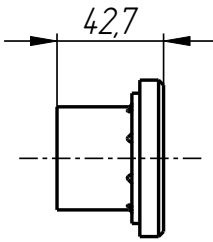

Adapter
PPL-401-001-011

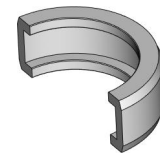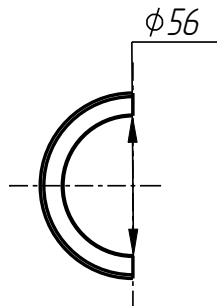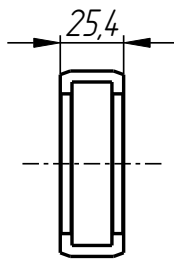

Split ring
PPL-401-001-010

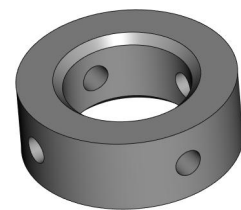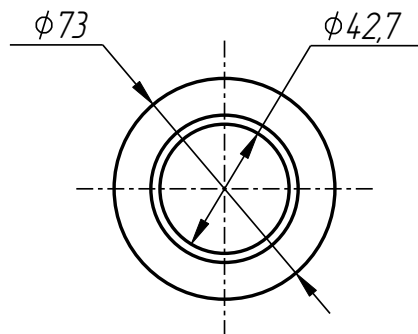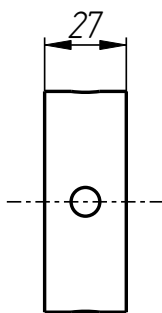

Remote ring
PPL-401-001-009

PPL-401-044