


401

PPI-401-047

*Cartridge /
Plunger Positioner
(BB-06850118)*

Cartridge /
Plunger Positioner
(BB-06850118)
PPL-401-047



401

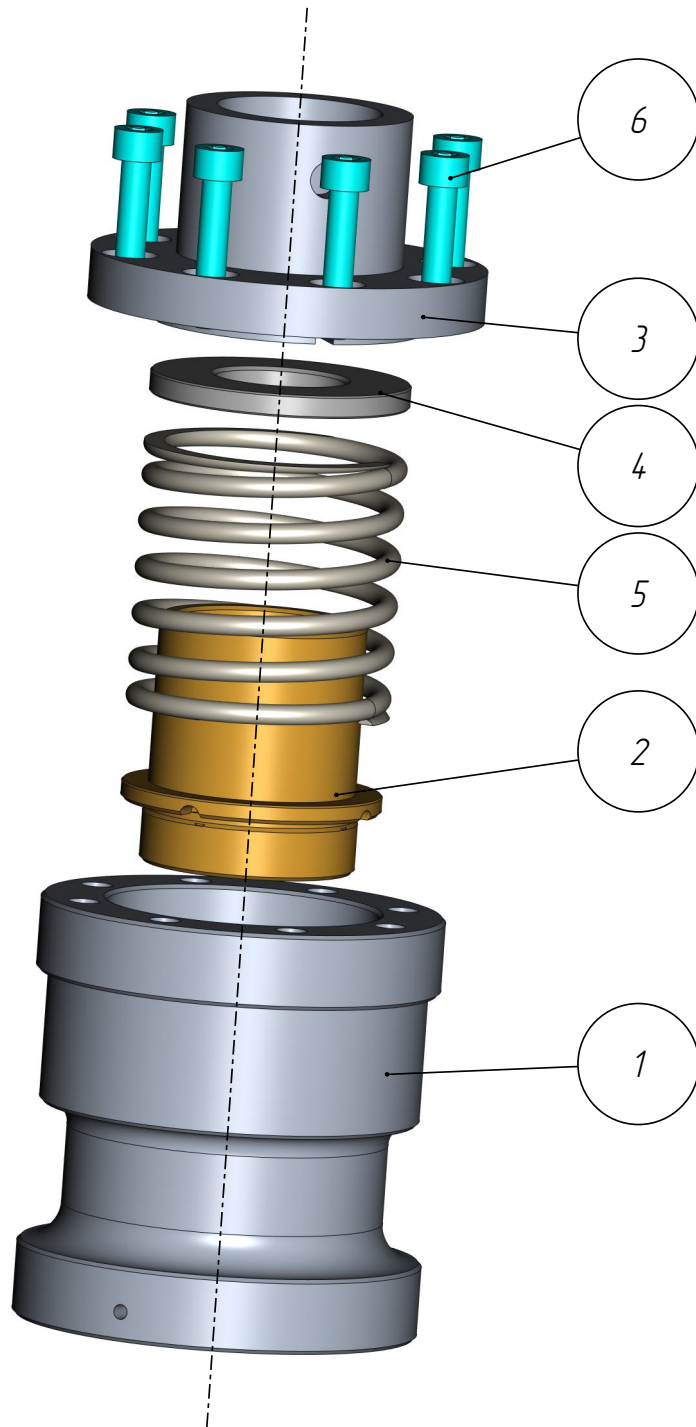

PPL-401-047

Cartridge /
Plunger Positioner
(BB-06850118)
PPL-401-047

401

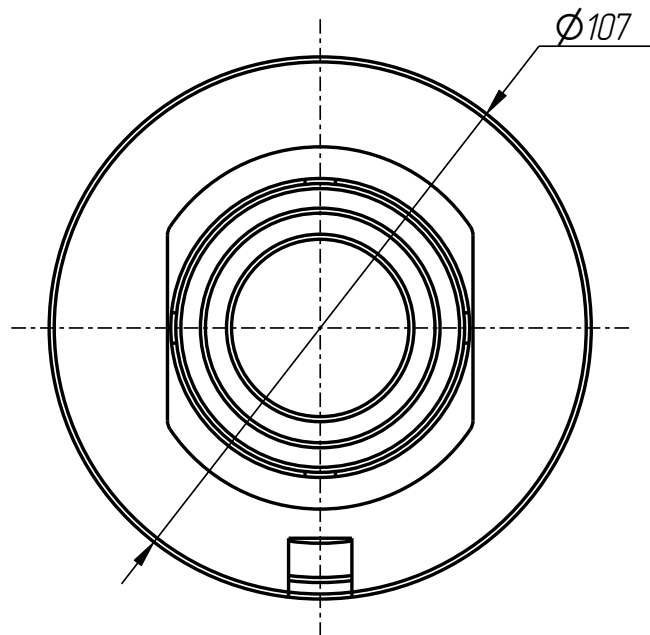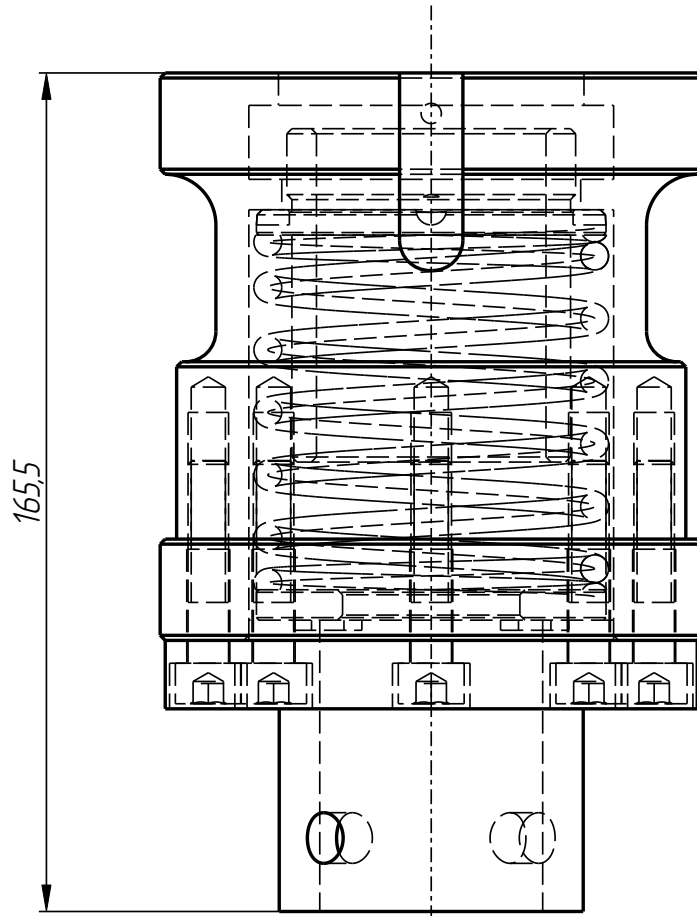

*Cartridge /
Plunger Positioner
(BB-06850118)
PPL-401-047*

401

PPL-401-047

*Cartridge /
Plunger Positioner
(BB-06850118)*



Specification

<i>N° pos.</i>	<i>Code</i>	<i>Name</i>	<i>Qty</i>
<i>Parts:</i>			
<i>1</i>	<i>PPL-401-047-001</i>	<i>Main body</i>	<i>1</i>
<i>2</i>	<i>PPL-401-047-002</i>	<i>Bushing</i>	<i>1</i>
<i>3</i>	<i>PPL-401-047-003</i>	<i>Seat</i>	<i>1</i>
<i>4</i>	<i>PPL-401-047-004</i>	<i>Washer</i>	<i>1</i>
<i>5</i>	<i>PPL-401-047-005</i>	<i>Spring</i>	<i>1</i>
<i>6</i>	<i>Screw M8x40 DIN 912</i>		<i>8</i>


PPL-401-047

Cartridge /
Plunger Positioner
(BB-06850118)
PPL-401-047



401

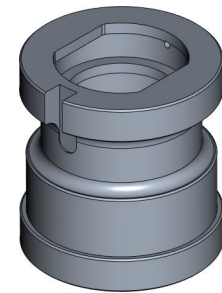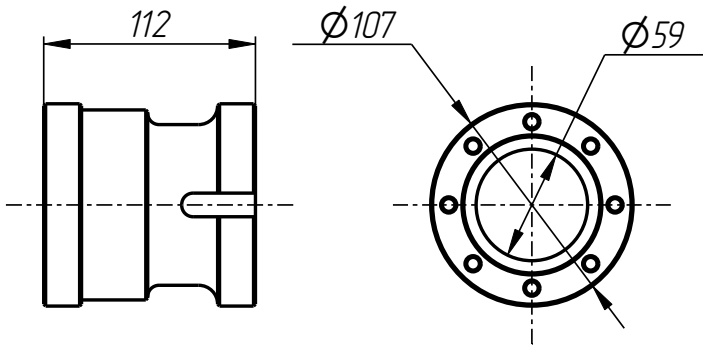

Main body
PPL-401-047-001

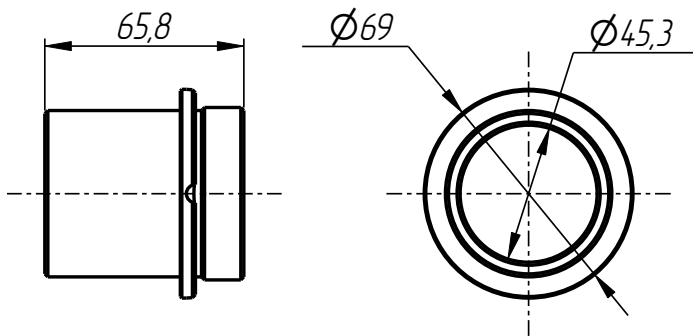

Bushing
PPL-401-047-002

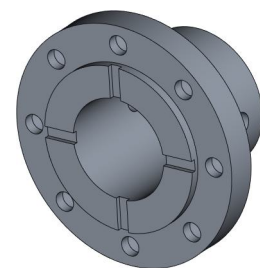
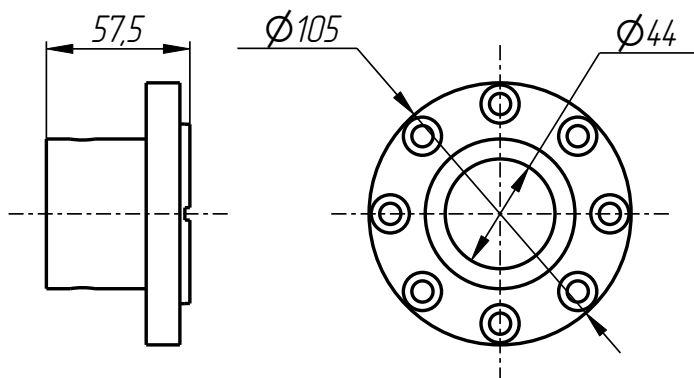


Seat
PPL-401-047-003



PPL-401-047

Cartridge /
Plunger Positioner
(BB-06850118)
PPL-401-047

401

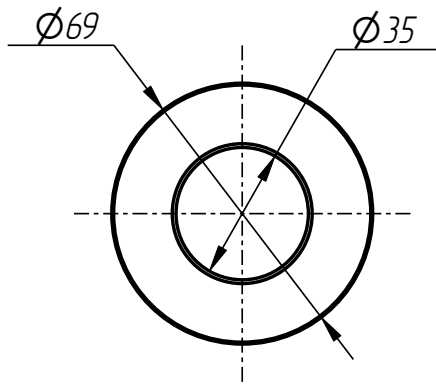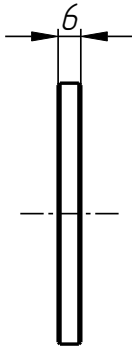

Washer
PPL-401-047-004

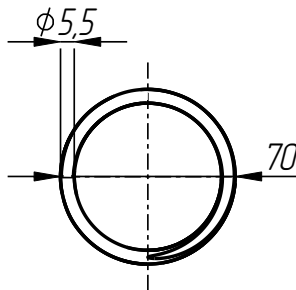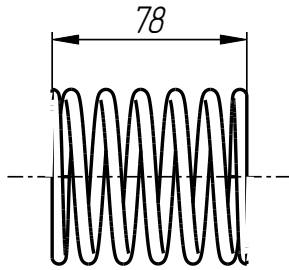

Spring
PPL-401-047-005

PPL-401-047