 


401

PPI-401-063


*Cartridge /
Plunger Positioner 90
(62-402_gr4-c-solo)*

401



Cartridge /
Plunger Positioner 90
(62-402_gr4-c-solo)
PPl-401-063

401

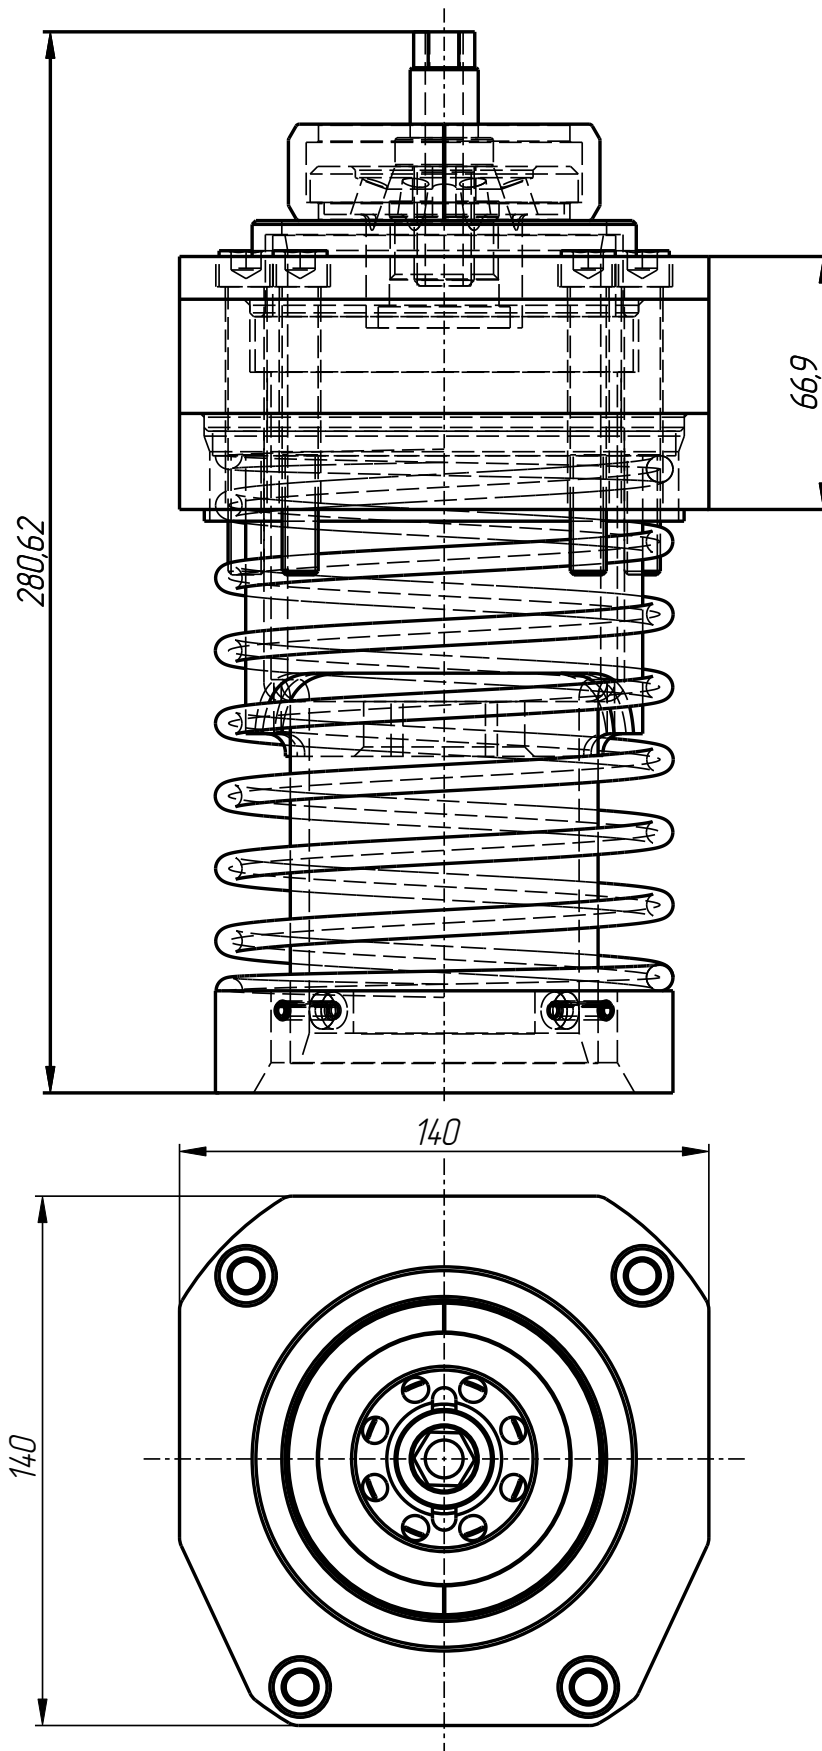

PPl-401-063

PPl-401-063

Cartridge /
Plunger Positioner 90
(62-402_gr4-c-solo)
Specification


N° pos.	Code	Name	Qty
---------	------	------	-----

Parts:



1	PPl-401-003-004	Space plate	1
2	PPl-401-004-002	Split ring	2
3	PPl-401-004-003	Bushing	1
4	PPl-401-004-004	Space plate	1
5	PPl-401-004-006	Spring holder	1
6	PPl-401-017-003	Sleeve	1
7	PPl-401-017-011	Spring	1
8	PPl-401-063-001	Adapter	1
9	PPl-401-063-001	Cap	1
10	PPl-401-063-002	Bushing	1

Standard parts:


11	Screw UNC3/8"-16x3" DIN 912	4
12	Spring pin ϕ 5x20 DIN 1481	4

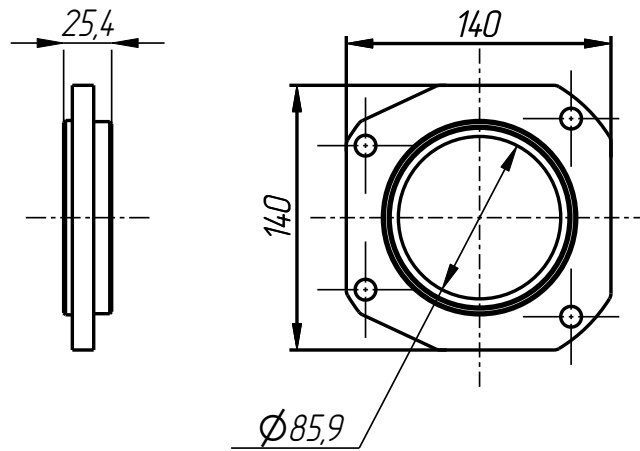

Cap
PPl-401-063-001

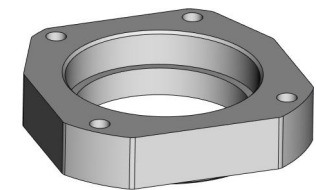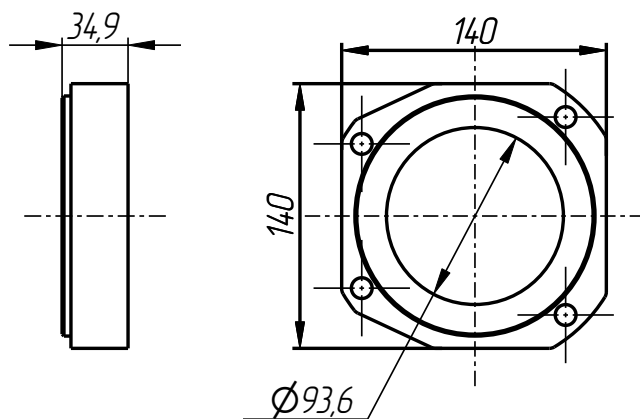



Space plate
PPl-401-004-004

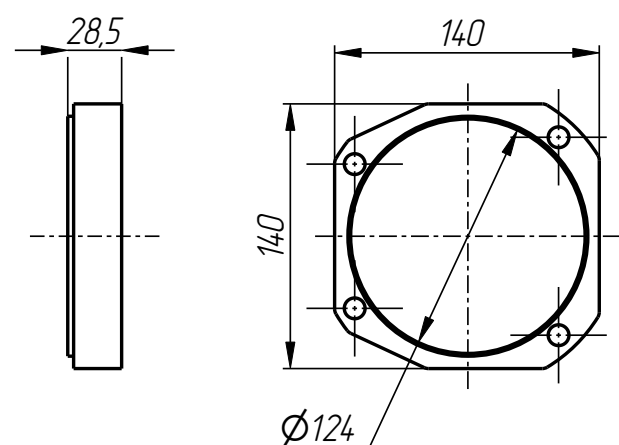



Space plate
PPl-401-003-004

Cartridge /
Plunger Positioner 90
(62-402_gr4-c-solo)
PPl-401-063


401

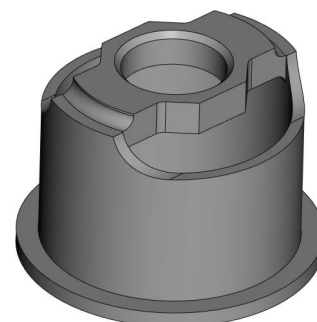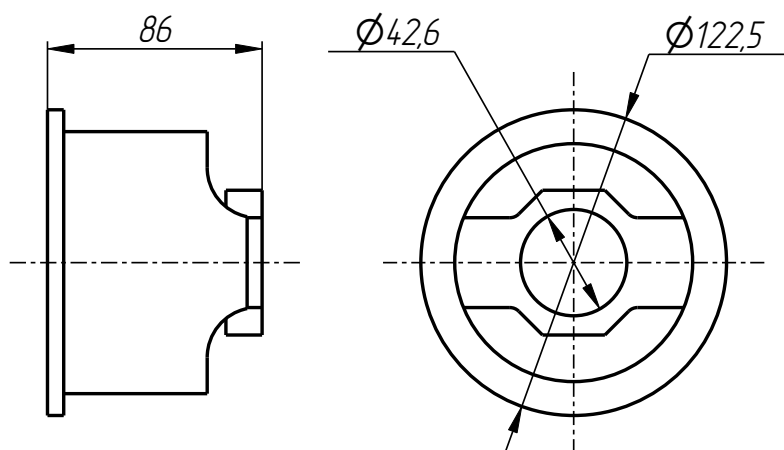

Sleeve
PPl-401-017-003


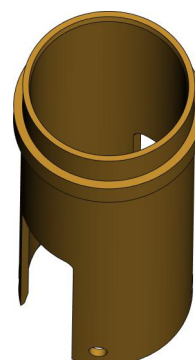
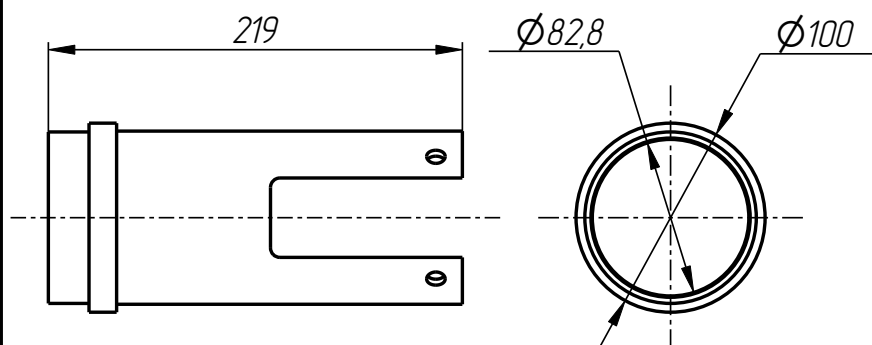


Bushing
PPl-401-004-003



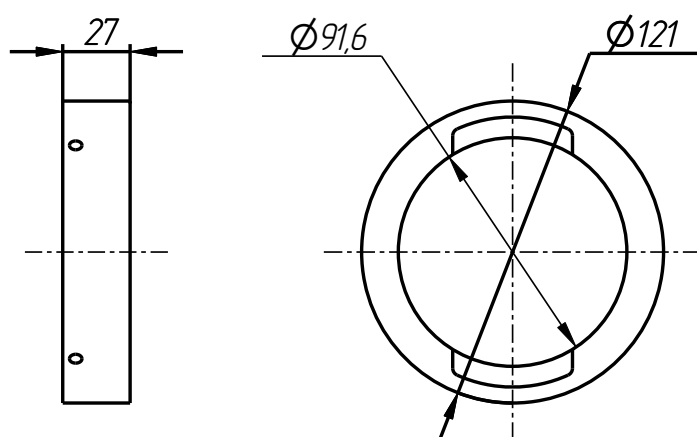


Spring holder
PPl-401-004-006




PPl-401-063

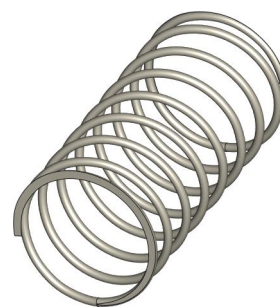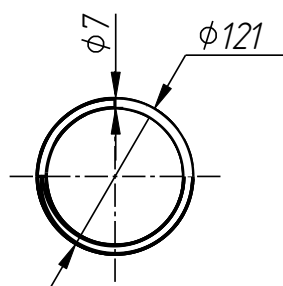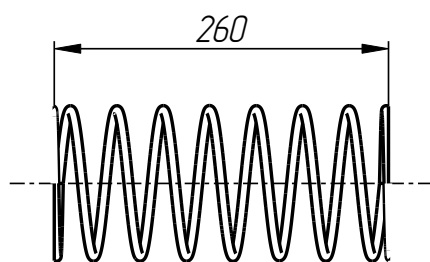




Spring
PPL-401-017-011

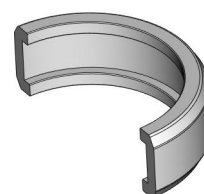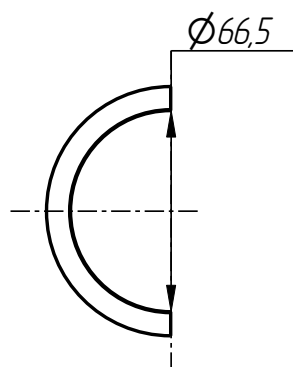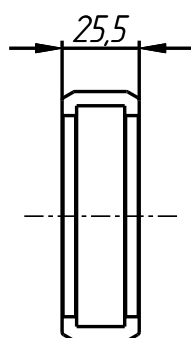

Split ring
PPL-401-004-002

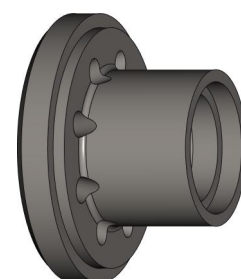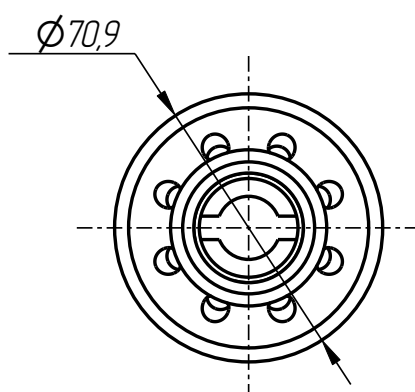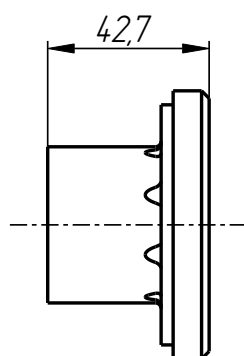

Adapter
PPL-401-063-001

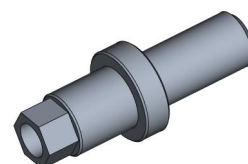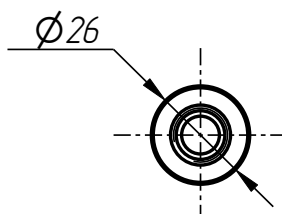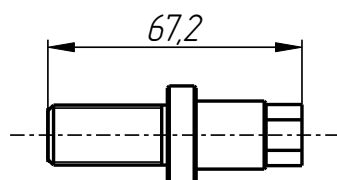

Bushing
PPL-401-063-002