



401

ПКБСТ-400
Glass container geometry control device



Glass container geometry control device ПКБСТ-400-01-SB

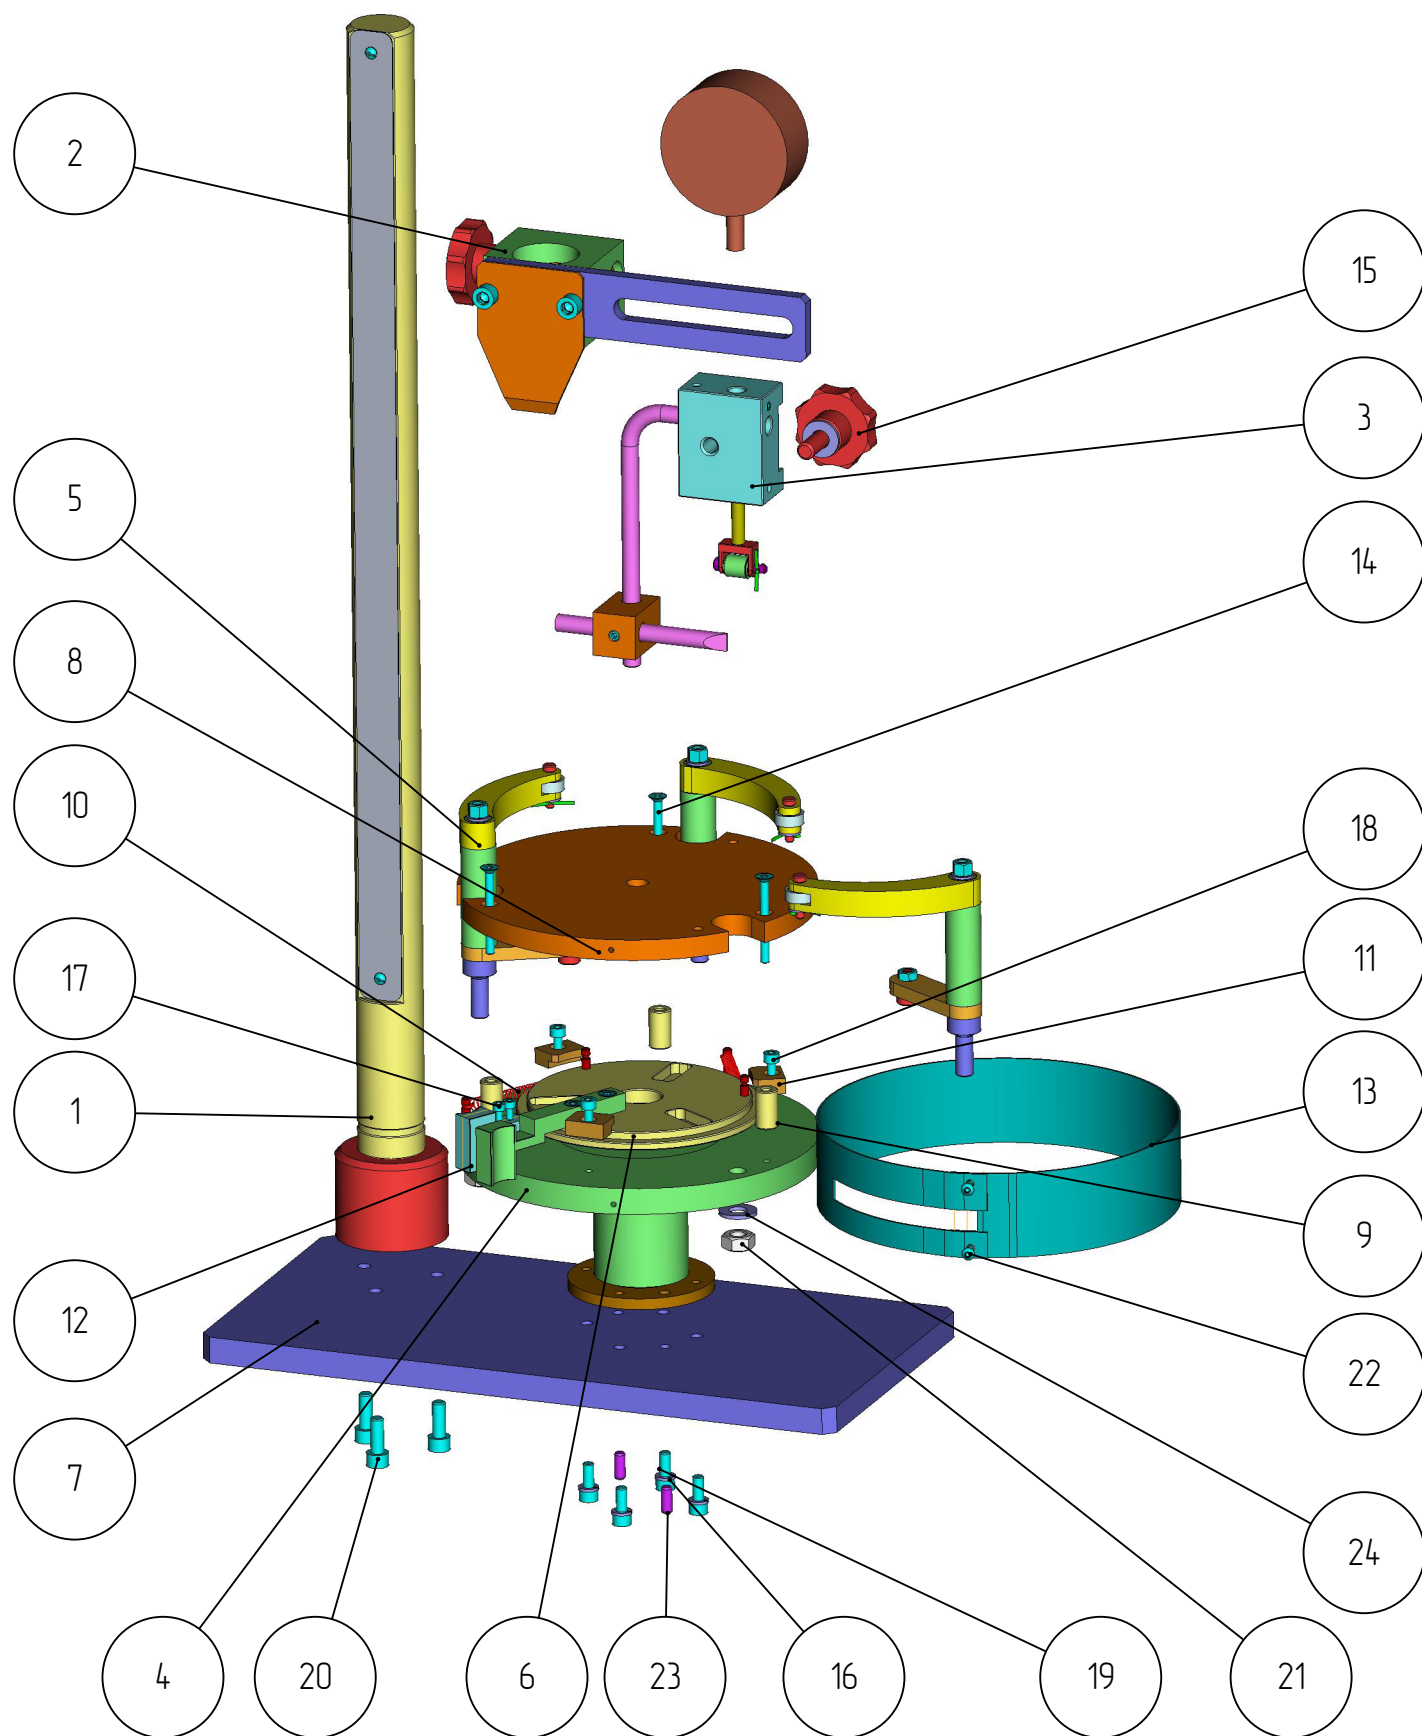

Glass container geometry control device ПКБСТ-400-01-SB



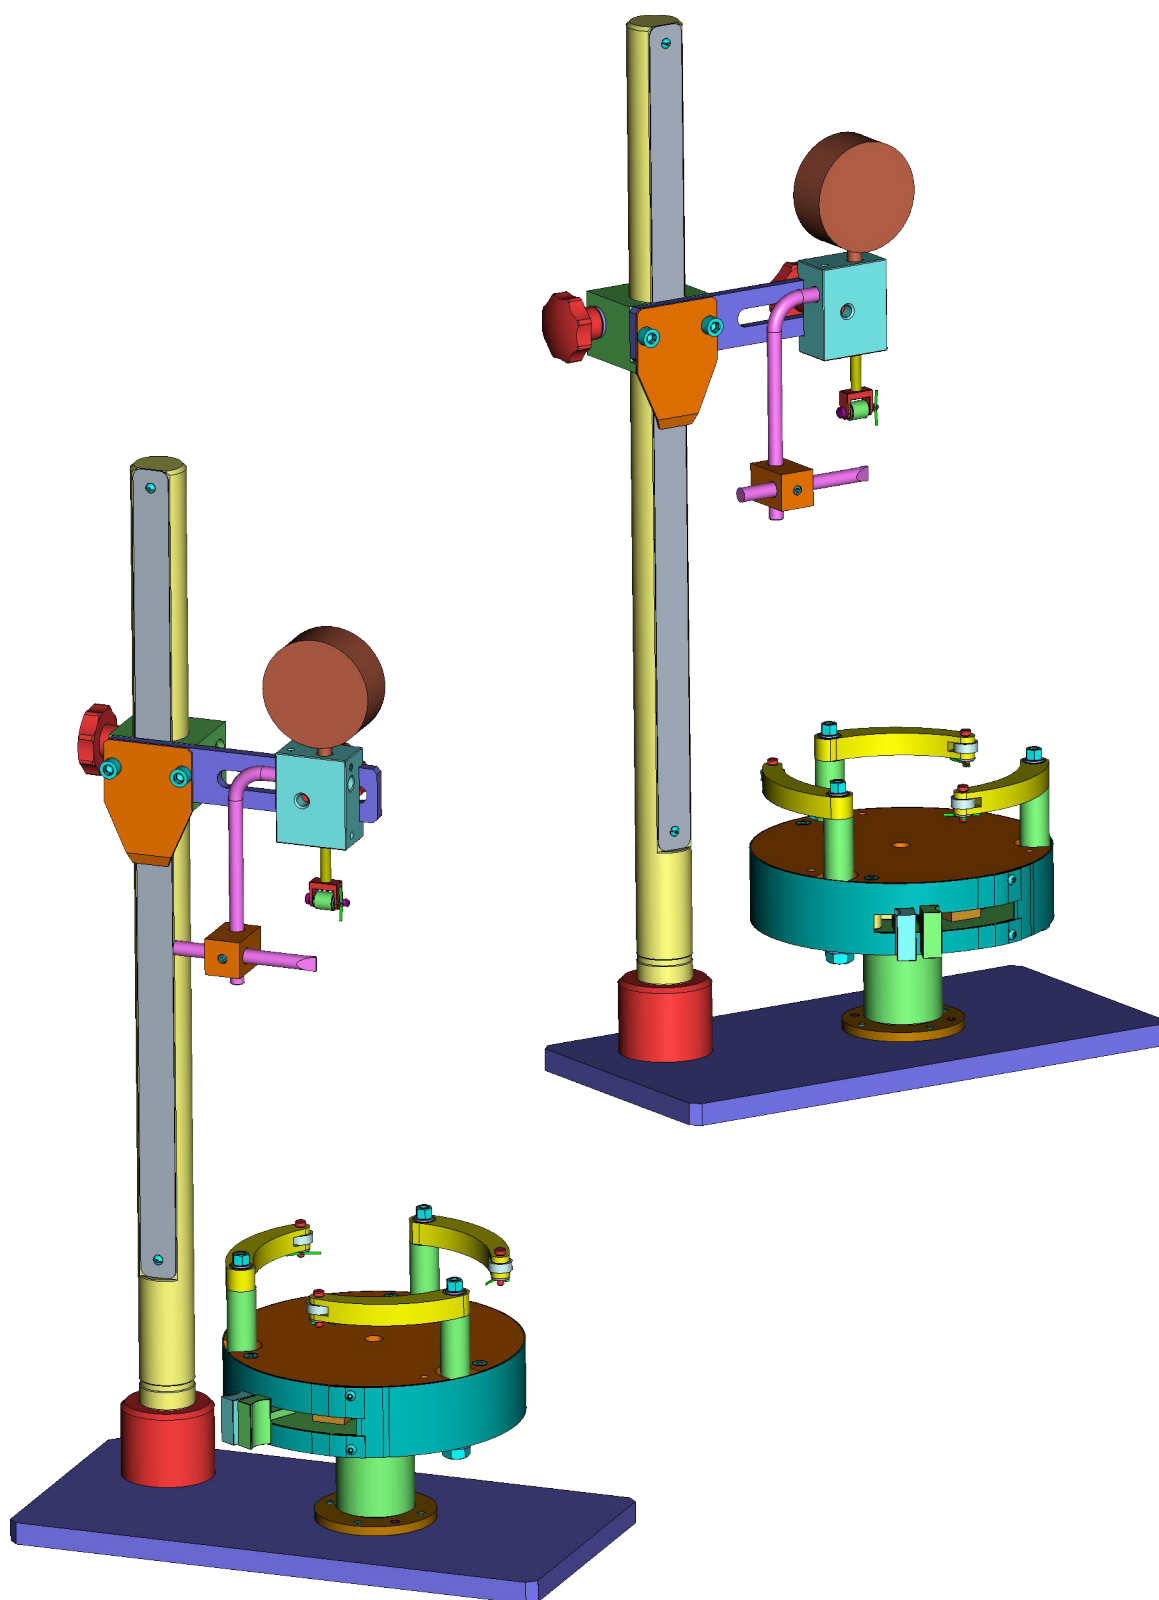


Glass container geometry control device ПКССТ-400-01-SB


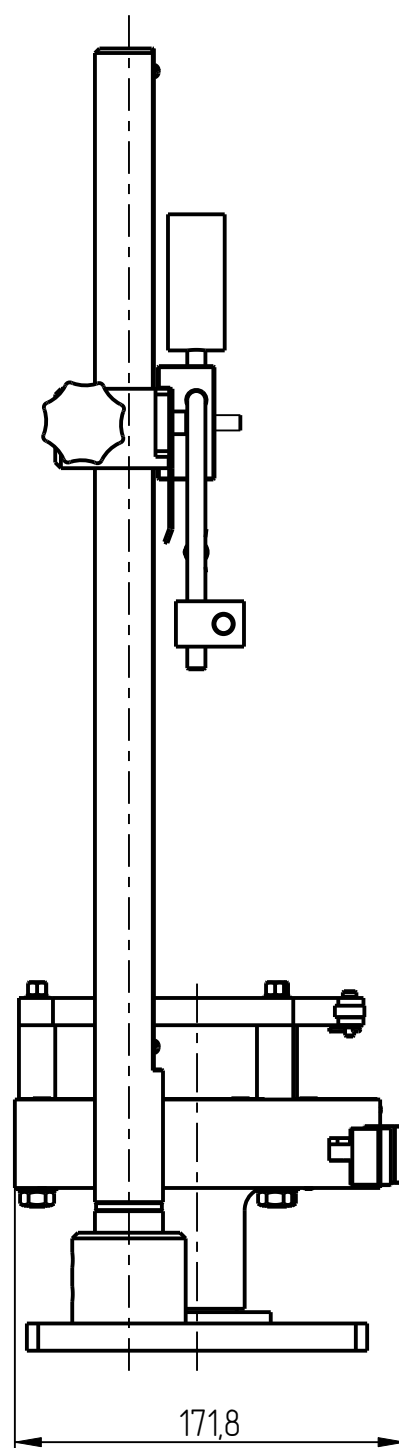
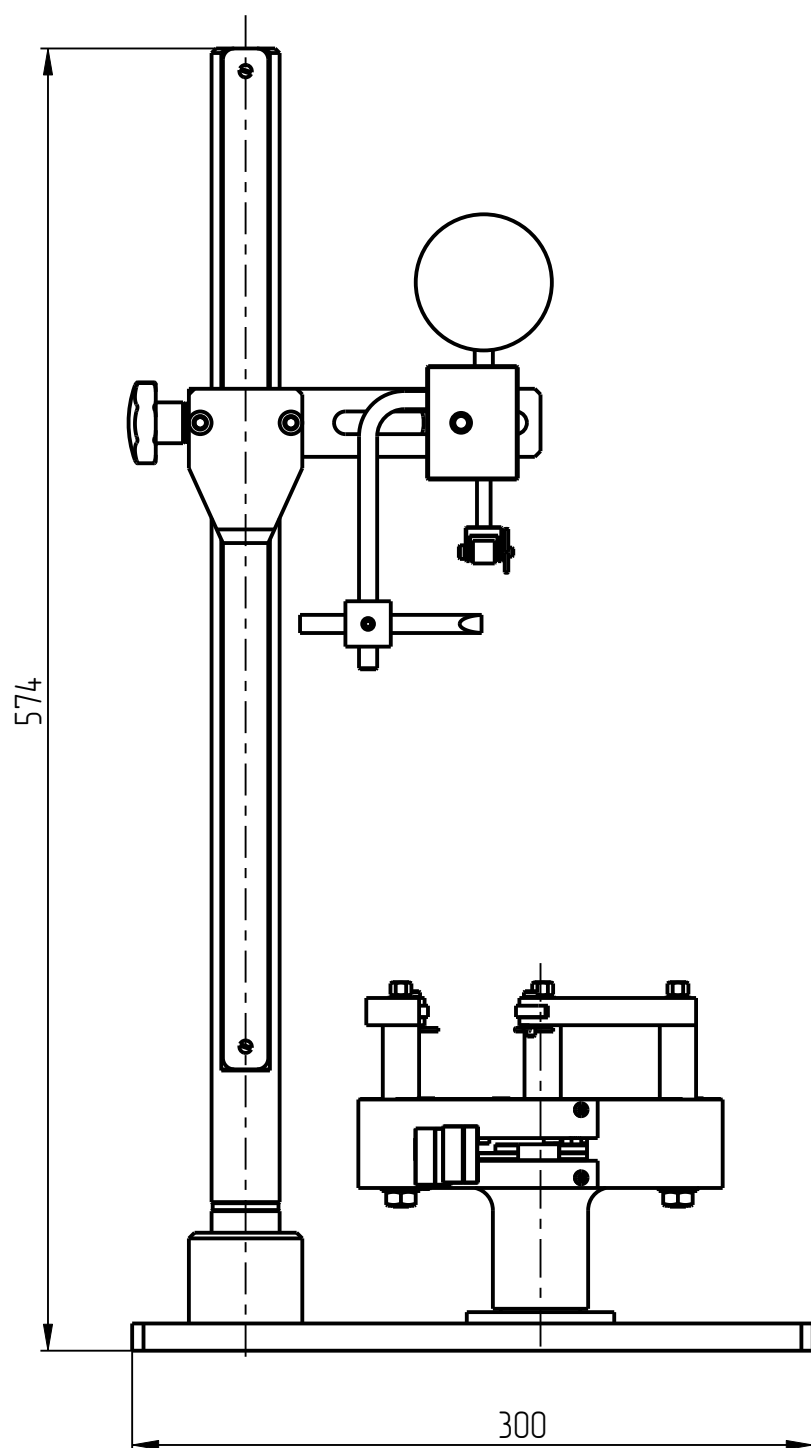


ПКБСТ-400 Glass container geometry control device Specification




№ pos.	Code	Name	Qty
Assemblies			
1	ПКБСТ-400-02	Pillar	1
2	ПКБСТ-400-03	Adjustment unit	1
3	ПКБСТ-400-04	Indication unit	1
4	ПКБСТ-400-05-1	Body	1
5	ПКБСТ-400-05-8-00	Holder	3
6	ПКБСТ-400-05-9	Rotary disc	1
Parts			
7	ПКБСТ-400-01	Main plate	1
8	ПКБСТ-400-05-2	Top disc	1
9	ПКБСТ-400-05-3	Spacer bushing	3
10	ПКБСТ-400-05-5	Spring	2
11	ПКБСТ-400-05-6	Stop	3
12	ПКБСТ-400-05-7	Handle	1
13	ПКБСТ-400-06	Shroud	1
Standard parts			
14	Screw M4x40 DIN7991		3
15	Knob		1
16	Spring washer B5-A4 DIN 127		4
17	Screw DIN 912-M3x14		2
18	Screw DIN 912-M4x10		3
19	Screw DIN 912-M5x12		4
20	Screw DIN 912-M6x16		3
21	Screw ISO 7380-M3x8		2
22	Pin 5Гx12 DIN 6325		2
23	Nut M8 DIN 431		3
24	Washer 8 DIN 125		4

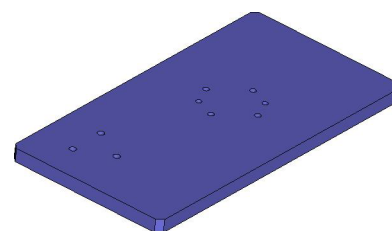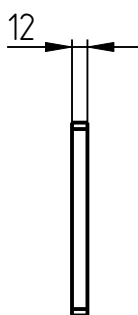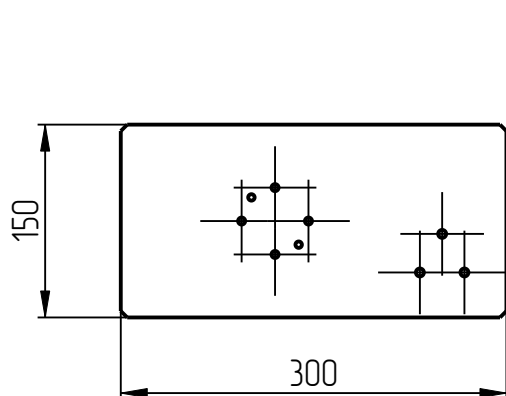



7. Main plate
ПКБСТ-400-01

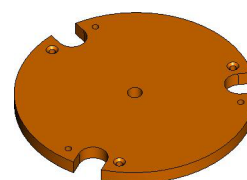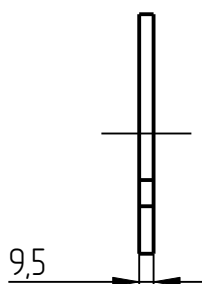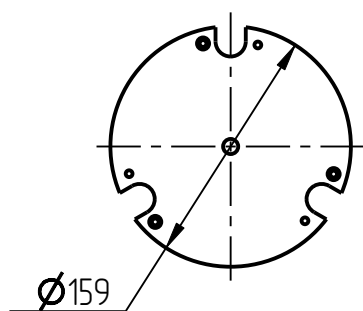




8. Top disc
ПКБСТ-400-05-2

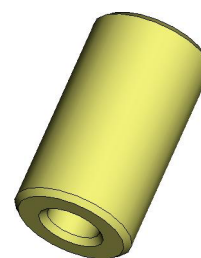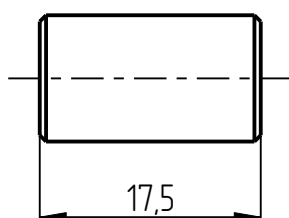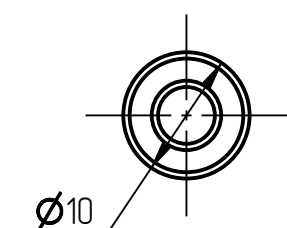




9. Spacer bushing
ПКБСТ-400-05-3

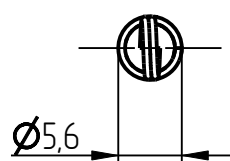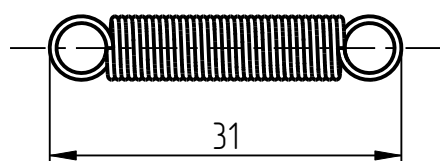




10. Spring
ПКБСТ-400-05-5

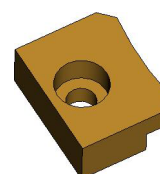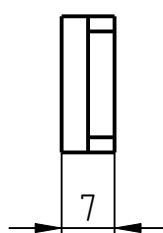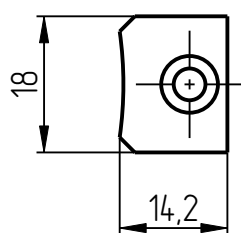

11. Stop
ПКБСТ-400-05-6

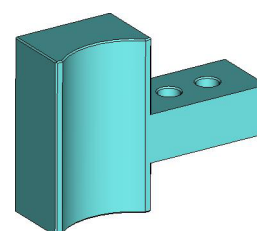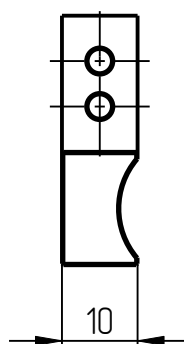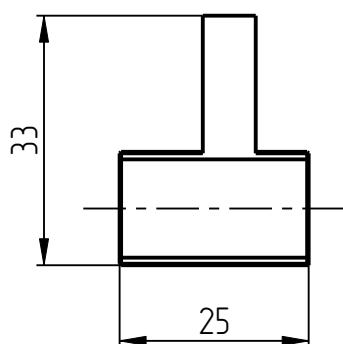


12. Handle
ПКБСТ-400-05-7

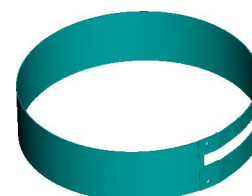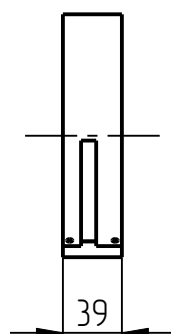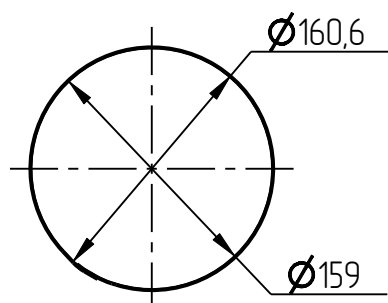

13. Shroud
ПКБСТ-400-06


Pole ПКБСТ-400-02

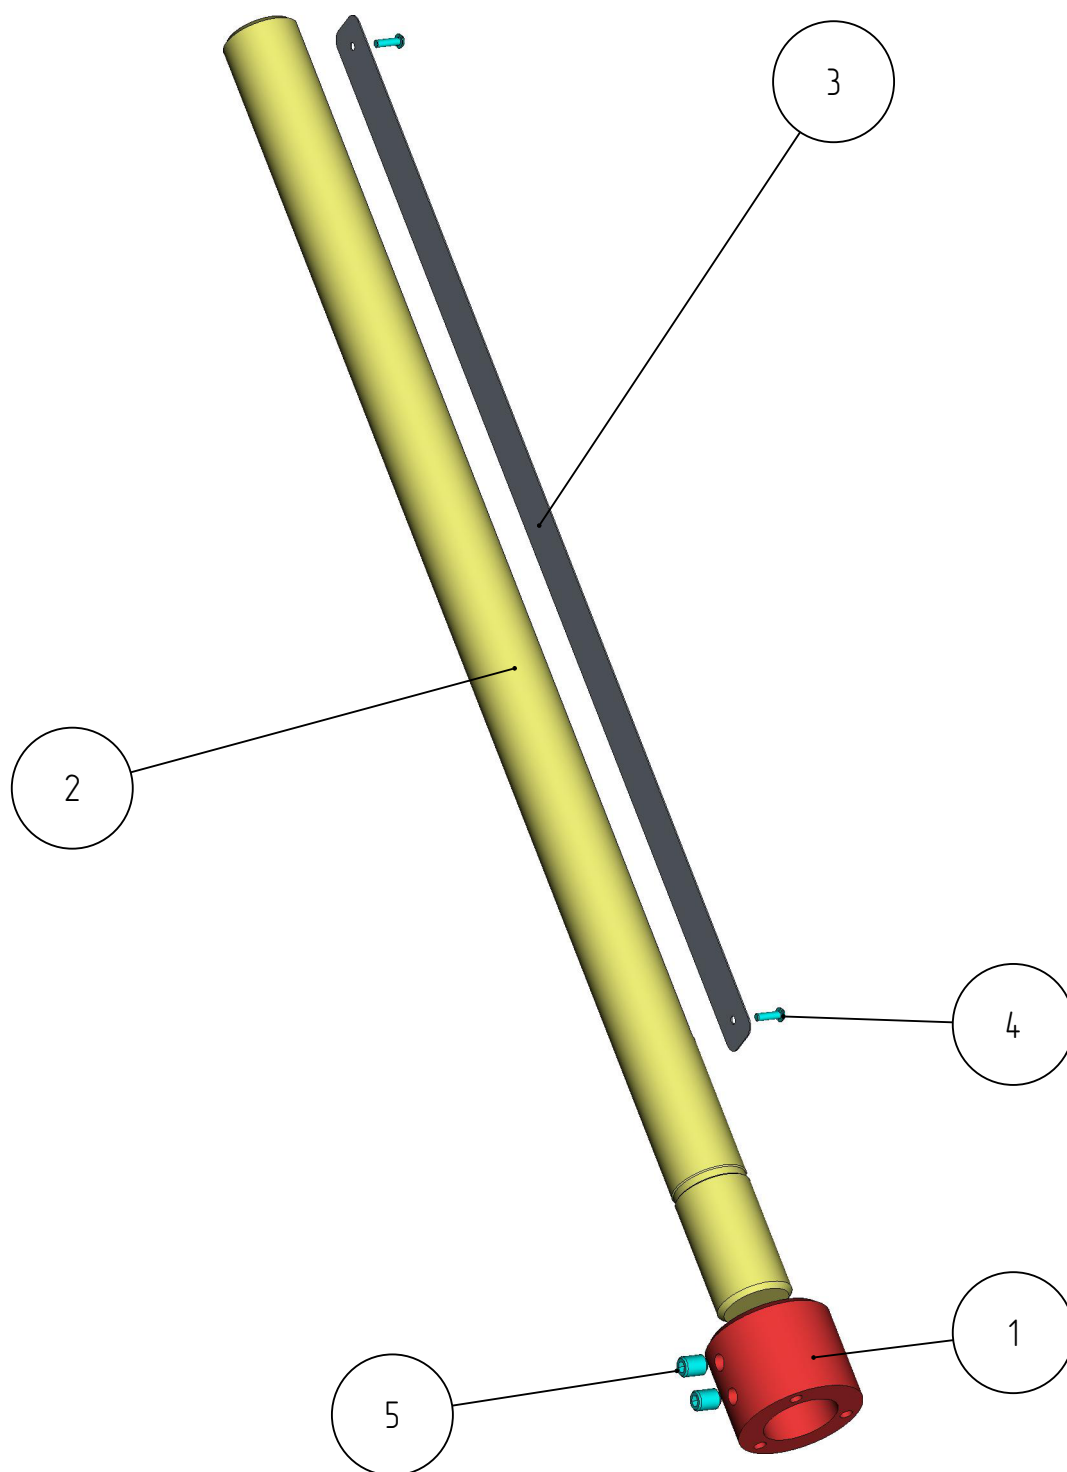

Pole ПКБСТ-400-02
Specification

№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-02-1	Support	1
2	ПКБСТ-400-02-2	Pole	1
3	ПКБСТ-400-02-3	Scale	1
Standard parts			
4	Screw M3x10 DIN 7985		2
5	Screw M8x10 DIN 913		2


Штанга ПКБСТ-400-02

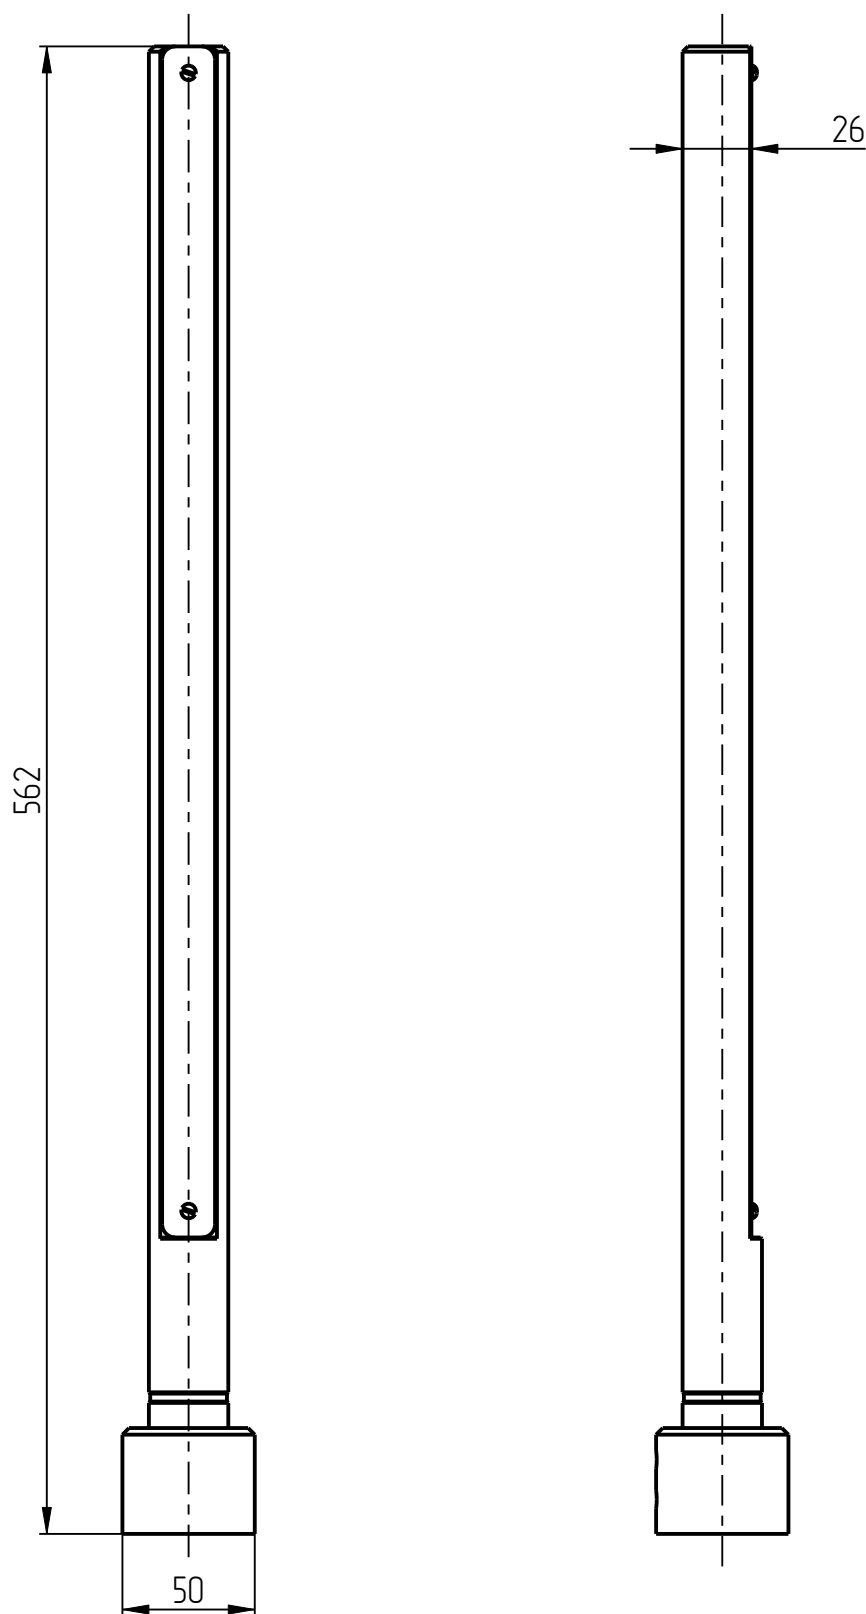


Adjustment unit ПКБСТ-400-03
Specification

№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-03-03	Plate	1
2	ПКБСТ-400-03-1	Box	1
3	ПКБСТ-400-03-2	Adjusting bar	1
4	ПКБСТ-400-03-4	Retaining bushing	1
Standard parts			
5	Knob		1
6	Screw DIN 912-M6x16		2
7	Washer 8 DIN 125		1


Adjustment unit ПКБСТ-400-03

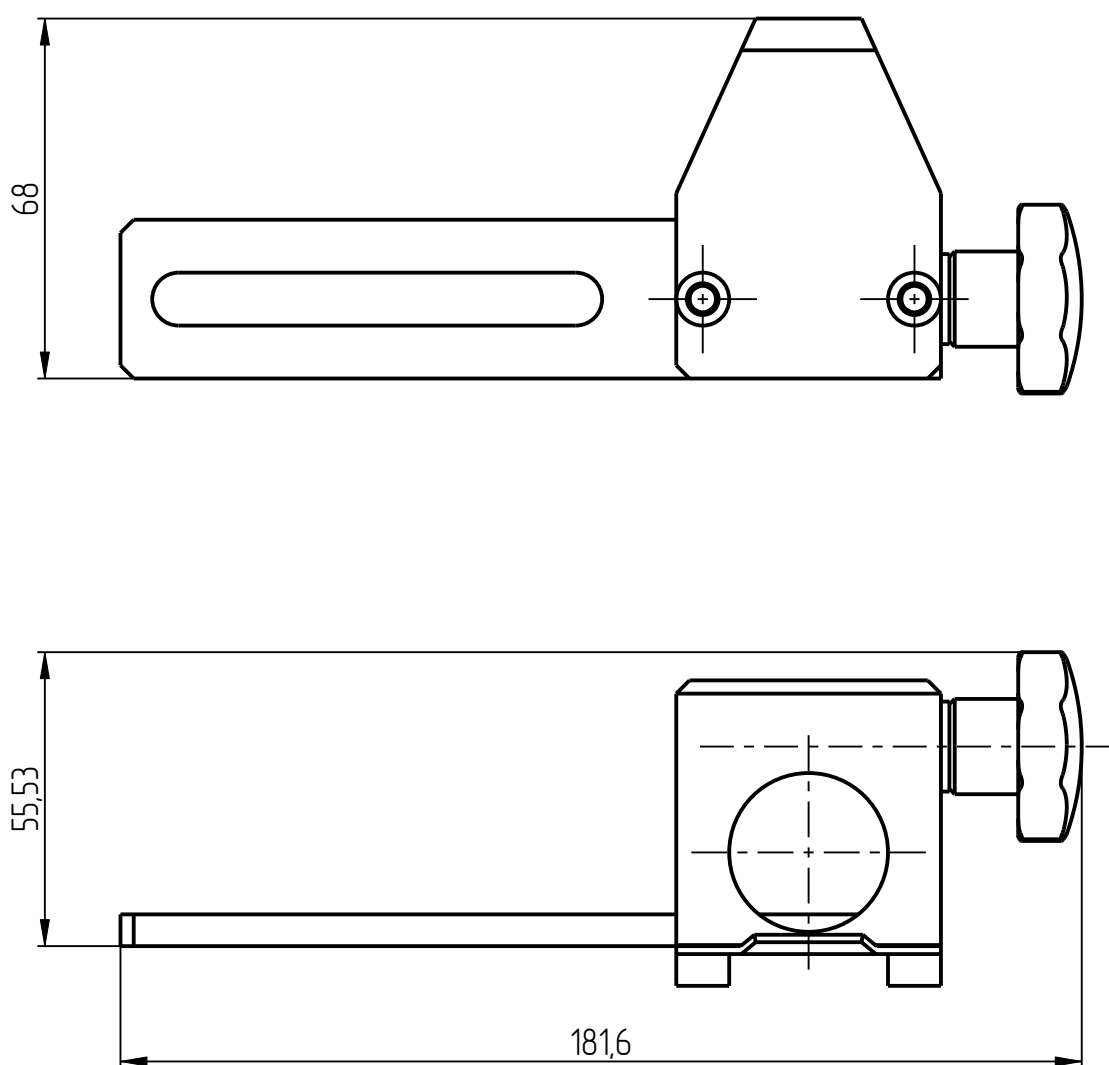

Adjustment unit ПКБСТ-400-03

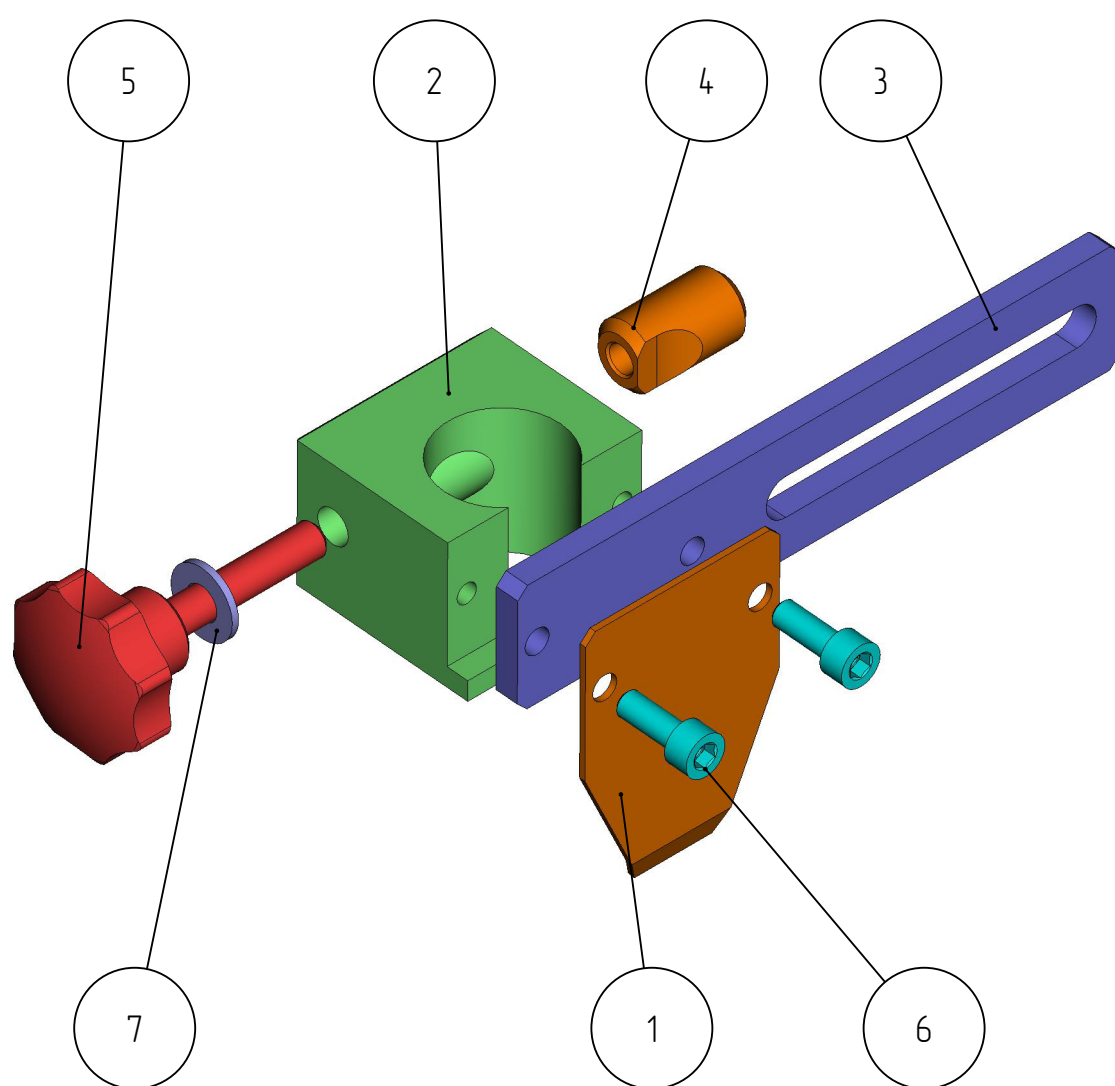




Узел индикации ПКБСТ-400-04

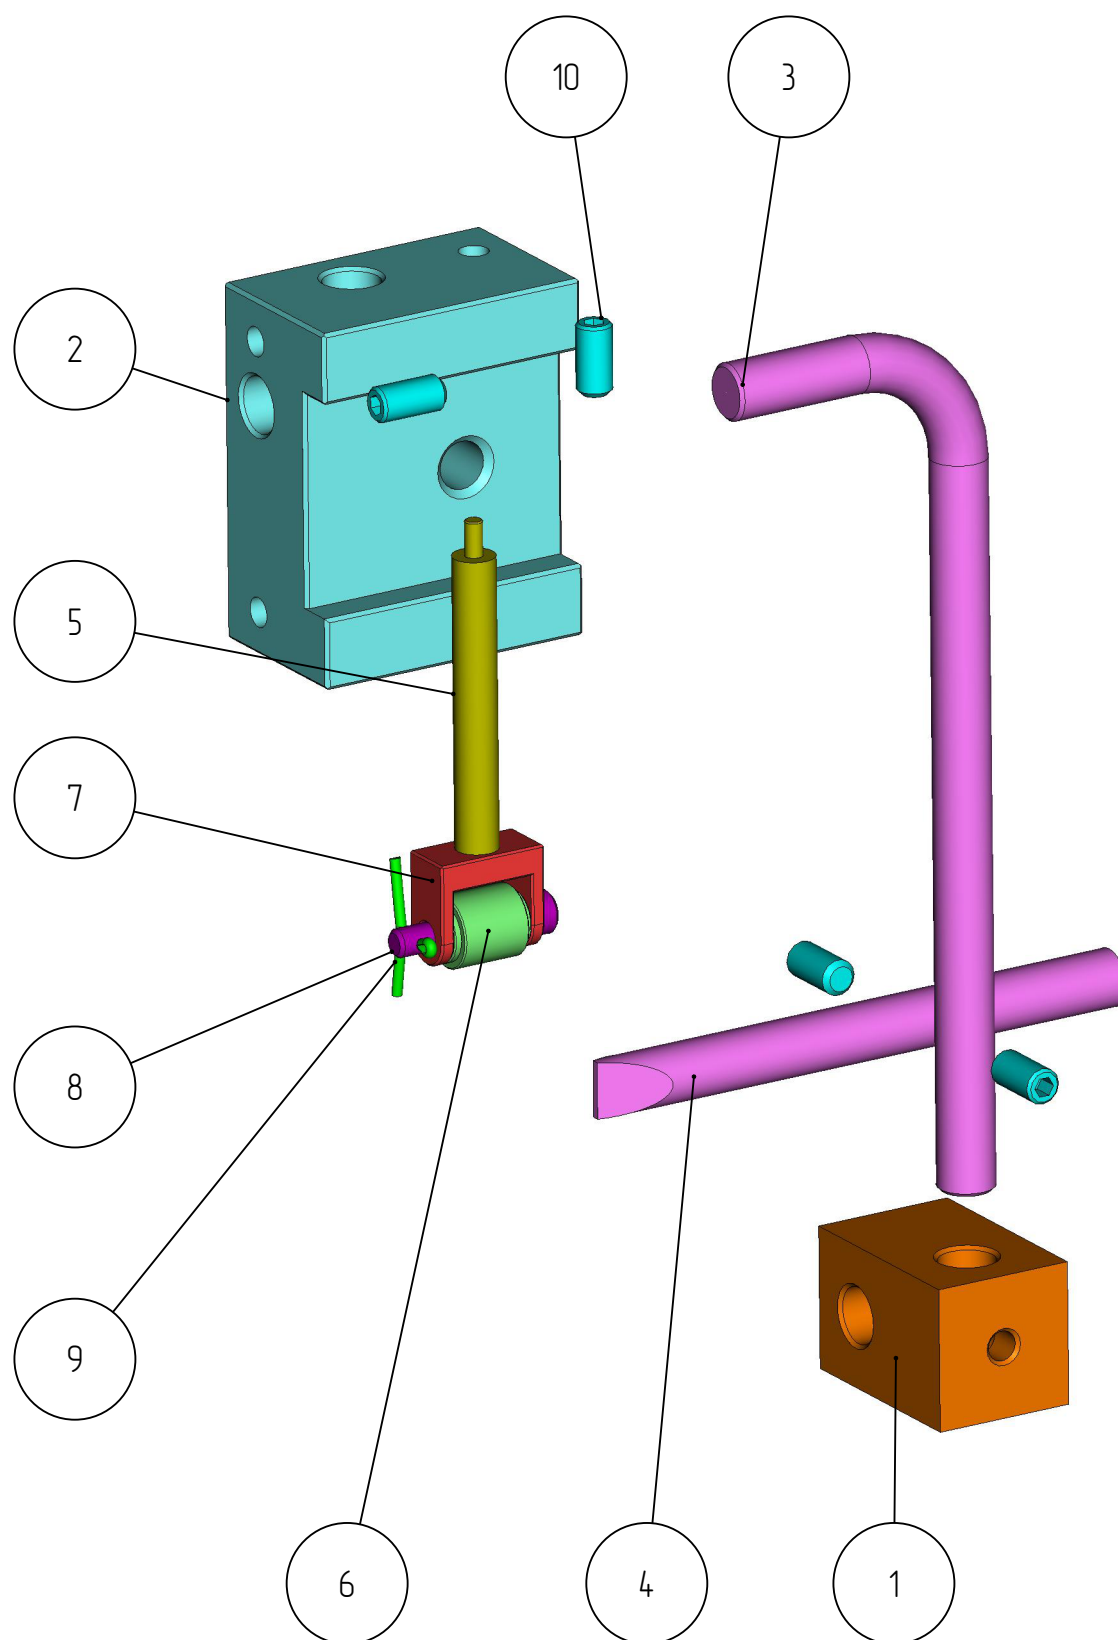




Indication unit ПКБСТ-400-04

Specification




№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-04-03	Cross-piece	1
2	ПКБСТ-400-04-1	Cross-head	1
3	ПКБСТ-400-04-2	Pole	1
4	ПКБСТ-400-04-4	Stop	1
5	ПКБСТ-400-04-5	Pole	1
6	ПКБСТ-400-04-6	Sheave	1
7	ПКБСТ-400-04-7	Clamp	1
8	ПКБСТ-400-04-8	Pin	1
Standard part			
9	Split pin DIN 94-2x12		1
10	Screw M5x10 DIN 913		4

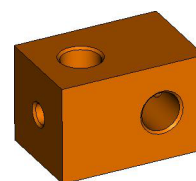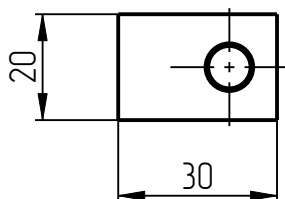



1. Cross-piece
ПКБСТ-400-04-03

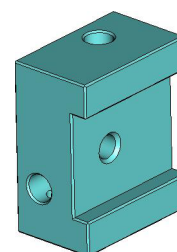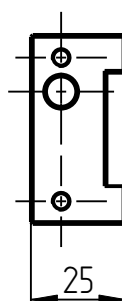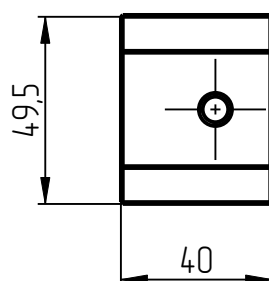



2. Cross-head
ПКБСТ-400-04-1

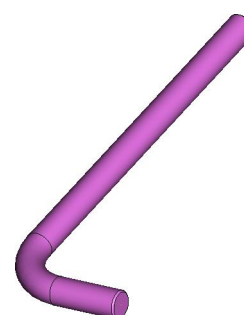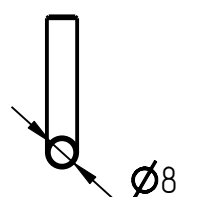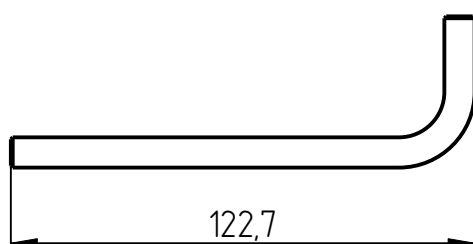


3. Pole
ПКБСТ-400-04-2

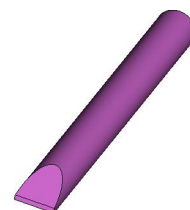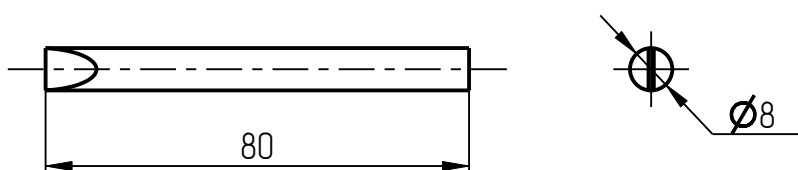




4. Stop
ПКБСТ-400-04-4

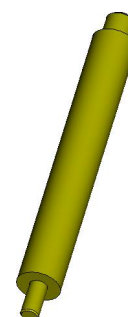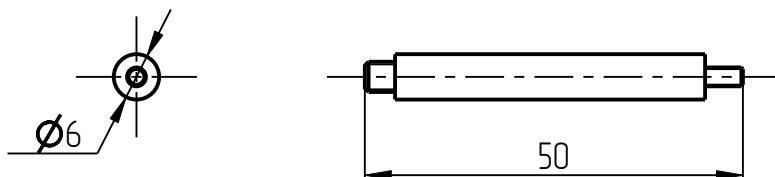



5. Pole
ПКБСТ-400-04-5

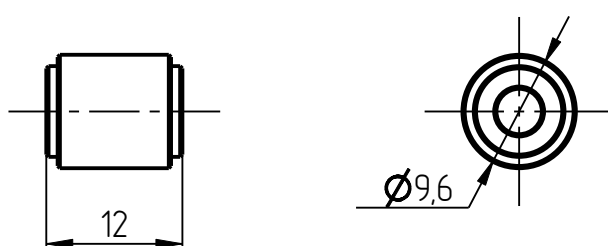

6. Sheave
ПКБСТ-400-04-6

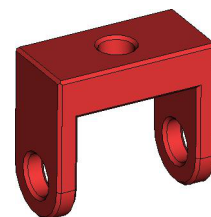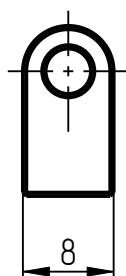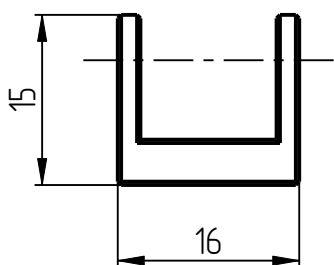


7. Clamp
ПКБСТ-400-04-7

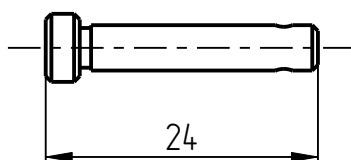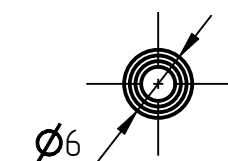




8. Pin
ПКБСТ-400-04-8

Body ПКБСТ-400-05-1



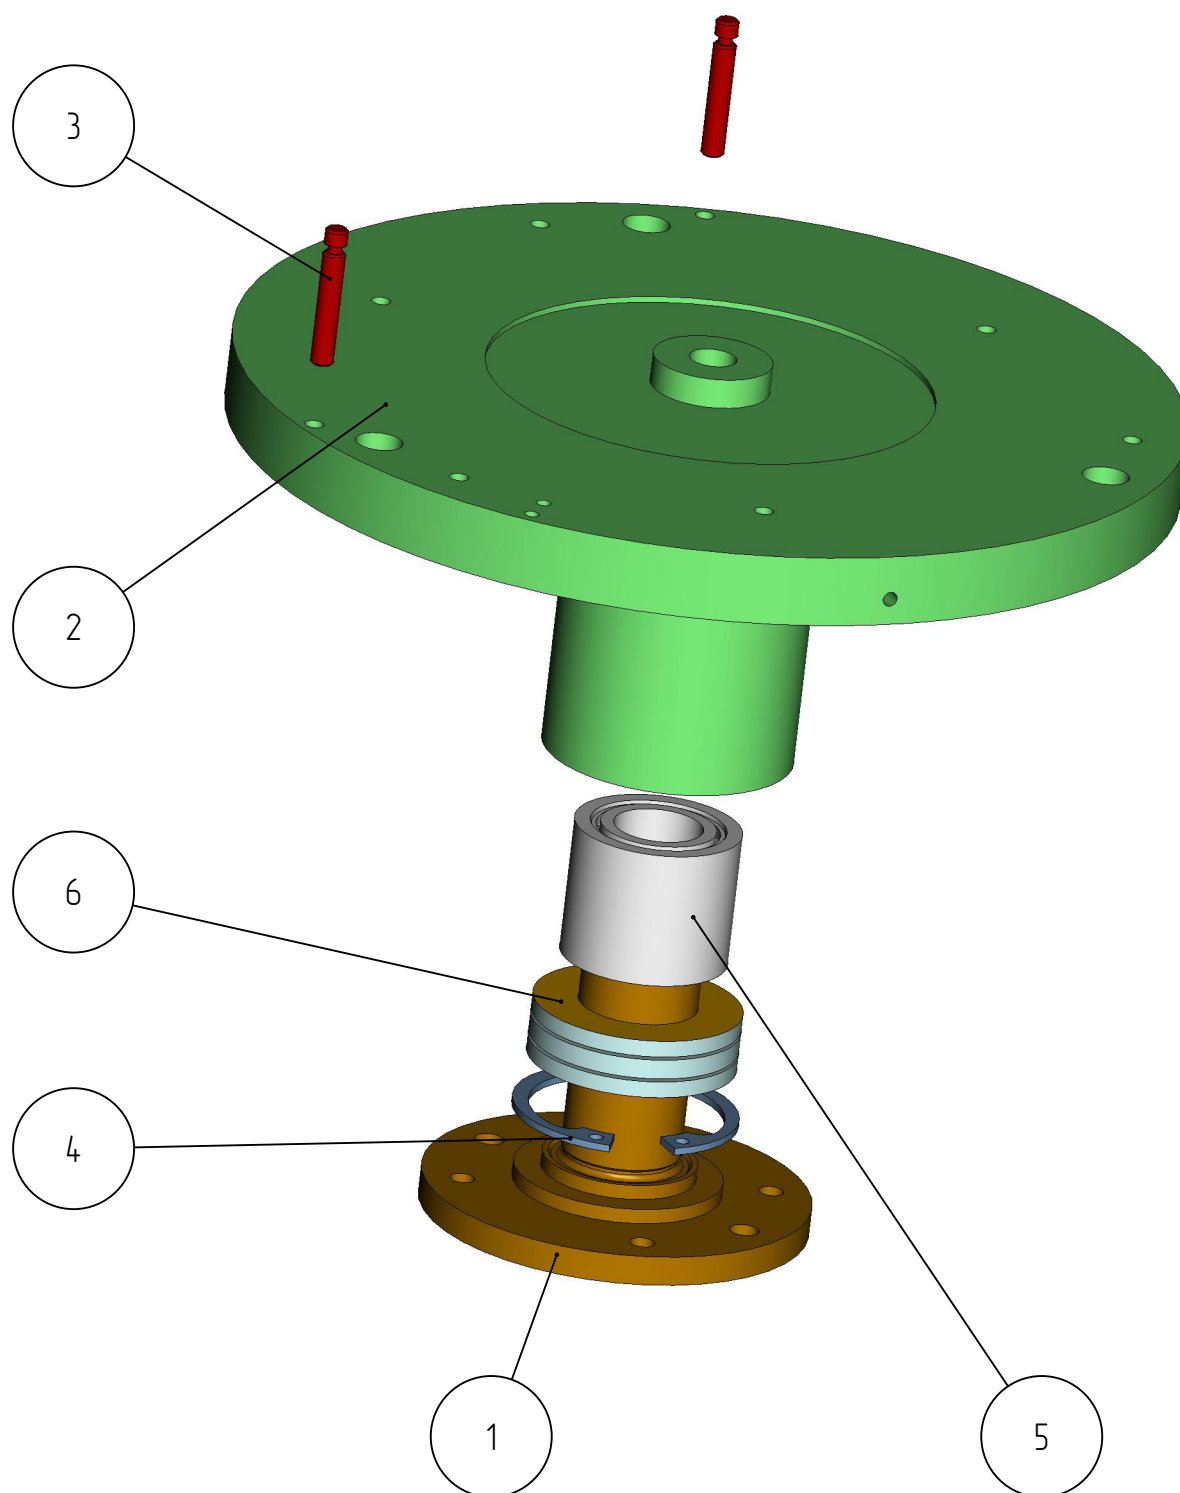


Body ПКБСТ-400-05-1 Specification



№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-05-1_1	Pin	1
2	ПКБСТ-400-05-1_2	Body	1
3	ПКБСТ-400-05-4	Spring retainer	2
Standard parts			
4	Retaining ring 35 DIN 472		1
5	Needle bearing SKF NA 6902		1
6	Bearing 8104 ГОСТ 6874-75		1

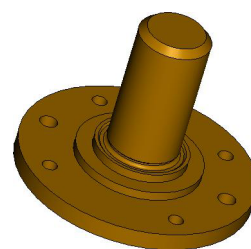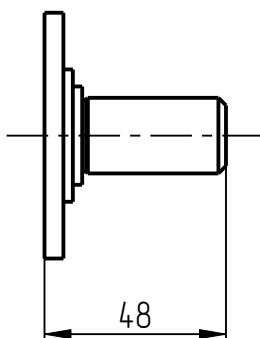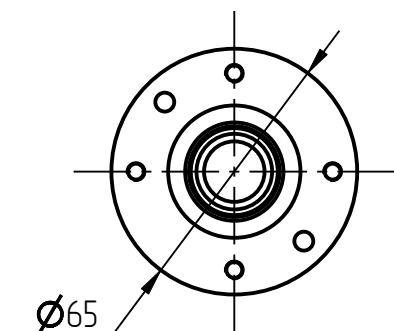

1. Pin
ПКБСТ-400-05-1_1

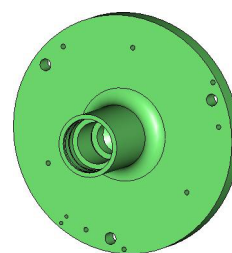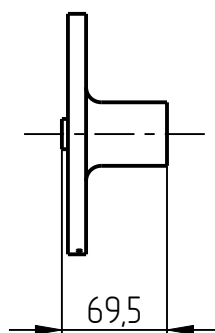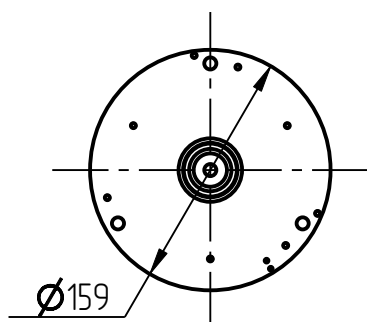


2. Body
ПКБСТ-400-05-1_2

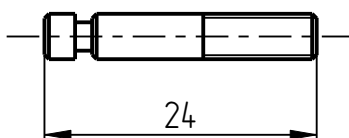

3. Spring retainer
ПКБСТ-400-05-4




Holder ПКБСТ-400-05-8-00

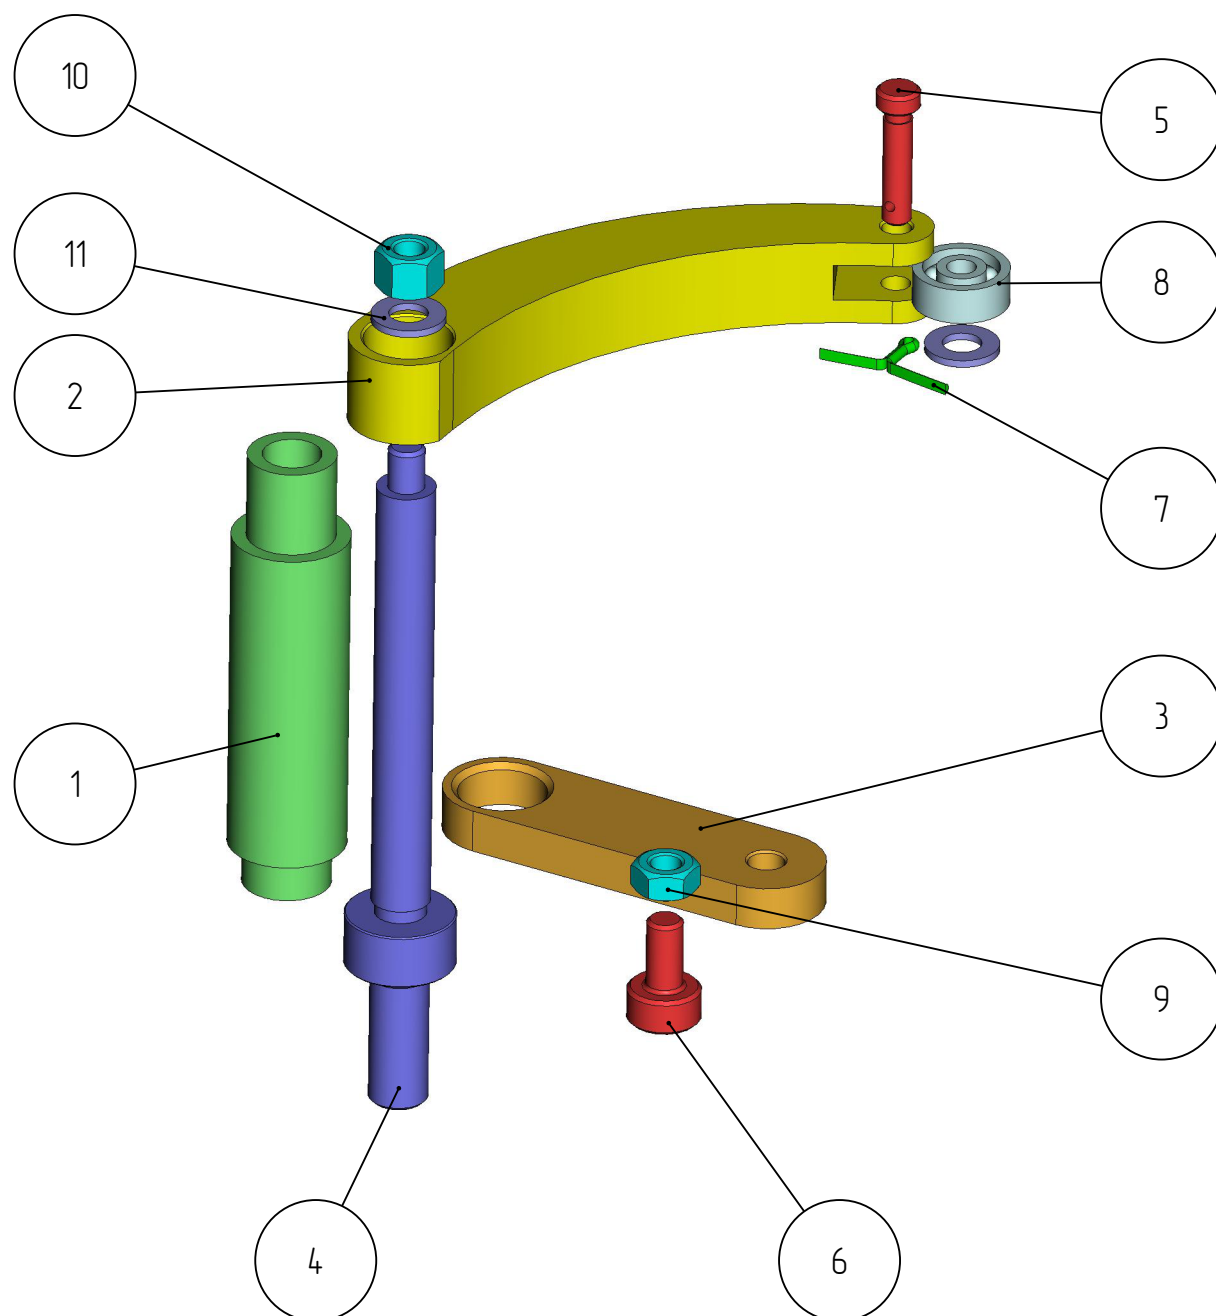




Holder ПКБСТ-400-05-8-00

Specification



№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-05-8-1-1	Bushing	1
2	ПКБСТ-400-05-8-1-2	Top part of lever	1
3	ПКБСТ-400-05-8-1-3	Bottom part of lever	1
4	ПКБСТ-400-05-8-1_2	Lever's pin	1
5	ПКБСТ-400-05-8-1_3	Pin	1
6	ПКБСТ-400-05-8-1_4	Heel	1
Standard parts			
7	Split pin DIN 94-2x12		1
8	Bearing 60024 ГОСТ 7242-70		1
9	Nut M5 DIN 431		1
10	Nut M5 DIN 431		1
11	Washer 5 DIN 125		2

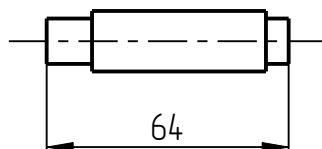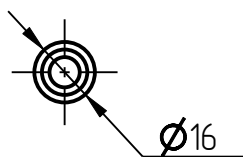




1. Bushing
ПКБСТ-400-05-8-1-1

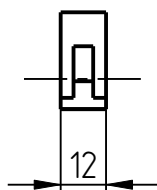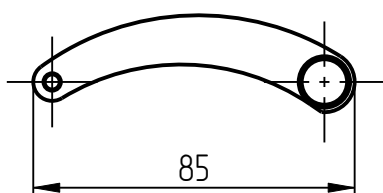




2. Top part of lever
ПКБСТ-400-05-8-1-2

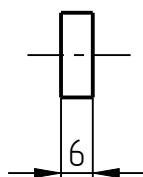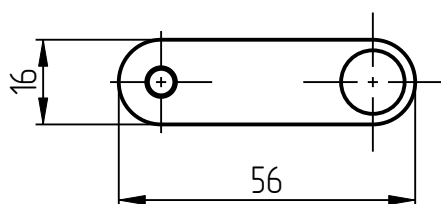




3. Bottom part of lever
ПКБСТ-400-05-8-1-3

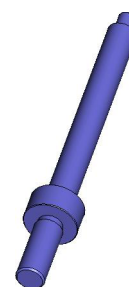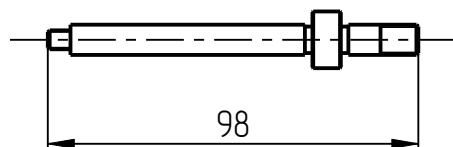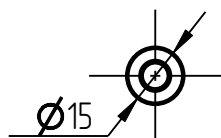

4. Lever's pin
ПКБСТ-400-05-8-1_2

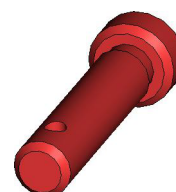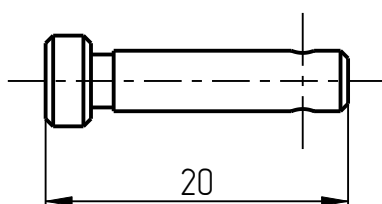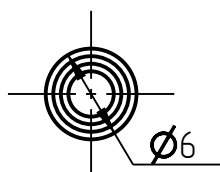


5. Pin
ПКБСТ-400-05-8-1_3

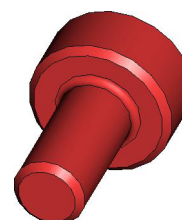
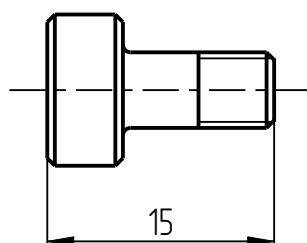
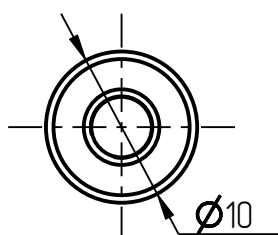


6. Heel
ПКБСТ-400-05-8-1_4




Rotary disc
ПКБСТ-400-05-9

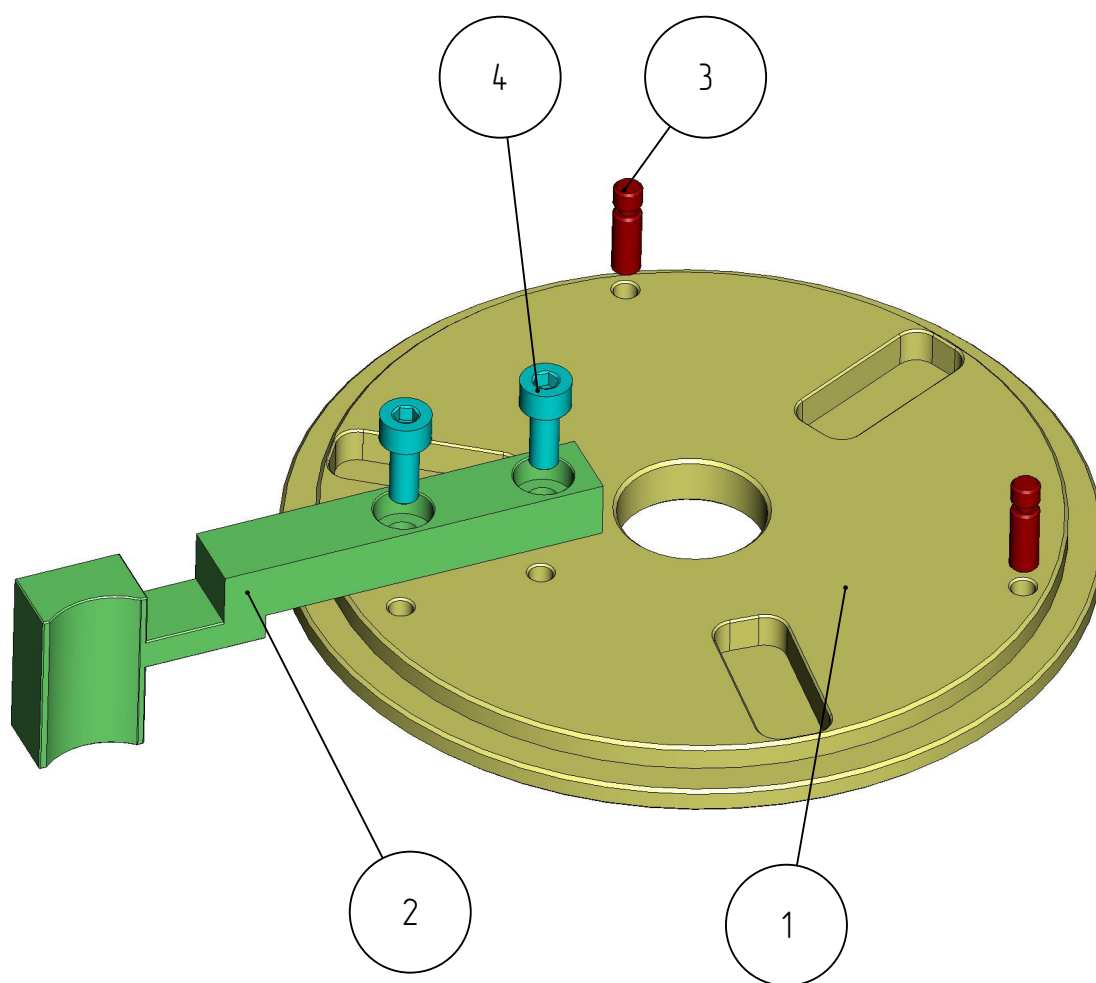




№ pos.	Code	Name	Qty
Parts			
1	ПКБСТ-400-05-9-1	Rotary disc	1
2	ПКБСТ-400-05-9-2	Handle	1
3	ПКБСТ-400-05-9-3	Spring retainer	2
Standard parts			
4	Screw M4x10 DIN 912		2

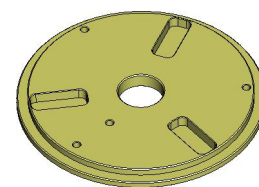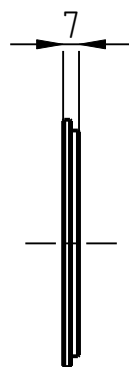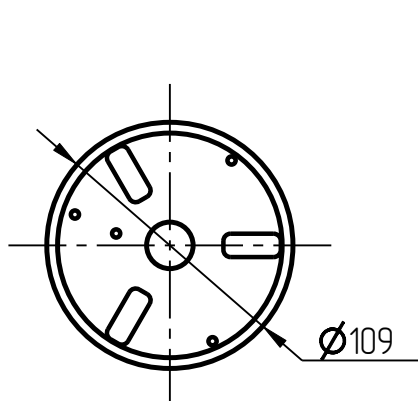

1. Rotary disc
ПКБСТ-400-05-9-1

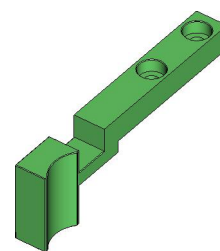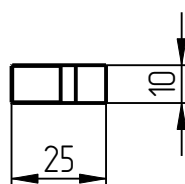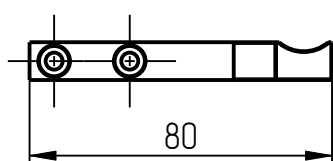

2. Handle
ПКБСТ-400-05-9-2

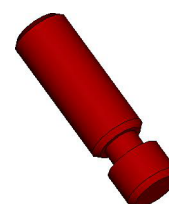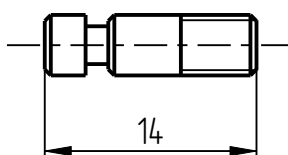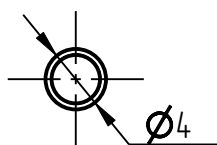

3. Spring retainer
ПКБСТ-400-05-9-3